



ASTON MARTIN

V8 Vantage

1	Introduction
2	Vehicle Security
3	Before Driving
4	Controls
5	Driving
6	Climate Control
7	Audio
8	Car Phone (Option)
9	Bluetooth (Option)
10	Satellite Navigation (Option)
11	Maintenance
12	Specifications
A	Service
B	Assistance
C	Warranty
D	Dealer Directory
E	Alphabetical Index

Whilst every effort has been made to ensure the accuracy of the particulars contained in this Owner's Guide, neither the manufacturer nor the Dealer, by whom this Owner's Guide is supplied, shall in any circumstances be held responsible for any inaccuracy or the consequences thereof.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form, electronic, mechanical, photocopying, recording or other means without prior written permission from Aston Martin Lagonda Limited.

The manufacturer reserves the right to vary specifications without notice in accordance with its policy of continual product improvement.

Produced by the Technical Publications Department
ASTON MARTIN LAGONDA LIMITED

Banbury Road,
Gaydon,
WARWICK
Warwickshire,
CV35 0DB,
England

Telephone (+44) 01926 644300
Fax (+44) 01926 644733

Issue 2 – February 2006
Part Number – 6G33-19A321-HB

Introduction

Contents

Welcome	1.4	Reporting Safety Defects	1.6
Component Location	1.4	Vehicle Provenance.....	1.6
Data Recording.....	1.5		



Welcome

to your new Aston Martin.

This Owner's Guide, along with other publications included in your literature pack, provides information which will enhance your pleasure from owning and driving your Aston Martin.

This Owner's Guide has been designed to explain the vehicle's operation and to make the control of it's system easy to understand and operate.

All new owner's are recommended to carefully study the contents of this Owner's Guide prior to driving.

This Owner's Guide forms part of the essential vehicle equipment for homologation purposes and must remain with the vehicle at all times.

The following Warnings, Cautions and Notes are used within this Owner's Guide to call your attention to specific types of information.

Warnings

⚠ Warning ⚠
Identifies procedures which must be followed precisely to help avoid the risk of personal injury.

Cautions

Provided to indicate procedures which must be followed precisely to reduce the possibility of damage to your vehicle.

Notes

Provided to indicate procedures which will help to avoid difficulties in the operation of your vehicle.

Component Location

All directions for locating components are described as viewed from the driver's seat, i.e. the fuel filler cap indicated on this diagram will be described as 'located at the rear left side of the vehicle'.




Vehicle Identification

The Vehicle Identification Number (VIN) is shown in the left hand corner of the windshield and is recorded as a barcode on the door pillar.



The Vehicle Identification Plate, attached to the right hand suspension strut tower, is model and market dependant:

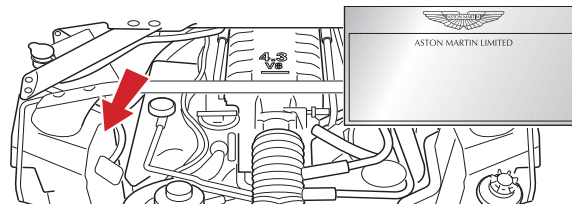

The vehicle identification number is also stamped into the floorpan in the RH side footwell.

To view the vehicle identification number stamped into the floorpan lift the carpet up, from the front, and then lift the sound deadening material.

Data Recording

Computers in your vehicle are capable of recording detailed data, potentially including but not limited to information such as:

- The use of restraint systems including seat belts by the driver and passengers
- Information about the performance of various systems and modules in the vehicle
- Information related to engine, throttle, steering, brake or other system status

Any of this information could potentially include information regarding how the driver operates the vehicle, potentially including but not limited to information regarding vehicle speed, brake, throttle application or steering input. This information may be stored under regular operation, in a crash or near crash event.

This information may be read out and used by:

- Aston Martin
- Service and repair facilities
- Law enforcement or government agencies
- Others who may assert a right or obtain your consent to know such information

Reporting Safety Defects

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Aston Martin Lagonda (North America) Inc. 533 MacArthur Boulevard, NJ 07430-2326.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your Dealer, or Aston Martin Lagonda (North America) Inc.

To contact NHTSA, you may call the Vehicle Safety Hot line toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590.

You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

Vehicle Provenance

Model	e.g. Manual, Automatic Shift Manual (ASM)		
Color	Body Exterior	Interior Trim/ Piping	Interior Veneers
Vehicle Identification Number	As on the VIN plate		

First Owner		Third Owner		Fifth Owner	
Selling Dealer		Selling Dealer		Selling Dealer	
Delivery Date		Delivery Date		Delivery Date	
Second Owner		Fourth Owner		Sixth Owner	
Selling Dealer		Selling Dealer		Selling Dealer	
Delivery Date		Delivery Date		Delivery Date	



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN

Vehicle Security

Contents

Introduction.....	2.2	Alarm Cycle	2.11
Vehicle Key and Remote Transmitter.....	2.2	Panic Alarm.....	2.11
Unlocking the Vehicle.....	2.4	Alarm Options.....	2.12
Locking the Vehicle.....	2.5	Reduced Guard.....	2.12
Master Lock Switch	2.6	Remote Transmitter.....	2.13
Opening the Doors	2.7	Passive Anti-Theft System (PATS)	2.14
Fuel Flap Release	2.7	Personalization.....	2.16
Tailgate	2.8	Menu	2.17
Tailgate Emergency Release.....	2.9		
Deadlocking.....	2.9		
Drive-Away Locking.....	2.10		
Approach Lighting.....	2.10		
Homesafe	2.10		

Introduction

This vehicle is protected by an electronic security system. Two levels of alarm system are available:

- Standard
- High Specification (option) – includes an interior movement sensor and a tilt sensor

Vehicle protection is enhanced by a passive anti-theft system (PATs) which provides engine immobilization if the wrong ignition key is used.

The total vehicle security system includes:

- Remote arming and disarming
- Perimeter sensing
- Remote door, tailgate, fuel flap release lock and unlock
- A guard reduction mode
- Panic alarm
- Alarm siren with battery backup (in markets where audible sirens are permitted)
- Random code encryption to prevent electronic scanning or grabbing of the ignition key fob identity code
- Interior movement sensor (High spec alarm system only)
- Tilt Sensor (High spec alarm system only)
- Passive anti-theft system (PATs) (Engine immobilization)

With the vehicle armed, any attempt to forcibly open a door, the tailgate or the hood will result in full alarm activation.

Vehicle Key and Remote Transmitter

The vehicle is supplied with three keys and two remote transmitters. The key operates the ignition and the door lock, the remote transmitter operates the central locking and alarm systems.

Keep the 'spare' keys and a remote transmitter together and in a safe place.

Do not leave them in the vehicle.

If a key or a remote transmitter is lost, contact your Aston Martin Dealer.




Remote Transmitter

(A) Lock - One step vehicle locking and alarm enable (Refer to 'Locking the Vehicle', page 2.6).

The vehicle will deadlock after 25 seconds.

(B) Unlock - Two step vehicle unlocking and alarm disable (Refer to 'Personalization', page 2.16).

(C) Tailgate Open - Press to enable the tailgate catch (Refer to 'Tailgate', page 2.9).

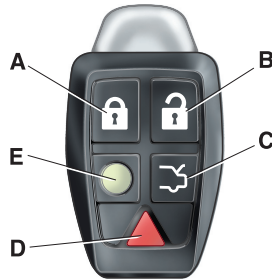

(D) Panic Alarm - Activates / deactivates the panic alarm (Refer to 'Panic Alarm', page 2.12).

(E) Approach Light - Activates the front and rear side lamps (Refer to 'Approach Lighting', page 2.11).



ASTON MARTIN

Unlocking the Vehicle

Using the Remote Transmitter

Stand within 16 ft. (5 m) of the vehicle. Point the remote transmitter towards the vehicle and press the  button once to un-lock the drivers door and disarm the vehicle. The direction indicators will flash twice (Refer to 'Personalization', page 2.16), indicating that the alarm has been deactivated. Press twice to un-lock the passenger door and enable the tailgate catch and fuel flap release switch (Refer to 'Personalization', page 2.16).

The remote transmitter can be programmed to:

- Unlock all doors and enable the tailgate and fuel flap release switches with one press of the  button
- Unlock the drivers door only with the first press of the  button and the rest of the vehicle with a second press.

The vehicle alarm is disabled on the first press of the button.

(Refer to 'Personalization', page 2.16).

As the vehicle is unlocked, the interior lamps will switch on for 5 minutes. The lamps will switch off 30 seconds after doors are closed or when the vehicle is started.

Using the Ignition Key

Turn the ignition key towards the rear of the vehicle and release to centrally unlock the vehicle, enable the tailgate and fuel flap release switches.

If unlocking a door using the ignition key after the vehicle was armed, the alarm will activate. To deactivate the alarm insert the key into the ignition and turn to position 'II' or press the  button on the remote transmitter.

Unlocking from Inside the Vehicle

If Locked with the Remote Transmitter

If the vehicle has been locked using the remote transmitter, deadlocking will be active (Refer to 'Deadlocking', page 2.10).

If the reduced guard switch has been activated, one pull of a door handle will centrally unlock the doors, a second pull of the door handle will open that door (Refer to 'Master Lock Switch', page 2.7).

If the reduced guard switch was not activated before locking the vehicle, passengers will not be able to unlock a door from the inside (Refer to 'Reduced Guard', page 2.13).

If Locked with the Vehicle Key

One pull of a door handle will centrally unlock the doors, a second pull of the door handle will open that door (Refer to 'Master Lock Switch', page 2.7).



ASTON MARTIN

Locking the Vehicle

Using the Remote Transmitter

Ensure that both doors, the tailgate and the hood are closed. Stand within 16 ft. (5 m)) of the vehicle. Point the remote transmitter towards the vehicle and press the  button **once** to lock the doors, disable the tailgate and fuel flap release switches and set the vehicle alarm.


The vehicle will arm and deadlock after 25 seconds.

The direction indicators will flash once (Refer to 'Personalization', page 2.16) as the alarm is activated.

If the vehicle is locked with the tailgate open, the vehicle will lock and arm but deadlocking, tilt (option) and interior movement (option) sensors will not activate. When closing the tailgate deadlocking, tilt (option) and interior movement (option) sensors will activate and the whole vehicle will be locked and armed.

Do not leave the vehicle keys and remote transmitter in the trunk. If the tailgate is closed there will be no access to the contents of the trunk.

If passengers are to remain in the vehicle after it has been locked using the remote transmitter, the reduced guard switch (A) must be activated before locking. This enables passengers to open the doors from inside the vehicle (Refer to 'Reduced Guard', page 2.13).

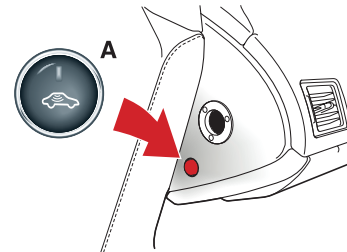

Using the Ignition Key

Turn the ignition key towards the front of the vehicle and release to centrally lock the vehicle, disable the tailgate and fuel flap release switches.

The alarm will not be activated.

Automatic Re-locking

If the vehicle is locked by remote transmitter and then unlocked by remote transmitter but a door or the tailgate is not opened within 120 seconds, then the vehicle will automatically lock and arm again.

Master Lock Switch

Doors, fuel flap and tailgate release switches may be locked / unlocked by pressing the master lock switch.

If the vehicle is locked using the master lock switch, one pull of a door handle will centrally unlock the doors, a second pull of the door handle will open that door.



In the event of a vehicle accident the doors will automatically unlock.

The master lock switch will not operate if the vehicle has been locked from the outside using either the vehicle key or the remote transmitter.


Operation of the master lock switch will override 'Drive away locking'.

(Refer to 'Deadlocking', page 2.10).

Opening the Doors

Push at point (A) and grab the emerging door release. Pull the door release to open the door.

If 'Drive-away' locking is active one pull of the door handle will centrally unlock both doors and a second pull will open that door (Refer to 'Drive-Away Locking', page 2.11).

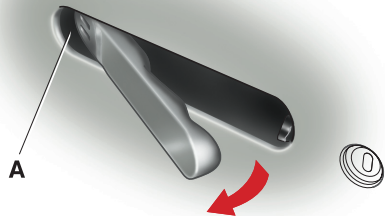

If the door is left open the door puddle lamp will go out after 30 seconds.


If the ignition key is left in the ignition barrel while a door is open an audible warning will sound, until the ignition key is removed.

Fuel Flap Release

Push the fuel flap release switch to open the fuel flap.

Unlock the vehicle using the remote transmitter, to enable the fuel flap release

The fuel flap release is disabled when the vehicle is locked using the remote transmitter or when the vehicle moves off.

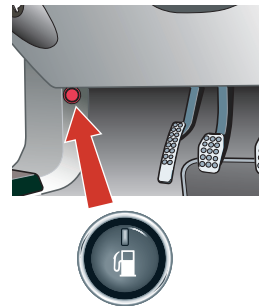


Tailgate

Opening

Press the  button on the remote transmitter to **enable** the tailgate release switches.

If the vehicle is locked and armed the alarm system will be disabled and the direction indicators will flash twice (Refer to 'Personalization', page 2.16). The doors will remain locked.


From inside the vehicle pull back on the tailgate release switch (A)

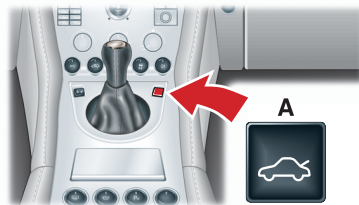

or operate the tailgate catch (B) and lift open the tailgate.

Closing

Grasp the tailgate pull and pull the tailgate down, then push the lid down, ensuring that the tailgate catch engages.

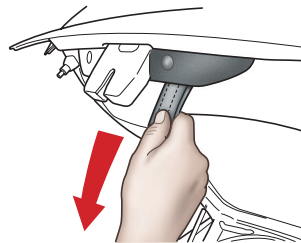

Take care not to slam the tailgate shut.

The tailgate will not be locked.

Always ensure the tailgate is securely closed after use. The trunk interior lamps will remain on for 30 minutes if the tailgate is left partially open.

Lock the tailgate by pressing the  button on the remote transmitter (The direction indicators will flash once (Refer to 'Personalization', page 2.16) as the alarm is activated).

Leaving the Tailgate Open While the Vehicle is Locked

To use the battery conditioner (Refer to 'Battery Conditioner (Option)', page 11.27) the tailgate has to left open (tailgate down but not latched).


If the vehicle is locked, with the remote transmitter, while the tailgate is open, the vehicle will lock and arm (dealocking, tilt (option) and interior movement (option) sensors will not activate).

If the tailgate is then closed (latched) deadlocking, tilt (option) and interior movement (option) sensors will activate and the whole vehicle will be locked and armed.

Do not leave the vehicle keys and remote transmitter in the trunk. If the tailgate is closed there will be no access to the contents of the trunk.

Tailgate Emergency Release

The tailgate can be opened from inside the trunk by pulling the luminous emergency release handle.

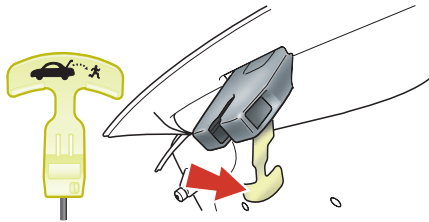

Deadlocking

The vehicle will automatically deadlock after 25 seconds when arming the vehicle using the remote transmitter.

When the vehicle is deadlocked, the doors cannot be opened from the inside by pulling the interior door handle.

To open the doors activate the remote transmitter or use vehicle key.

If a passenger is to remain in the vehicle after locking with the remote transmitter, the reduced guard switch must be activated before locking (Refer to 'Reduced Guard', page 2.13).

Drive-Away Locking

Drive away-locking (Auto Lock) is factory set to active (Refer to 'Personalization', page 2.16).

When drive-away locking is active the central locking system will automatically engage as the vehicle moves off. Both doors and the tailgate will lock. This function prevents unwanted access to the vehicle when stopped at traffic lights etc.

One pull of a door handle will centrally unlock both doors, a second pull of the door handle will open that door.

In the event of a vehicle accident the doors will automatically unlock.

Approach Lighting

When approaching the vehicle the side lamps can be activated by pressing the  button on the remote transmitter.

The time that the side lamps stay on is programmable (Refer to 'Personalization', page 2.16).

Homesafe

When exiting the vehicle and the ignition key has been removed, flash the main beam (pull the LH stalk forwards and release without latching), to active Homesafe. The main beam and rear lamps will stay on for either 30, 60 or 90 seconds (Refer to 'Personalization', page 2.16).

If Homesafe has been activated with the master lamp switch at position 3 (headlamps on), the main beam will remain on. Ensure the master lamp switch is at position 1 before exiting (Refer to 'Master Lamp Switch', page 4.14).

Alarm Cycle

Full Alarm Activation

A siren will sound for a 25 seconds cycle (ten cycles maximum).

Markets where audible sirens are permitted.

The direction indicators flash for 5 minutes after which the security system returns to the armed state.

Markets where visible alarm signals are permitted.

Doors and tailgate will remain locked throughout.

The alarm can be deactivated at any time during activation by pressing the  button on the remote transmitter or by inserting the vehicle key into the ignition and turning to position 'II'.

Panic Alarm

This feature may be used to attract attention while inside or outside the vehicle.

To activate the panic alarm either:

- Press the  button on the remote transmitter for a minimum of 3 seconds
- Press the  button on the remote transmitter twice within 3 seconds

When activated the vehicle horn will sound for 25 seconds and the direction indicators will flash.

After the first three (3) seconds of activation, the panic alarm can be deactivated by pressing the  button on the remote transmitter.

If the  button is not pressed the panic alarm will cease to sound after 25 seconds.

Alarm Options

Interior Movement Sensor


When the vehicle alarm system is activated the interior movement sensor will sense movement inside the vehicle. If movement is detected it will activate the vehicles alarm system (Refer to 'Reduced Guard', page 2.13).

Tilt Sensor

When the vehicle alarm system is activated the tilt sensor will sense if the vehicle is tilted i.e., if the vehicle is being raised on a jack. If vehicle tilt is detected it will activate the vehicles alarm system (Refer to 'Reduced Guard', page 2.13).

Reduced Guard

When guard reduction is activated deadlocking, interior movement (option) and tilt (option) sensors are disabled. This allows a passenger to open the doors from the inside by pulling the interior door handle and a passenger or animals to be left in the vehicle without activating the security system.

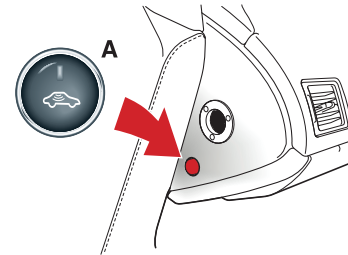

If a passenger is to remain in the vehicle after it has been locked using the remote transmitter, the reduced guard switch (A) must be activated before locking. This will allow a passenger to open the doors from inside the vehicle.

With the ignition key in the '0' or '1' position or within 60 seconds of removing the ignition key the reduced guard switch can be activated.

The ignition key must have turned from position 'II' first.

The switch will show red when reduced guard is active.

Reduced guard remains active until the ignition key is inserted and turned to position 'II'.

Remote Transmitter

Battery Replacement

When the remote transmitter battery is low the warning 'Remote Battery Low Voltage' will show in the message centre right.



Do not press the operating buttons during battery replacement. If the coding is disrupted, it will be necessary to have your Aston Martin Dealer re-programme the remote transmitter.

Take care not to damage upper electrical contacts in battery compartment.

Battery type: CR2032 three volt battery x1.

Tools required: Allen Key (2 mm)
Small Phillips Screwdriver.

1. Remove the small grub screw (allen key head) and withdraw the key holder.
2. Remove a second grub screw and then part the two halves of the remote transmitter.

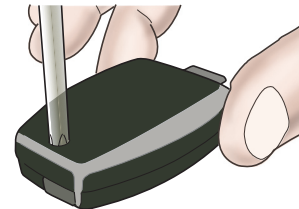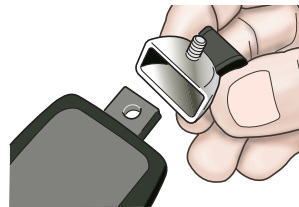


3. Replace the battery (+ve side down).

Finger marks will reduce battery life. Avoid touching the flat surfaces of the battery and wipe the battery clean before installation.



4. Re-assemble the remote transmitter.
Ensure that the grub screw correctly secures the leather key holder.
5. Test the alarm system 'arm' and 'disarm', using the remote transmitter from a range of approximately 16 ft (5 m).

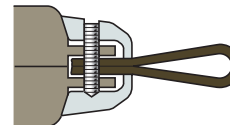

Passive Anti-Theft System (PATS)

PATS is a fully automatic engine immobiliser.

In the event of loss of one of the ignition keys, duplicate ignition keys can be created and programmed from the other ignition key by your Aston Martin Dealer.

Two coded ignition keys are provided with the vehicle. These ignition keys fit both the door locks and the ignition lock.

To ensure a trouble-free signal exchange between the ignition key and the vehicle, **do not** cover the ignition key head with any metal object (e.g. metal ignition key tags or another ignition key).




Starting the Engine

When the alarm system is disarmed and the vehicle ignition key is turned in the ignition lock, the PATS controller sends a signal to the ignition key. The ignition key must respond with a valid ignition key code before engine start will be enabled. If a valid code is received, the ignition system will operate normally.

If the ignition key code is not received, or is invalid, engine start remains disabled.

PATS Status

The PATS system state is shown by the red lamp on the instrument cluster (A).

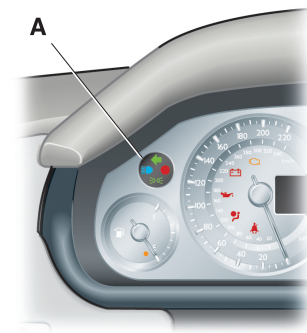

Ignition	Action (Valid code)
Ignition turned 'On'	Lamp illuminates for three seconds.
Ignition turned 'Off'	Lamp will flash.
Ignition turned 'Off' and ignition key removed.	Lamp will flash periodically for five minutes or until the vehicle is locked using the remote transmitter.

Fault Mode

If the status lamp continues flashing when the ignition is turned on, the vehicle will remain immobilised.

Should this situation arise try turning the ignition off then on. If this is unsuccessful try the other ignition key. If successful, source a replacement for the faulty ignition key. If problems persist with both ignition keys, consult your Aston Martin Dealer.

Personalization

A number of remote transmitter functions can be personalized.

The functions are set by using the Infotainment screen.

(1) Enter - Select in the menu, activate a selection.

(2) On / Off - Infotainment centre On / Off

(3) Menu - Opens the main menu.


(4) Exit - Scroll back in the menu, cancel a selection.

(5) Screen - Presents options, menus and information.

(6) Scroll buttons - Scroll up or down in the menus

With the ignition at position 'II' and the Infotainment centre on, press **Menu**. Select Car Settings...

From Car Settings... scroll to the required setting. Press **Enter**. Use the **Scroll** buttons to make a selection and press **Enter** to accept.

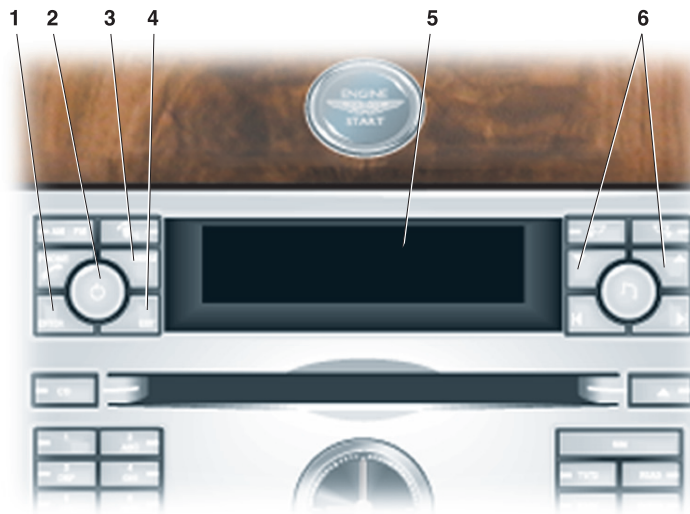

Menu

Car Settings...

- Lock confirm. light
 - On* / Off
- Unlock confirm. light
 - On* / Off
- Doors auto lock
 - On / *Off
- Doors unlock...
 - All doors*
 - Driver door, then all

- Approach light duration...
 - 30* / 60 / 90 seconds
- Homesafe light duration...
 - 30* / 60 / 90 seconds
- Information...
- VIN number...

* Default setting

** Market area dependant



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN

Before Driving

Contents

Checks Before Driving.....	3.2	Interior Storage	3.20
Seat Comfort Control	3.2	Trunk Cover	3.21
Steering Wheel	3.4	Accessory Socket.....	3.22
Mirrors.....	3.4	Ashtray and Cigar Lighter (Option).....	3.22
Seat Belts	3.6	Electric Windows	3.23
Child Safety	3.10	Reading Lamps.....	3.24
Child Seats.....	3.11	Coat Hooks.....	3.24
Passenger Airbag Deactivation.....	3.11	Umbrella (Option).....	3.25
Tether Anchor.....	3.13		
Automatic Locking Retractors (ALR).....	3.14		
Airbags.....	3.16		

Checks Before Driving

Inspect your vehicle to make sure that everything is according to the information and specifications in this Owner's Guide.


Outside the vehicle:

- Visually check the road wheels, nuts and tires
- Check that all windows, mirrors and lamps are clear and unobstructed
- Check that the tailgate, hood and fuel filler flap are securely closed
- Check the operation of all lamps

Inside the vehicle:

- Check that the doors are securely closed
- Check that the seat, mirrors and steering wheel adjustments are correct
- Check that all gauges and indicators are reading correctly (Refer to 'Controls', page 4.1)
- Check that the seat backs are in an upright position and that the seat latch is engaged
- Check that all occupants have fastened their seat belts

Seat Comfort Control

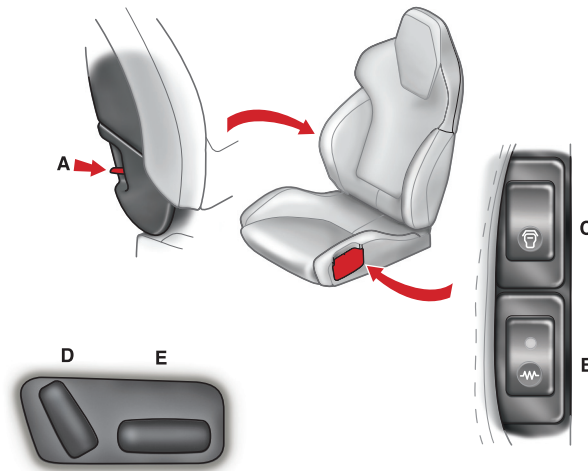

⚠ Warning ⚠
Do not attempt to adjust the seat whilst driving.


The ignition must be at position 'II' before the heated seat (option) and lumbar support can be operated.

(A) Tilt - Raise the lever and tilt the seat forwards and backwards.

(B) Heated Seat (Option) - Press On or Off. The heater is thermostatically controlled and maintains a constant seat temperature until either the heater is switched off or the ignition is switched off.


(C) Lumbar Support - Press either '+' or '-' to increase or reduce lumbar support.

(D) Seat Back Angle - Increases or decreases the angle of the seat back.

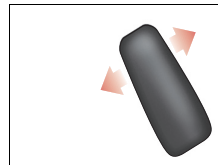


(E) Seat Base Control -

Seat forwards or rearwards




Raise / lower the seat base (drivers seat only).


Front.

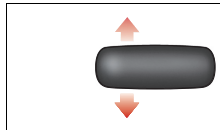

Rear.

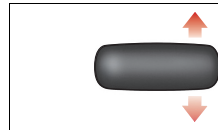

Raise front and rear together
(drivers seat only)

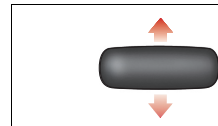

Before Driving

V8 Vantage


Steering Wheel

Rake and Reach

Rake and Reach are adjusted by using the release lever (A).

⚠ Warning ⚠
Do not adjust steering wheel whilst driving.

Pull the release lever downwards and manoeuvre the steering wheel to the required position.

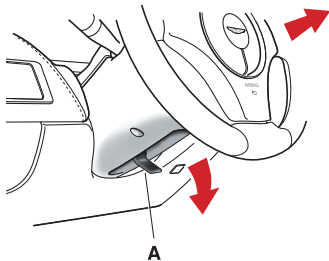

Hold the steering wheel in the required position and lock it by pulling the release lever up.

⚠ Warning ⚠
Ensure that the steering column is fully locked in position. The rake and reach release lever is must be fully up, in line with the steering column.


Mirrors

Interior Rear View Mirror

Adjust on its ball mounting until a satisfactory rear view is obtained.

(A) - Normal position.

(B) - Dipped position. Use to avoid dazzle from headlamps of following vehicles.

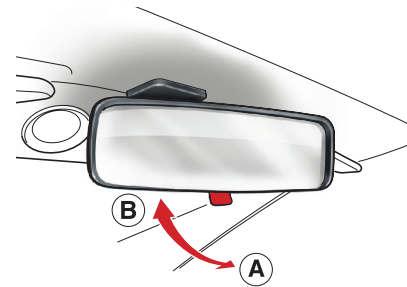


Door Mirrors

The ignition must at position 'I' or 'II' before the door mirrors can be adjusted.

To adjust the door mirrors select the left or right mirror (B). Then move the joystick (A) up / down / left / right to adjust the selected mirror.

When the heated rear windshield is activated the heaters in the door mirrors will activate for 12 minutes.

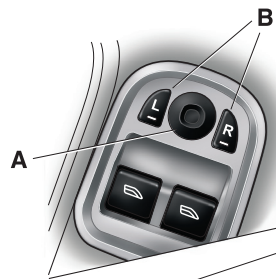

Power Fold Door Mirrors (Option)

The 'Power Fold Mirror' function rotates the door mirror assemblies until folded flat against the doors.


To move to the:

Fold Position - Switch the ignition to position 'I' or 'II'. Press down and release the left and right hand mirror select switches (B). The mirrors will motor to the 'fold-in' position.

Driving Position - Switch the ignition to position 'I' or 'II'. Press down and release the left and right hand mirror select switches (B). The mirrors will motor to the driving position.

Vanity Mirror

A vanity mirror is located in each sun visor.

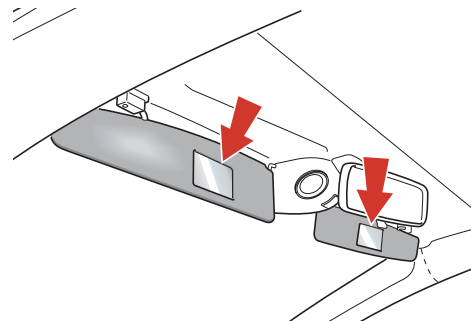

Seat Belts

Warning

Wearing your seat belt is crucial to your safety. Not wearing a seat belt increases chance of serious injury or death in the event of an accident.

Warning

Be sure that you and your passenger always fasten their seat belt and use them properly even though airbags are provided.

Warning

Reclining the seat back decreases protection provided by the seat belt in the event of a crash. Adjust the seat back to an upright position.

Warning

Make sure that the seat back is locked in place. Otherwise it could move forward in the event of a sudden stop or crash and cause injury.

Warning

Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders; wearing the lap section of the belt across the abdominal area must be avoided.

Warning

Never place shoulder portion of belt under your arm or behind your back.

Warning

Always remove from your pockets rigid or breakable objects, i.e. spectacles or a mobile phone, which could be trapped under seat belts, possibly causing injury in the event of an accident.

Warning

Expectant mothers should seek medical advice on the most appropriate way to wear the seat belt.

Warning

Seat belts must be kept clean so that the retractor works correctly. Ensure that belt webbing is not twisted, looped, frayed or obstructed in any way. If in doubt about condition or operation of seat belt installation, have it checked by your Aston Martin Dealer.

⚠ Warning ⚠ <i>No modifications or additions should be made by the user which will either prevent seat belt adjusting devices from operating, or prevent seat belt assembly from being adjusted to remove slack. Never install accessories on your seat belts.</i>	⚠ Warning ⚠ <i>Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.</i>	⚠ Warning ⚠ <i>Each belt must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupants lap.</i>
⚠ Warning ⚠ <i>Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.</i>	⚠ Warning ⚠ <i>Belts should not be worn with straps twisted.</i>	⚠ Warning ⚠ <i>When installed, the seat belt webbing must not contact any sharp edges which could abrade or cut the webbing during normal use or in an accident. If necessary, the webbing must be protected.</i>
	⚠ Warning ⚠ <i>It is essential to replace the entire seat belt assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.</i>	

This vehicle is installed with two, three point, inertia reel seat belts.

Items 1, 2 and 3 indicate the three points of the seat belt. Item 3 is also the location of the belt buckle.

The inertia belt reels will automatically tension the belts to provide security with comfort. In the event of a collision or during severe braking, the belt reels will lock.



* Market Dependant

*The seat belt warning lamp will illuminate (for approximately six seconds) when the ignition is at position 'II' if the driver's seat belt is not fastened. An audible warning will sound at the same time.

Seat Belt Fastening

When parked on an incline, the seat belt may lock as it is withdrawn. This is not a fault. If the mechanism locks, release the belt tension and then pull the belt very gently to avoid operation of the inertia lock.

Pull out the seat belt, drawing the tongue over the shoulder and across the chest.


On the outside of both front seats is a seat belt location flap. This maintains the seat belt at shoulder height when the seat belt is released.



Push the tongue into the belt buckle latch until a positive click is heard.

Pull upwards on the diagonal belt to ensure secure latching and to remove all slack from the belt.


Finally, double check that the lap belt is installed snugly, low down across the hips, and that there are no twists.

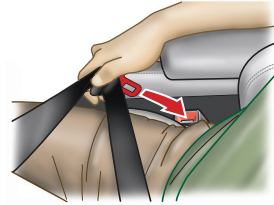

If it is necessary for an occupant to adjust their seat or seating position during a journey, the belt tension might be disturbed. The occupant should therefore (as soon as it is safe to do so) gently pull down the shoulder run of the seat belt to create some slack and then immediately release it to re-tension the belt for the new seating position.

Seat Belt Unfastening

Depress the button on the buckle. While holding the seat belt tongue allow the belt to slowly retract to its stored position.

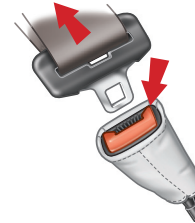

Seat Belt Fastening (Child)

Ensure there is no slack in the webbing and the restraint fits the child snugly across the rib cage and hips. These are the parts of the body most able to take the force of impact.

The lap strap should pass across the top of the child's thighs, bearing on the pelvis, not on the abdominal area.

⚠ Warning ⚠

An infant or child that is not properly restrained can be seriously injured or killed in a crash. Seat belts are designed for adults and larger children; infants and smaller children must be restrained in an approved child safety seat.

Pre-tensioner and Load Limiting Systems

For optimum protection, the driver and passenger seat belts are equipped with pre-tensioner and load limiting systems.

In most moderate frontal or near frontal accidents, the front airbag and pre-tensioner systems will deploy simultaneously.

In some moderate frontal or near frontal accidents, only the pre-tensioner system will deploy.

The pre-tensioners take up slack in the seat belts as the airbags are expanding. The load limiting system releases belt webbing in a controlled manner to reduce belt force on the occupant's chest.

Child Safety

A child, regardless of age, should always be restrained when travelling in a vehicle.



Warning

Do not allow children to travel in a vehicle without a child seat. An appropriate child seat or harness should always be used.





Warning

Each seat belt assembly must be used by only one occupant. It is dangerous to put a seat belt around a child being carried on the occupants lap.

Warning Labels

The following warning labels (market dependant) are located on the sun visors and on the end of the dash (passenger side).

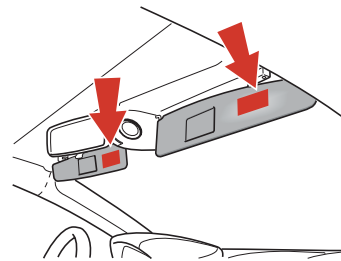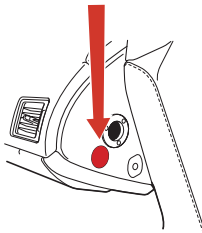

Child Seats

Aston Martin does not recommend any child seats for this vehicle **which require the use of the vehicle seat belt.**

This vehicle provides LATCH bars, a top tether and a passenger airbag deactivation switch for the installation of child seats (Refer to 'LATCH Installation', page 3.12).

Warning

Do not seat a child aged 12 or younger, or weighing 79 lb. (36 kg.) or less in this vehicle without an appropriate child seat or booster cushion (Refer to 'LATCH Installation', page 3.12).

Warning

Before installing a child seat, the passenger airbag must be deactivated (Refer to 'Passenger Airbag Deactivation', page 3.11).

Passenger Airbag Deactivation

Warning

Before installing a child seat, the passenger airbag must be deactivated.

Warning

The passenger airbag deactivation switch is installed only for use when a rearward facing child restraint system or infant restraint system is installed in the right front outboard designated seating position.


Warning

Unintentional deactivation of the passenger airbag is dangerous. In an accident, the passenger will not be properly protected. Serious injuries or even death could occur.

The passenger seat side impact airbag is also deactivated when the passenger airbag is deactivated.

To Deactivate the Airbag

Insert the ignition key into the passenger airbag deactivation switch and turn clockwise to the 'Off' position. Remove the key.

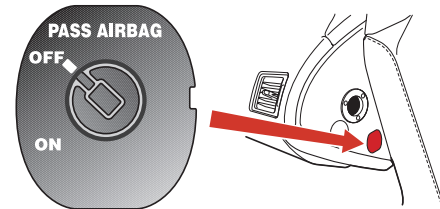


Ensure the airbag deactivation indicator light **remains illuminated** when the ignition is in the 'On' position.



To Activate the Airbag

Insert the ignition key into the passenger airbag deactivation switch and turn anticlockwise to the 'On' position. Remove the key.

When the ignition switch is turned to the 'On' position ensure that the airbag deactivation indicator light **illuminates for six seconds then goes off** (Refer to 'Passenger Airbag Deactivation', page 3.18).

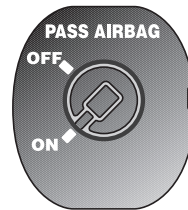

⚠ Warning ⚠

Never place a child in a child seat or on a booster cushion in the passenger seat if the passenger airbag is active.

Failure to follow the advice given above can endanger the life of the child.

LATCH Installation

⚠ Warning ⚠

An unsecured child seat is dangerous. In a sudden stop or a collision it could move, causing serious injury or death to the child or other occupants. Make sure the child seat is properly secured in place according to the manufacturer's instructions.

⚠ Warning ⚠

When installing the child seat, ensure that there are no seat belts or foreign objects near or around the LATCH. If seat belts or a foreign object prevents the child seat from being securely attached to the LATCH, the child seat could move in a sudden stop or collision causing serious injury or death to the child or other occupants.

⚠ Warning ⚠
Always follow the child seat manufacturer's instructions. Not following the child-seat manufacturer's instructions when installing the child seat is dangerous.

This vehicle is equipped with LATCH bars for the installation of a child seat on the passenger seat.

The LATCH bars are located between the seat base and the seat back.

Motor the seat rearwards, to allow clearance for installing the child seat.




Slightly expand the area between the seat base and the seat back to locate the LATCH bars.

Secure the child seat using the LATCH bars, following the child seat manufacturer's instructions.



Tether Anchor

The tether anchor point is located at the base, rear of the passenger seat (A).

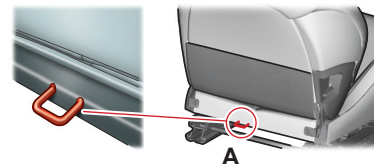

⚠ Warning ⚠
Child seat anchorages are designed to withstand only those loads imposed by a correctly installed child seat. Under no circumstances are they to be used for adult seat belts, harnesses, attaching other items or equipment to the vehicle.


Motor the seat forward to access the tether anchor point.

Route the tether strap around each side of the seat back as shown. Engage the tether clip to the anchor point at the bottom of the passenger seat back as shown and ensure that the locking spring has fully closed to prevent accidental disengagement.

⚠ Warning ⚠

Always follow the child seat manufacturer's instructions. Not following the child-seat manufacturer's instructions when installing the child seat is dangerous.

Always ensure that the tether strap length is adjusted to remove any slack.

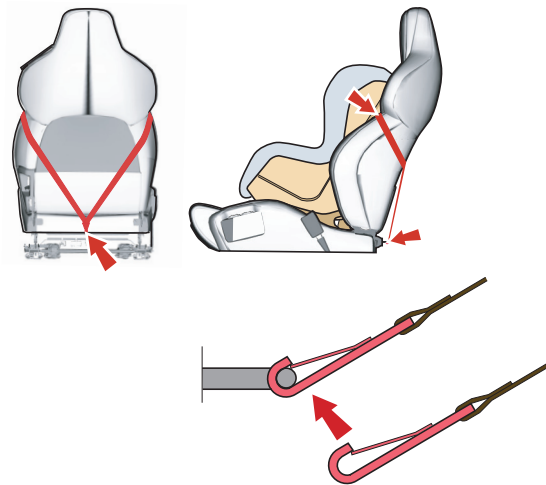

Automatic Locking Retractors (ALR)

This vehicle has Automatic Locking Retractor (ALR) seat belts installed to the front passenger seat.

This system is designed to securely hold child seats. The ALR system temporarily locks the seat belt that is securing a child seat.

Aston Martin does not recommend any child seats for this vehicle **which require the use of the vehicle seat belt** (Refer to 'Seat Belts', page 3.6).

⚠ Warning ⚠

Always follow the child seat manufacturer's instructions. Not following the child-seat manufacturer's instructions when installing the child seat is dangerous.

ALR Operation

Gently pull out the seat belt until fully extended. The ALR system will only engage at the maximum extension point of the seat belt.

Thread the belt tongue through the child seat as instructed by the child seat manufacturer. Engage the tongue into the belt buckle.

Adjust the tongue position on the belt, if necessary, to ensure that the lower belt run is tight and then allow the upper run of the seat belt to fully retract until the child seat is securely held. The ALR system will be heard 'clicking' as the seat belt retracts.

When fully retracted, pull down on the upper run of the belt to check that the ALR lock has engaged.

When parked on an incline, the seat belt may lock as it is withdrawn. This is not a fault. If the mechanism locks, release the seat belt tension and then pull the seat belt very gently to avoid operation of the inertia lock.

The ALR system will disengage when the seat belt is fully retracted. The seat belt may then be worn when required as a normal seat belt. Once the ALR is disengaged, the seat belt must be fully extended to re-engage the system on the next occasion that a child seat is installed.



ASTON MARTIN


Airbags

The vehicle is equipped with driver and passenger airbags. The airbags and seat belt pretensioners (Refer to 'Pre-tensioner and Load Limiting Systems', page 3.10) are electrically controlled by an advanced restraints system.

The front airbags (A) only deploy in a serious front collision. The side airbags (B (one airbag in each front seat)) only deploy according to which side has been impacted in a serious side collision.

The purpose of the driver and passenger airbags is to provide **additional** protection for the occupants in the event of a serious impact (front or side impacts). The airbags are supplementary to the seat belts.

Important airbag safety labels are located on the sun visors and on the end of the instrument panel (passenger side). Ensure that the instructions on these labels are read and complied with prior to driving the vehicle.

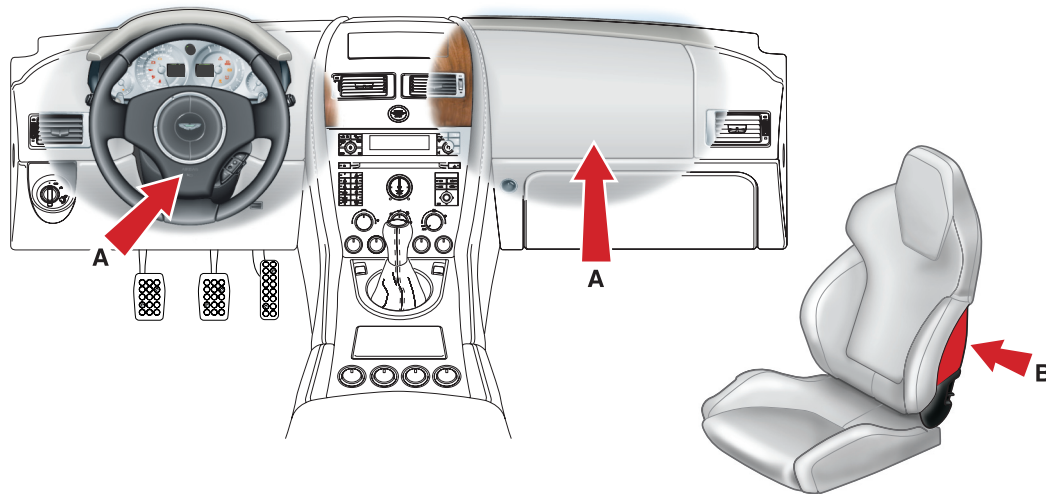

If you are considering modifying this vehicle in any way to accommodate a disability, for example by altering or adapting the driver's or front passenger's seat(s) and / or airbag systems, please contact Aston Martin:

*Aston Martin Lagonda of North America Inc.
533 MacArthur Boulevard
Mahwah
NJ 07430*

Dual inflation technology

When activated, the airbags will deploy at either a normal or reduced level of inflation, depending on crash severity. Various sensors determine the direction and severity of an impact. The system analyses this information then deploys the appropriate airbags only e.g., the side airbags where the impact is on that side only.

Airbag Deployment

Airbags inflate rapidly and with considerable force; there is therefore a risk of death or serious injury such as fractures, facial and eye injuries or internal injuries, particularly to occupants who are not properly restrained by seat belts or are not sitting correctly when the airbags deploy. The risk of injury from a deploying airbag is greatest close to the trim panel covering the airbag.

The whole sequence of events from sensing the impact to full inflation of the airbag takes place in a fraction of a second.

The noise and gas associated with the deployment of the airbags is not injurious to health.

Warning

Do not use accessory seat covers. The use of accessory seat covers may prevent the deployment of the side airbags and increase the risk of injury in an accident.

Warning

All occupants, including the driver, should always wear seat belts, whether or not an airbag is provided, to decrease the risk of injury or death in the event of a crash.

⚠ Warning ⚠

No objects whatsoever should be attached to the centre cover of the steering wheel or the passenger fascia panel. Such objects could cause harm if the vehicle is in a collision severe enough to cause the airbags to deploy.

Do not change, modify or tamper with the steering wheel, passenger side fascia or any other part of the airbag system. Such actions could disable the system or cause inadvertent airbag deployment.

The system will not deploy in the event of minor frontal or side impacts, such as contacts when parking. The airbag system is not designed to protect against rear impacts.

Any work on the airbag system may only be carried out by an Aston Martin Dealer.

Child Seats and Passenger Airbags

If a child seat is to be used in the passenger seat, the passenger airbag **must** be deactivated (Refer to 'Passenger Airbag Deactivation', page 3.11). Ensure that the child seat manufacturer's installation instructions are followed correctly.

Passenger Airbag Deactivation

This vehicle is installed with a passenger airbag deactivation switch.

The passenger seat side impact airbag is also deactivated when the passenger airbag is deactivated.

The passenger airbag **must** be deactivated if installing a child seat on the passenger seat.


⚠ Warning ⚠

Unnecessary deactivation of the passenger airbag is dangerous. The passenger will not receive the added protection of the airbag. Serious injuries or even death could occur. With the exception of installing a child seat on the passenger seat, do not turn the airbag deactivation switch to the 'Off' position.

⚠ Warning ⚠
Never place a child in a child seat or on a booster cushion in the passenger seat if the airbag is active.

The passenger airbag deactivation switch is located on the passenger end of the dashboard and is accessible when the passenger door is open.

For passenger airbag deactivation switch operation, follow the instructions on child seat installation (Refer to 'Child Safety', page 3.10).

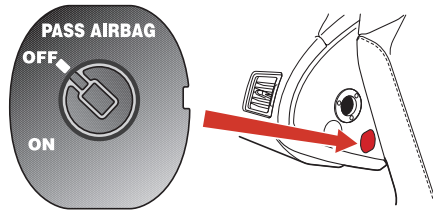

The passenger airbag deactivation switch should be inspected by an Aston Martin Dealer if any of the following conditions occur:

- The passenger airbag deactivation indicator light does not illuminate (for six seconds) when the ignition switch is turned to the 'On' position and the passenger airbag is active
- The passenger airbag deactivation indicator light does not remain illuminated when the ignition switch is in the 'On' position and the passenger airbag deactivated.
- The passenger airbag deactivation indicator light remains illuminated when the ignition switch is in the 'On' position and the passenger airbag is active.




ASTON MARTIN

Interior Storage

Glovebox.



Door pockets.

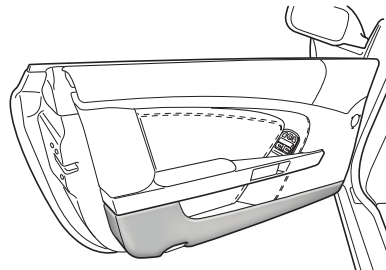

**Trinket box (Non smoking option).
Lift the lid to open.**




**Document pocket
(Driver and passenger seat).**



**Seat Pockets
(Driver and passenger seat).**



Rear Trinket Box

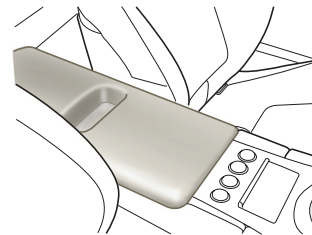


Trunk Cover

To Remove

Detach the two tailgate cords and allow the rear section to fold forward. Hold the cover while pulling on the red tag (with the red tag pulled back two locating pins are retracted, allowing the cover to lower).



Lower and withdraw the cover from the trunk.

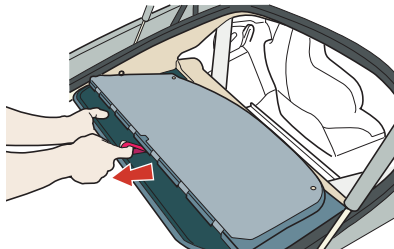

Storage


Keep the rear section folded and turn the trunk cover 180°.

Place the cover in the rear section of the trunk.

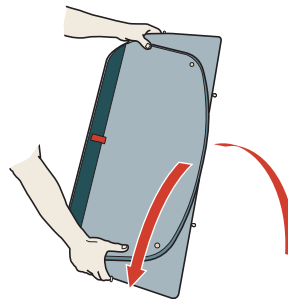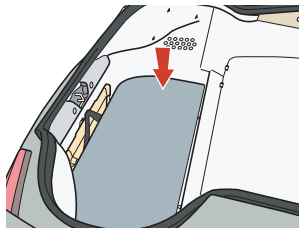

To Install

Insert the trunk cover from below and locate the two rear pegs.

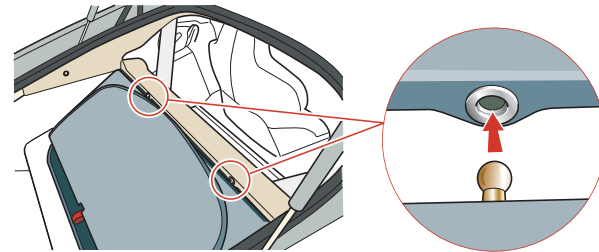

Raise the cover while pulling back on the red tag (retracting two location pins). Raise the cover into position and release the red tag. Ensure that the locating pins have engaged. Install the two tailgate cords.

Accessory Socket



Warning

Damage to electrical circuits will result if more than 10 amps is drawn from the accessory socket. Only connect accessories which are designed for use in a motor vehicle.




Warning

Prolonged use of accessory socket when vehicle is stationary may seriously discharge battery.

An accessory socket is mounted in the trunk RH side wall and may be used to power any 12 volt vehicle accessory requiring a current of less than 10 amps. The trunk mounted accessory socket is a constant live.

On vehicles installed with the non-smoking option a second accessory socket is provided in the trinket tray.

Read the manufacturer's instructions and ensure that you do not connect any device which would exceed current rating of accessory socket.

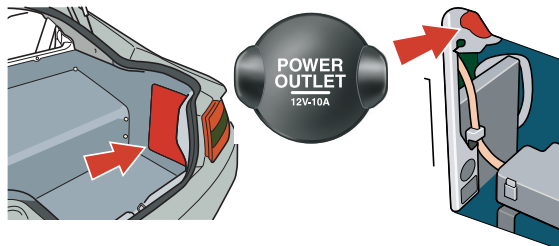

Ashtray and Cigar Lighter (Option)

The cigar lighter may be used when the ignition switch is in positions 'I' or 'II'.


Push down until it clicks. The lighter will pop up when ready for use.



Warning

The cigar lighter is heated to 'Red Heat' when in use. Take care to avoid burns. Do not allow children to play with the cigar lighter.

Remove the ashtray by opening the lid and pulling the glass tray upwards. Install the tray by placing it into position and push down.

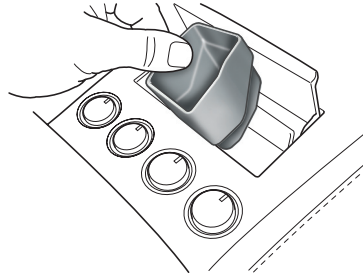

Electric Windows



Misuse of the window switches, especially by children, can result in injury due to entrapment in the window closure. Drivers must advise all occupants of the possible danger and ensure that all obstructions are clear before raising the window.

To raise and lower the windows the ignition must be at position 'II'.

When the ignition key is turned to ignition position 'I' from position 'II' and then removed, the windows will remain operational for one minute. If during this time the door is opened / closed the window will stop - insert the ignition key, turn to position 'II' to continue the window operation.

Lower - Lightly press and release the window switch (A) to lower the window in stages. Press firmly and release to lower the window with one touch.

Raise - Lightly pull back and release the window switch (A) to raise the window in stages.



Door Sealing



Warning

Ensure that all occupants are clear when the window mechanism is operating.

To minimise wind noise and ensure a watertight window seal a door sealing system is used to ensure a tight fit of the door glass to the seals around the top of the door opening.


When a door is opened, the window glass automatically lowers a few millimetres to clear the door seal. As the door is closed, the window glass automatically, after a pause, raises against the body frame rubber seals.

If power to the electric windows has been interrupted for any reason, they will fail to operate correctly until reset (Refer to 'Door Window Reset', page 11.45).

Reading Lamps


Both reading lamps are controlled by the individual switches mounted on the infotainment centre (A).

Unless switched off / on at (A) they will continue to operate up to four minutes after the ignition is switched off.

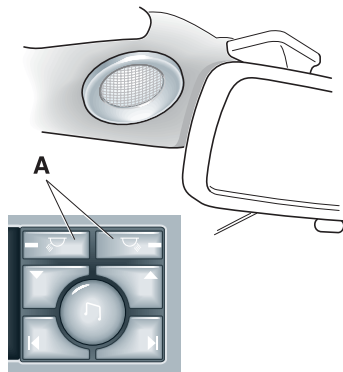

Coat Hooks

Coat hooks are provided behind the driver and passenger seats.

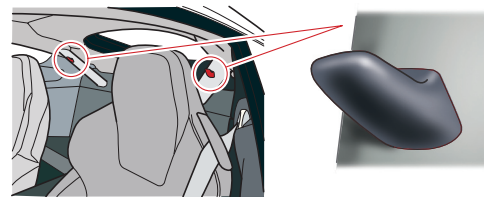

Umbrella (Option)

An umbrella, complete with holder, is provided in the rear of the boot.



ASTON MARTIN



ASTON MARTIN




ASTON MARTIN



ASTON MARTIN




ASTON MARTIN

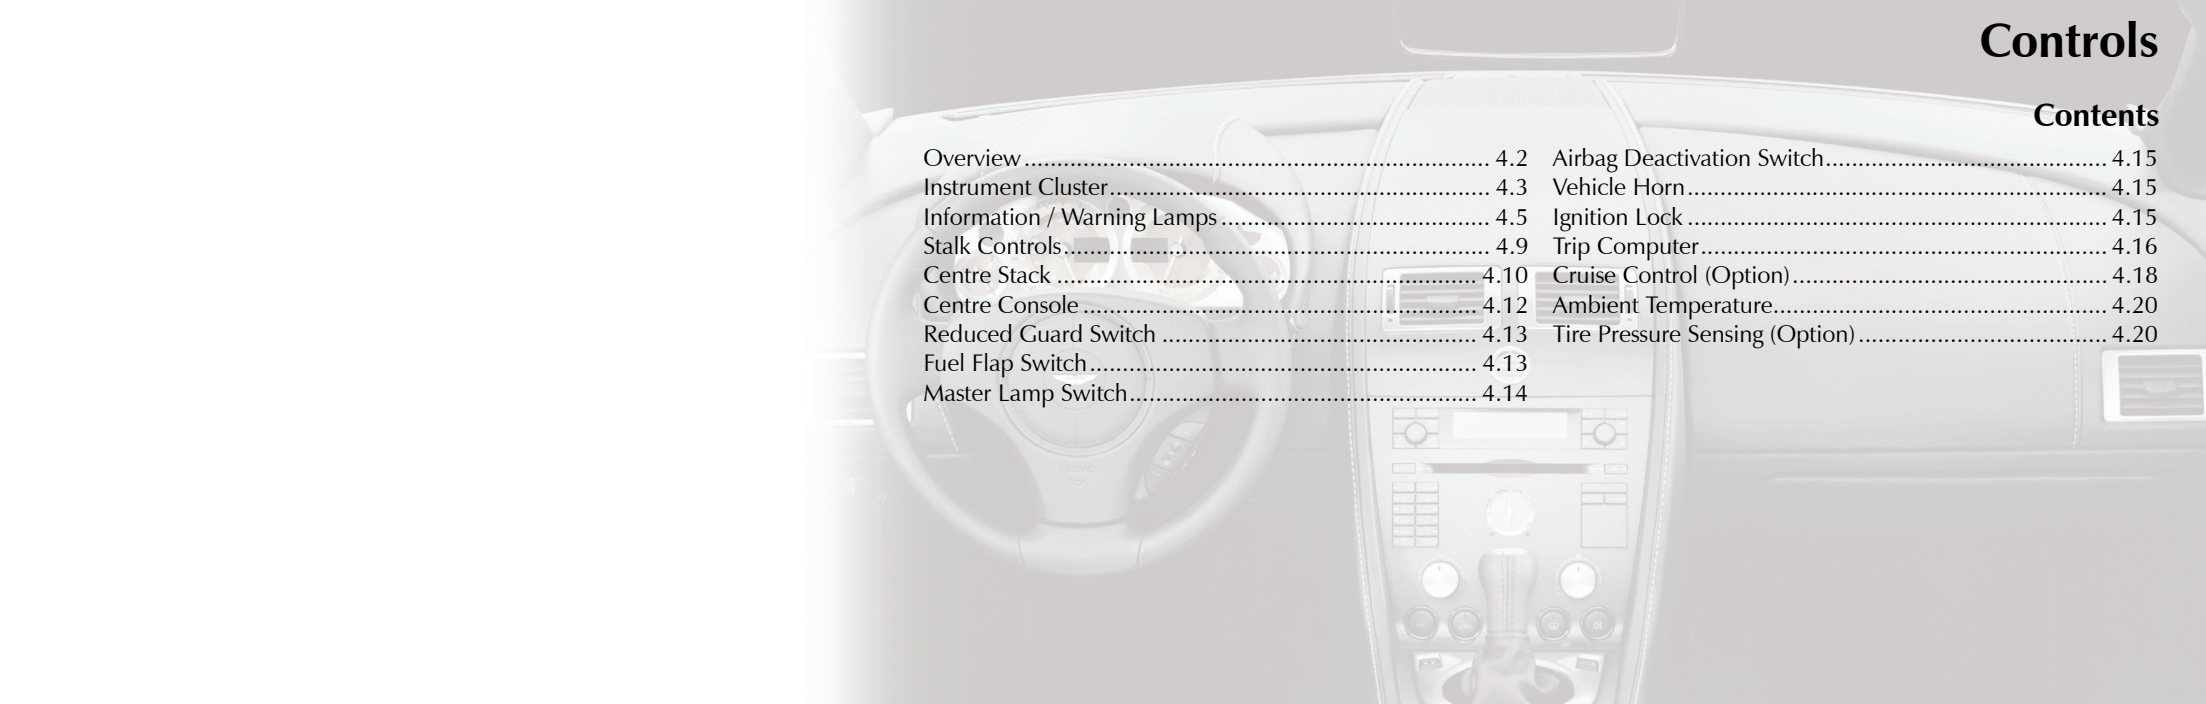

Controls


Contents

Overview	4.2	Airbag Deactivation Switch.....	4.15
Instrument Cluster.....	4.3	Vehicle Horn.....	4.15
Information / Warning Lamps	4.5	Ignition Lock	4.15
Stalk Controls.....	4.9	Trip Computer.....	4.16
Centre Stack	4.10	Cruise Control (Option).....	4.18
Centre Console	4.12	Ambient Temperature.....	4.20
Reduced Guard Switch	4.13	Tire Pressure Sensing (Option)	4.20
Fuel Flap Switch.....	4.13		
Master Lamp Switch.....	4.14		

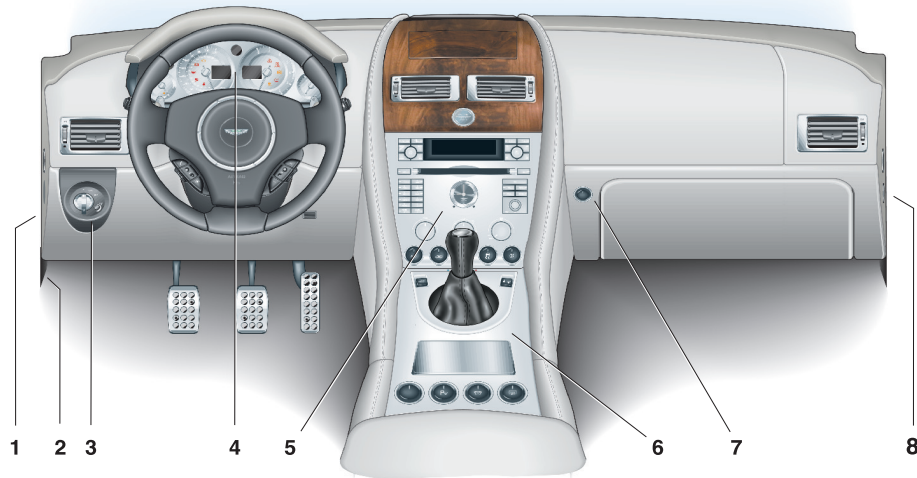

1. Reduced Guard Switch (Refer to page 4-13).
2. Fuel flap release (Refer to page 4-14)
3. Master Light Switch (Refer to page 4-14).
4. Instrument Cluster (Refer to page 4-3).
5. Centre Stack (Refer to page 4-11).
6. Centre Console (Refer to page 4-12).
7. Glovebox switch (Refer to page 4-11).
8. Airbag Deactivation Switch (Refer to page 3-11)

Instrument Cluster

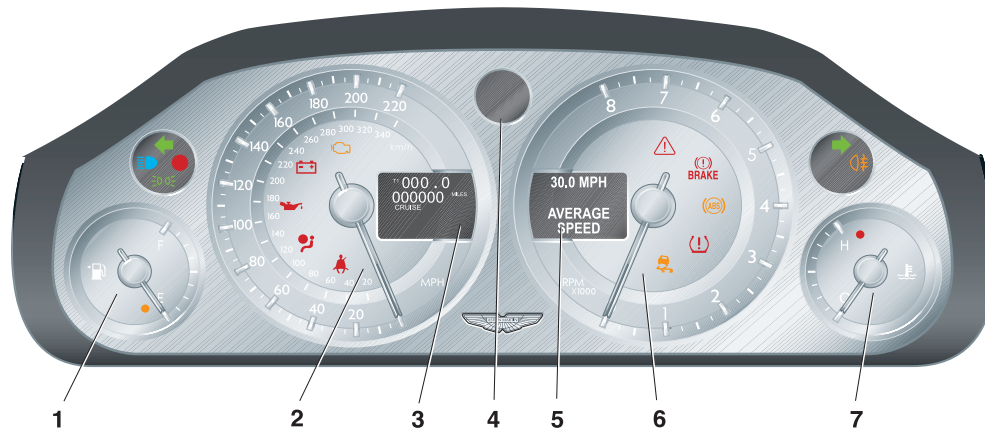

(1) **Fuel Gauge** - Indicates how much fuel is in the fuel tank. Refuel as soon as possible when the low fuel lamp illuminates.

(2) **Speedometer** - Indicates vehicle road speed.

(3) **Message Display (Left)** - Displays the following:

(A) **Trip Meter** - Shows distances travelled since last reset of trip counters T1 and T2 (Refer to 'Trip Meter', page 4.18).

(B) **Cruise Status (Option)** - Shows 'Cruise' when cruise control is activated (Refer to 'Cruise Control (Option)', page 4.18).

(C) **Odometer** - Shows the total distance covered by the vehicle.



(4) Gear Shift Indication Display (GSID) -

Indicates the optimum time to shift gear.

A red 'R' will show when the transmission is in reverse.



(Refer to 'Transmission', page 5.2).

(5) Message Display (Right) - Displays the following:

Driver Information / Warnings - Messages appear if an unsatisfactory condition is detected. Message priority is indicated by a red / amber triangle above the message display.

- **Red** - Potential personal danger or danger of damage to the vehicle
- **Amber** - Advisory, indicate possible degraded vehicle performance

Warning messages will be displayed when the ignition is on and will cycle automatically. View / acknowledge messages at any time by pressing the **Read** button (A).


The message display (right) defaults to the 'present speed' screen (trip computer function) when there are no messages to show (Refer to 'Trip Computer', page 4.17).

**Service Intervals**

'Time for Regular Service' will be displayed when a regular vehicle service is due. This message will show at ignition on for 120 seconds. It will continue display at ignition on until the regular service has taken place.

(6) Tachometer - Indicates engine speed in revolutions per minute x 1000.

(7) Engine Coolant Temperature Gauge - Shows the temperature of the engine coolant.

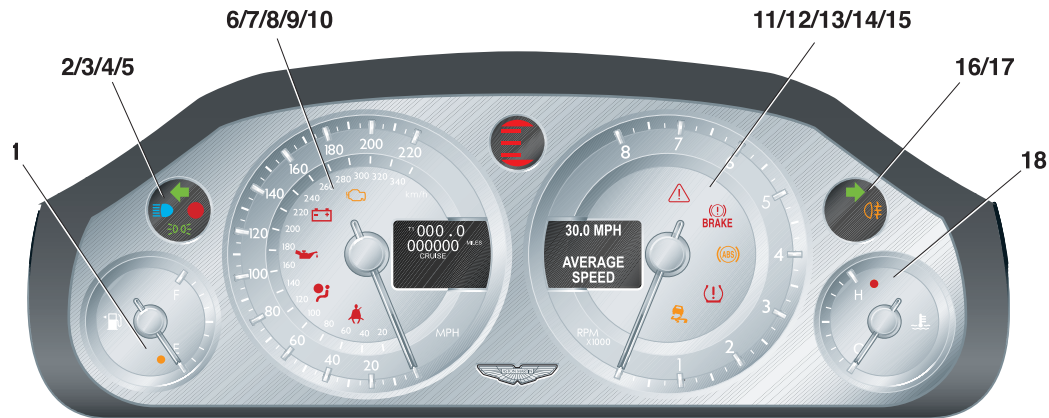

-  **(1) Low Fuel Warning Lamp (Amber)** – Illuminates when approximately 2 Galls (9 ltr) remain.
 ● At 2 Galls (9 ltr) and 1 Galls (5 ltr) an audible ‘beep’ will sound and the ‘estimated distance’ message will show (for 20 seconds) in the message centre right.
-  **(2) Left Turn Direction Indicators (Green)** - Flashes with the indicator lamps or hazard warning lamps (Ignition at position ‘II’).
-  **(3) Headlamps (Blue)** - Indicates the main beam of the headlamps is in use.
-  **(4) Side lamps (Green)** - Indicates the side lamps / dip or main beams are illuminated.



(5) PATS Lamp - If the lamp flashes continuously at ignition position 'II' the vehicle will remain immobilized. If the lamp is on continuously at ignition position 'II' the vehicle will start but PATS has gone into 'Fail Safe' mode (Refer to 'Passive Anti-Theft System (PATS)', page 2.15).



Stop immediately if the Check Engine lamp flashes, do not drive the vehicle. Contact your Aston Martin Dealer.



(6) Check Engine (Amber) - Steady amber indicates a fault in the engine management system. Consult your Aston Martin Dealer immediately. Flashing amber indicates a major fault in the engine management system.



(7) Ignition Warning Lamp (Red) - Illuminates when the ignition is on. Extinguishes when the engine is started and battery charging commences. Illuminates if battery charging fails whilst driving.



(8) Oil Pressure Warning Lamp (Red) - Illuminates when the engine oil pressure falls below minimum. Do not continue driving if this lamp remains illuminated. Contact your Aston Martin Dealer immediately.



Do not drive the vehicle if the SRS warning lamp remains on. Have the system checked by an Aston Martin Dealer.



(9) SRS (Supplementary Restraint System) (Red) - At ignition positions 'I' and 'II' or on vehicle start up, this lamp illuminates for a few seconds as a readiness indicator. If it does not illuminate, or if it does not go off after a few seconds, or if it comes on whilst driving, the airbag self diagnostic system has detected a fault.



Do not drive the vehicle if the seat belt warning lamp remains on. Have the system checked by an Aston Martin Dealer.



(10) Seat Belt Warning (Red) - This warning lamp will illuminate and a chime will sound for six seconds if the driver's seat belt is not fastened when the ignition is switched on.



(11) Warning Triangle - Indicates Red or Amber depending on warning / information message priority.



If the brake warning lamp remains illuminated, after fully releasing the parking brake, do not drive the vehicle. Have the system checked by an Aston Martin Dealer



(12) Brake Warning (Red) - At ignition position 'II' this lamp will illuminate when the parking brake is applied. It will go out when the parking brake is fully released. If the lamp remains on, after fully releasing the parking brake, it indicates that either the brake fluid level is low and / or that the brake pads require regular maintenance (Refer to 'Footbrake', page 5.3).



If the ABS warning lamp remains illuminated, do not drive the vehicle. Have the system checked by an Aston Martin Dealer.



(13) ABS Warning Lamp (Amber) - Indicates a concern in the ABS control circuits. Consult your Aston Martin Dealer immediately if this lamp remains illuminated.



(14) Tire Pressure (Amber) - During vehicle start up, this lamp will illuminate, briefly, as a readiness indicator. It will illuminate again if tire pressure falls below specification (Refer to 'Tire Pressure Sensing (Option)', page 4.21).



(15) Dynamic Stability Control (Amber) - At ignition position 'II' or on vehicle start up, this lamp will illuminate, as a readiness indicator. If, while DSC is active, the DSC symbol stays illuminated or it illuminates whilst driving, the DSC system has detected a fault. A DSC fault message will be displayed in the message centre (right). Consult your Aston Martin Dealer as soon as possible. (Refer to 'Dynamic Stability Control (DSC)', page 5.6).



(16) Right Turn Direction Indicators (Green) - Flashes with the indicator lamps or hazard warning lamps (Ignition at position 'II').



(17) Rear Fog - Indicates if the rear fog lamps are on.



(18) High Coolant Temp (Red) - Indicates when engine coolant temperature exceeds 248°F (120°C).



Low Outside Temperature

'Ice Warning' is displayed in the message centre right when frost or ice is likely to form on road surfaces. The amber

warning triangle  will also illuminate.

The the message and warning triangle will continue to show until the outside temperature rises to a safer level.



Warning

Even if the 'Ice Warning' message does not show, there is no guarantee that at low temperatures the road is free from ice.

Warning Lamp Indications

As the ignition is switched on, the electronic control units complete a self check to ensure correct operation. During these checks the following information and warning lamps will illuminate for 5 seconds and 'System Check' will appear on the message display (right).

Under normal circumstances most warning lamps will extinguish at the end of the individual system check if system checks are satisfactory.


	Anti-Skid		ABS		Battery charging
	Brake		Check engine		Fog light (rear)
	Fuel		Oil Pressure		Seat Belt
			SRS		Tire Pressure

Stalk Controls

Left Hand Stalk

Turn Signals - Up indicates a right turn. Down indicates a left turn. Hold against spring pressure to indicate a lane change. Returns to the centre position on completion of a manoeuvre.

Main and Dipped Beam Switching - Pull forwards and latch for main beam. Pull forwards again and latch to return to dipped beam. Pull forwards and release without latching, at any time while the ignition key is inserted, to flash main beam on and off.

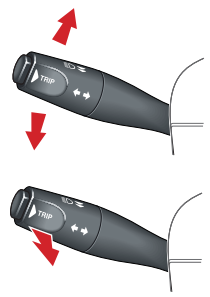

Pull forwards and release without latching, when the ignition key is removed, to activate Homesafe (Refer to 'Homesafe', page 2.11).

Trip Computer - Repeated pressing of the trip function button cycles through the trip computer displays. (Refer to 'Trip Computer', page 4.17).



Right Hand Stalk

Windshield Wiper Control -

- (1) Off.
- (2) Intermittent Wipe.
- (3) Normal Speed Wipe.
- (4) Fast Wipe.

Demand Wipe - Pull the stalk forwards.

The windshield wipers will return to their park position if the ignition is switched off or the hood is unlatched, regardless of the RH stalk position.




Speed Sensitive Wipe - If the wipers are at fast wipe, when the vehicle slows down (below 7 m.p.h. (11 km/h)) the wipers will go to normal wipe speed.

If the wipers are at normal speed when the vehicle slows down (below 7 m.p.h. (11 km/h)) the wipers will go to intermittent wipe (position 2).

As soon as the vehicle speeds up (above 9.5 m.p.h. (15 km/h)) the wipers will return to their original setting.

Windshield Wiper Delay Control -

Intermittent wipe time delay increases / decreases in six steps (A). Sixth position gives the shortest delay between wipes.

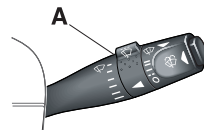

Windshield Washer Control -

Press for more than one second to activate the windshield washers.

Operation continues until the button is released. When released the washers stop immediately but the wipers continue for a few strokes, ending with a pause and then a final wipe.


If used during normal wiper operation, the wipers operate continually irrespective of the washer operation.

Headlamp Washers (With HID Dipped Beam Bulb (Option) Only) -

Headlamp washers will operate automatically, once per journey (each ignition cycle), if the windshield washers are operated and the headlamps are on.



Centre Stack

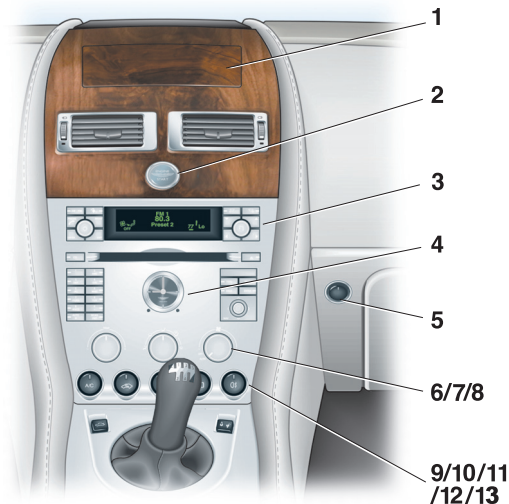

(1) Satellite Navigation Screen (Option) - Vehicles installed with Satellite Navigation only (Refer to 'Satellite Navigation (Option)', page 10.1).



(2) Engine Start - When illuminated Red, press to start the engine (Refer to 'Starting the Engine', page 5.12).

(3) Infotainment Centre - Contains the controls and switches for Audio (Refer to 'Audio', page 7.1), Telephone (Refer to 'Car Phone (Option)', page 8.1) and Satellite Navigation (Refer to 'Satellite Navigation (Option)', page 10.1).


The two top RH switches control the two reading lamps (Refer to 'Reading Lamps', page 3.24).



(4) Clock - The left button will retard time and the right button will advance time. Use an object with a point, e.g. a ballpoint pen, to set the time.



(5) Glovebox - Press to open the glovebox. Push up and latch to close



(6) Temperature Dial - Turn clockwise to increase or anticlockwise to decrease the cabin temperature (Refer to 'Climate Control', page 6.1).



(7) Air Flow Dial - Turn to select the Air flow mode (Refer to 'Climate Control', page 6.1).

 **(8) Fan Speed Dial** - Turn clockwise to increase or anticlockwise to decrease the (Refer to 'Climate Control', page 6.1).

 **(9) Air Conditioning Switch** - Press to switch Air Conditioning On or Off (Refer to 'Climate Control', page 6.1).


 **(10) - Air Recirculation Switch** - Press to select outside or recirculated air the source of air entering the vehicle (Refer to 'Climate Control', page 6.1).

 **(11) Hazard Warning Lamps** - Press to activate the hazard warning lamps. Press again to deactivate.

 **(12) Dynamic Stability Control (DSC)** - The DSC system is always on when the ignition is switched on. Press and hold for approx. 4 seconds to switch Off. Press and release to switch On. (Refer to 'Dynamic Stability Control (DSC)', page 5.6).

 **(13) Rear Fog Lamps** - Used in conjunction with the dipped beam when fog is causing restricted visibility. They **must** be switched off when visibility clears to reduce glare to the drivers of following vehicles.

Centre Console

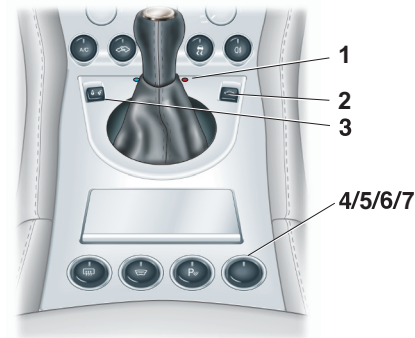

(1) Bluetooth LEDs (Option) - Blue and green LEDs to indicate Bluetooth status (Refer to 'Bluetooth (Option)', page 9.1).



(2) Master Vehicle Lock - Press to lock both doors and disable the tailgate lock and the tailgate open switch. Pull up to unlock. (Refer to 'Master Lock Switch', page 2.7).



(3) Tailgate Open - Pull up to open the tailgate.



Warning

Before installing a child seat, the passenger airbag must be deactivated.



(4) Heated Rear Windshield - Press to activate the rear windshield heater. Switches off after 21 minutes if not manually switched off. When the heated rear windshield is activated the door mirror heaters will work for 12 minutes, then switch off.



(5) Heated Front Windshield (Option) - Switches off after 6.5 minutes if not manually switched off. Will operate automatically when auto defrost and defrost are used (Refer to 'Climate Control', page 6.1).



(6) Rear Parking Assist - Switch parking assist On / Off. Illuminates when parking assist is On (Refer to 'Rear Parking Assist', page 5.10).




(7) Airbag Activation / Deactivation - Indicates the passenger airbag status (Refer to "", page 3.18).

Reduced Guard Switch

The reduced guard switch disables the deadlock system and allows for passengers or animals to be left in the vehicle without activating the security system.

With the ignition key in the '0' or 'I' position or within 60 seconds of removing the ignition key the reduced guard switch can be activated. The switch lamp will show red when reduced guard is active.


(Refer to 'Reduced Guard', page 2.13).

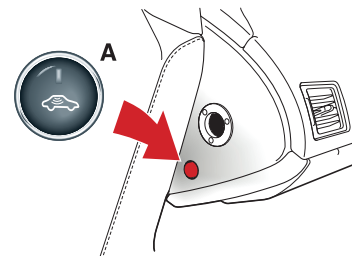

Fuel Flap Switch


Press to open the fuel flap.

Close the fuel flap by pressing down on the flap until the lock engages.

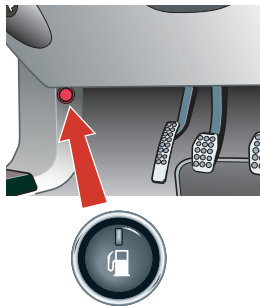

Filler Flap Emergency Release

If the filler flap will not open when the release switch is pressed, open the filler flap manually. Reach through the LH trunk trim to access the manual fuel filler flap release. Pull the lever (A) to open the filler flap.

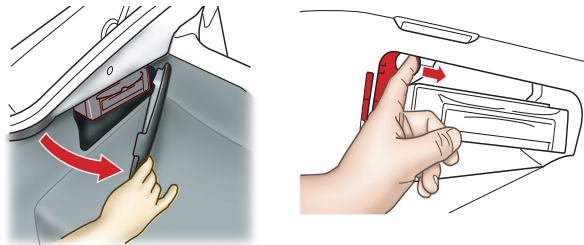


Master Lamp Switch

(1) - All external lamps off.

(2) - Side lamps, side marker lights, rear lamps and licence plate lamps on.

(3) - Headlamps on, in addition to the side, side marker, rear and licence plate lamps.

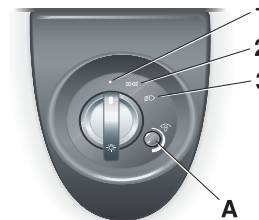

If Homesafe (Refer to 'Homesafe', page 2.11) has been activated with the master lamp switch at position 3 (headlamps on), the main beam will remain on. Ensure the master lamp switch is at position 1 before exiting.

Lights On Warning

If the vehicle side lights or headlights are on and the drivers door is opened a warning buzzer will sound. The buzzer will sound for a period of 5 minutes.

To stop the buzzer switch the lights off.

The buzzer will also stop when the driver's door is shut -the lights will still be on.

Day Time Running Lamps

(Canada only)

The dipped beams and side lights are permanently on.

Headlamp Levelling

(HID Dipped Beam Bulb (Option) Only)

The weight of items placed in the trunk and passengers may change the beam angle of the headlamps. The headlamps are continuously monitored and automatically adjusted to compensate.

Instrument Cluster Illumination

The level of instrument illumination can be adjusted using the rotary control (A). Clockwise rotation increases the brightness of the illumination.


Push the rotary control in and release to enable the control.
Push in and release to lock the control.

Airbag Deactivation Switch

This vehicle is installed with a passenger airbag deactivation switch.


The passenger airbag **must** be deactivated if installing a child seat on the passenger seat.

Refer to Before Driving (Passenger Airbag Deactivation (Page 3.11)).

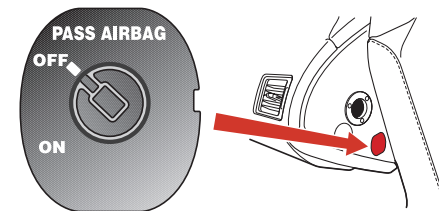


Vehicle Horn

To sound the horn press the centre pad of the steering wheel.

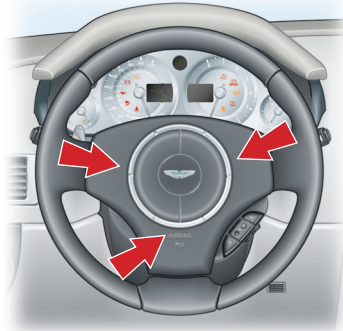

Ignition Lock

- (1) '0' - All systems off, steering lock engaged.
- (2) 'I' - Steering lock released. Auxiliaries on (e.g. Audio).
- (3) 'II' - Ignition and all other electrical systems on.

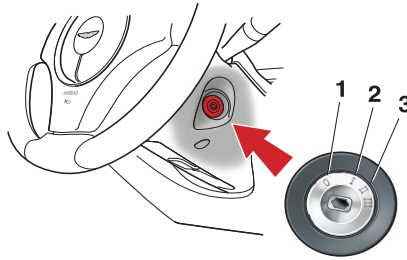

Preventing Unnecessary Battery Drain

Some circuits remain active when the ignition is switched off and the ignition key remains in the ignition lock. If the key is left in the ignition lock, unnecessary current will be drawn from the battery.

A temporary label is installed on all new vehicles to remind drivers to remove the ignition key whenever the ignition is switched off.

(Refer to 'Battery Charge', page 11.26).



Trip Computer

Pressing (A) for less than 3 seconds cycles through the trip computer functions one at a time. Trip computer information is viewed in the message centre right.

If an information message displays, after reading and acting on the information provided press the 'Read' button to return to the trip display.

Range - Estimated range on remaining fuel (no reset). The minimum distance displayed will read 15 mile (20 km). Below this distance will show '---'.



15
MILES
TO EMPTY
TANK

Average Fuel - Average fuel consumption since last reset. Press (A) for more than 3 seconds but less than 5 seconds to reset. Press (A) for 5 seconds or more will reset both the average fuel consumption and average speed. 'Infocenter is Reset' will be displayed in the message centre right.

Instantaneous Fuel - Indicates the fuel consumption over the last 3 seconds of travel (no reset).

30.0 MPH
AVERAGE

30.0 MPG
INSTANT.

Average Speed - Shows the average speed since last reset. Press (A) for more than 3 seconds but less than 5 seconds to reset. Press (A) for 5 seconds or more will reset both the average speed and average fuel consumption. 'Infocenter is Reset' will be displayed in the message centre right.

Present Speed - Indicates the present vehicle speed.

Driver aid only.

Trip computer default screen.

Blank Screen - Blank screen will show.

30.0 MPH
AVERAGE
SPEED


45
MPH

Trip Meter

Shows distances travelled since last reset of trip meters T1 and T2. Toggle between T1 and T2 by pressing (B) for less than 3 seconds. Press (B) for more than 3 seconds to reset the trip meter on display.

Display Units

With the ignition at position 'II' press (C) and (D) together for 3 seconds to change the trip computer display units.

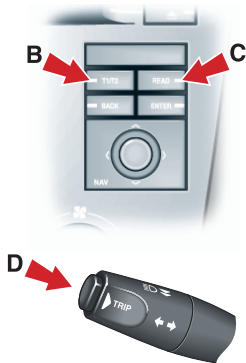

Cruise Control (Option)


Cruise control can be used to maintain a selected vehicle speed, above 15 m.p.h. (24 km/h), without having to use the accelerator.

(A) **RES** - Resume the set speed retained in memory.

(B) **SET '+' / '-'** - Set the speed or accelerate / decelerate.

(C) **On / Off** - Switches cruise control On / Off.

(D) **CAN** - Cancels cruise control but retains the set speed in memory.

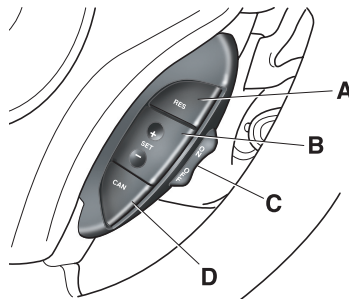

Cruise Control On / Off

Use the 'On / Off' switch (C) to activate / deactivate cruise control. Under certain conditions cruise control will automatically switch off (Refer to 'Cruise Control Automatic Switch Off', page 4.20). When cruise control is active 'Cruise' will show in the message display (left) (Refer to 'Instrument Cluster', page 4.3).

Setting Vehicle Speed

**Warning**

Only use cruise control when conditions are favorable, for example, straight, dry, open roads with light traffic.

When travelling at the desired speed, which must be above 15 m.p.h. (24 km/h), press the '**SET**' (+ or -) button (B). Cruise control will engage and maintain that speed without the need to use the accelerator pedal.

Cruise control will automatically disengage when the brake pedal is pressed or when the vehicle speed falls below 15 m.p.h. (24 km/h).

Changing the Set Speed

There are three ways to change the set speed:

1. Accelerate or decelerate to the desired speed then press '**SET**' (+ or -).
2. Increase or decrease the speed by pressing and holding either **SET** '+' or '-' until the desired speed is obtained, then release the switch.
3. Increase or decrease the speed in steps of 1 m.p.h. (2 km/h) by briefly pressing either **SET** '+' or '-' until the desired speed is obtained.

Resuming the Set Speed

If the vehicle is accelerated above the set speed, then the set speed will be resumed when the accelerator pedal is released.

If '**CAN**' (D) is pressed, or the brake or clutch pedal is pressed, the cruise control will disengage but the set speed memory will be retained. Press '**RES**' (A) and the vehicle will return to the set speed.

*Cruise control will not resume at speeds below 15 m.p.h. (24 km/h). '**RES**' will not operate if the ignition has been turned off.*

'RES' should only be used if the driver is aware of the set speed and intends to return to it.

It is not recommended to resume set speed when a low gear is selected as excessive engine speeds will occur.

Cruise Control Automatic Switch Off

Cruise control will automatically switch off and clear the memory when:

- The ignition is switched to position '0'
- A fault occurs. The cruise control system will switch off and cannot be used until the fault is cleared
- The parking brake is applied
- Maximum vehicle speed is reached

Cruise control will automatically switch off but the set speed will remain in the memory when:

- The '**CAN**' button is pressed
- The brake pedal is pressed
- Vehicle speed falls below 15 m.p.h. (24 km/h)

- Neutral, Park or Reverse gear positions are selected
- The difference between the actual and set speed is too great
- When the set speed is above 90 m.p.h. (144 km/h); cruise control will disengage automatically after approximately 20 minutes
- The accelerator pedal is used to accelerate beyond the set speed for too long a period

Ambient Temperature

The ambient temperature (outside temperature) is displayed in the top RH corner of the Infotainment centre display.

If the vehicle has been travelling a while and then is stopped in a shaded / enclosed area the ambient temperature may rise, this is due to the heat from the engine bay. The ambient temperature display will reflect the true ambient temperature once the vehicle is moving again or the engine bay cools down.

If required the display units can be changed from °C to °F or °F to °C (Refer to 'Display Units', page 6.11).

Tire Pressure Sensing (Option)




Warning

Tire pressure sensing is not intended to replace driver awareness of tire performance or the need for recommended weekly checks on tire condition and pressure.


Tire pressure sensing monitors the vehicle tire pressures and feeds-back this information to the driver.

Each road wheel is installed with a tire pressure sensing device which sends tire pressure information to a control unit.

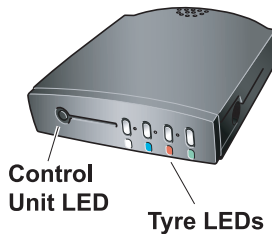

The control unit is mounted in the front passenger footwell, near the transmission tunnel, underneath the front fascia.

Each pressure sensing device has a color coded collar. Ensure the colored collars are installed correctly, i.e. after new tires are installed.

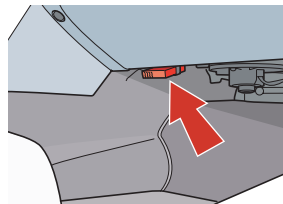

LED Status

At the start of each journey the control unit LEDs will flash continuously until a speed of 10 m.p.h. (16 km/h) has been reached. At this speed the LEDs start to receive signals from the pressure sensing devices in the roadwheels and the tire LEDs will extinguish one by one.

The control unit will remain active until the vehicle has come to a halt and the ignition turned to position 'I'.

At the end of each journey, while the engine is still running, check the status of the control unit.



Warning


Ensure that neutral has been selected and that the parking brake is applied.

Look at the control unit - if the control unit LED shows constant green and no tire LEDs are illuminated - the system is working correctly.

If the LEDs show any LEDs other than detailed above then refer to the tables below.

Roadwheel	Colour
Front Right	Green
Front Left	Red
Rear Right	Blue
Rear Left	Yellow

Tire pressure sensing is also available on winter wheels and tires.

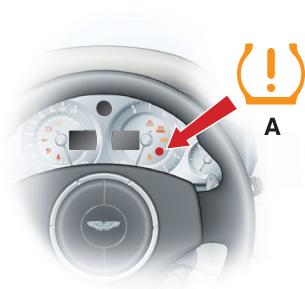

The control unit provides a visual warning by illuminating the tire pressure warning lamp (A) on the instrument panel if any tire pressure falls below specification.

Warnings

Instrument Cluster	 Lamp constant
Control module	Tire LED constant red .
Fault	Tire pressure below specification.

Action

Reduce speed to 30 m.p.h. (48 km/h). Stop in safe place as soon as possible.

One of the colored LEDs on the control module will illuminate to indicate which tire requires inflating. The LED color corresponds to the color of the band below each tire valve cap. Inspect affected tire. Re-inflate if necessary. If on inspection the tire is found to be OK, continue at 30 m.p.h. (48 km/h) maximum. Have the control unit checked at the earliest opportunity. Consult your Aston Martin Dealer.

Take care to replace caps on the correct road wheel after re-inflating the tire

Instrument Cluster	N/A
Control module	Control unit LED constant green . Tire LED constant amber .
Fault	Tire transmitter fault.

Action

Reduce speed to 30 m.p.h. (48 km/h). Stop in safe place as soon as possible.

Inspect affected tire. Re-inflate if necessary.

If on inspection the tire is found to be OK, continue at 30 m.p.h. (48 km/h) maximum. Have the control unit checked at the earliest opportunity. Consult your Aston Martin Dealer.

Instrument Cluster	N/A
Control module	Control unit LED flashing amber . Tire LED flashing amber .
Fault	Control unit fault.
Action Stop in safe place as soon as possible. Check all tires for flats. If OK, continue at 30 m.p.h. (48 km/h) maximum. Have the control unit and the tire transmitters checked at the earliest opportunity. Consult your Aston Martin Dealer.	

Instrument Cluster	N/A
Control module	Control unit LED constant red .
Fault	System failure.
Action Stop in safe place as soon as possible. Check all tires for flats. If OK, continue at 30 m.p.h. (48 km/h) maximum. Have the control unit and the tire transmitters checked at the earliest opportunity. Consult your Aston Martin Dealer.	



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN

Driving

Contents

Driving Safety.....	5.2	Catalytic Converters	5.9
Transmission	5.2	Rear Parking Assistance	5.10
Footbrake	5.3	Driving Techniques	5.11
Anti-Lock Braking System (ABS).....	5.4	Starting the Engine	5.12
Parking Brake.....	5.5		
Dynamic Stability Control (DSC).....	5.6		
Fuel Filling	5.8		

Driving Safety

Always wear your seat belt

- Never drive under the influence of alcohol or drugs
- Always obey all speed and traffic laws and regulations. Never drive faster than the posted speed limit or than conditions allow
- Be particularly careful driving on slippery or wet surfaces
- This vehicle is a high performance vehicle and has handling characteristics you may not be accustomed to. Familiarize yourself with the vehicle and always drive prudently, being aware of your own limitations and the limitations of the vehicle. As with other vehicles of this type, failure to operate the vehicle properly can result in accident and injury
- Follow the maintenance schedule prescribed in this guide
- Never allow the vehicle to be driven by inexperienced drivers

Transmission

The manual transmission features a six speed gearbox.

Gearshifts

Press the clutch pedal, move the gear lever to the required gear position then slowly raise the clutch pedal.

Reverse gear is selected by overcoming spring resistance.

A red 'R' will show when the transmission is in reverse.



To inform the driver that the current gear has reached it's upper rev. limit the GPID will indicate revs increasing. The optimum time to shift gear is when the GPID shows three bars and is red at the top and bottom.



For the first 1243 mile (2000 km) and when ever the engine temperature is below 104°F (40°C) the shift control will indicate early shift changes to protect the engine.

Maximum Engine Speed

The maximum safe engine speed is 7,300 r.p.m. If this speed is exceeded, fuel supply to the engine is reduced. As the engine speed reduces back to a safe level, fuel supply is progressively restored.

Footbrake

The footbrake operates through a vacuum boosted, dual (diagonal split) circuit, hydraulic system incorporating an Anti-lock Brake System (ABS).

Vacuum boost is only available while the engine is running.

If one circuit fails brake pressure will still be available to two diagonally opposite road wheels. The footbrake will still operate but with increased pedal travel and longer stopping distances.

Warning

In the event of a brake failure bring the vehicle to a halt as soon as it is safe to do so. Do not continue to drive.

Brake Warnings

While driving, if the brake warning lamp  illuminates, it indicates either that:

- The parking brake is not fully released
- The brake pads require inspection
- The brake fluid level has fallen below an acceptable level

A warning message will show in the message centre right.

Stop, as soon as possible in a safe and convenient place. Apply the footbrake and ensure that the parking brake is fully released. If the parking brake is fully released and the lamp remains on, **do not drive** the vehicle. Contact the nearest Aston Martin Dealer. It is essential that the brake system is checked immediately, preferably by an Aston Martin Dealer.

 Warning

If the brake warning lamp illuminates, you should immediately be prepared for possible increased stopping distances and possible partial failure of the braking system.

Anti-Lock Braking System (ABS)

The anti-lock braking system (ABS) helps prevent the road wheels from locking and skidding during emergency braking. This also assists the driver in maintaining steering and directional stability.

If, in an emergency braking situation, the braking force applied begins to exceed the tire to road adhesion, the ABS is activated to prevent the road wheels locking. When this happens a pulsating effect is felt through the brake pedal. This is a normal ABS effect.

Safety

In all cases it remains the drivers responsibility to drive safely according to the law and with due regard to prevailing conditions. The fact that a vehicle is equipped with ABS must never allow the driver to be tempted into taking risks which could affect his or her safety or that of other road users.

The addition of ABS cannot overcome the consequences of trying to stop in too short a distance, cornering at too high a speed, or the risk of aquaplaning (where the tires are prevented from contacting the road surface by a layer of water).

The driver should always take road conditions into account. A slippery road surface always requires more braking distance for a given speed, even with ABS.

Possible extensions of stopping distance compared to locked wheels may occur during ABS operation on slushy snow, gravel, sand or certain heavily corrugated or ridged warning sections of road surfaces.

If any braking system malfunction occurs, immediately have the Braking and ABS systems checked by your Aston Martin Dealer.

ABS Warning



Warning

If the ABS warning lamp illuminates, you should be aware that wheels could lock during extreme braking or when braking on slippery surfaces.

ABS is monitored for correct operation while the ignition is switched on. If a fault is detected, the ABS warning lamp  will illuminate and the ABS will be partly or fully disabled.

Normal braking will continue to function without ABS.

In the event of an ABS fault, consult your Aston Martin Dealer immediately.

Parking Brake

Always fully apply the parking brake before leaving the vehicle.

To apply the parking brake:

1. Press the footbrake pedal firmly.
2. While pressing the footbrake pedal, pull the parking brake lever up, smartly, to its fullest extent.
Do not press the release button while pulling the parking brake lever up.
3. Allow the parking brake lever to lower.


If the ignition is on the parking brake warning light on the instrument cluster will illuminate, indicating that the parking brake is applied.



To release the parking brake:

1. Press the footbrake pedal firmly.
2. While pressing the footbrake pedal, pull the parking brake lever up until resistance is felt, then depress the release button and push the parking brake lever down.

If the parking brake lever is not fully off, the parking brake warning light  will stay on.

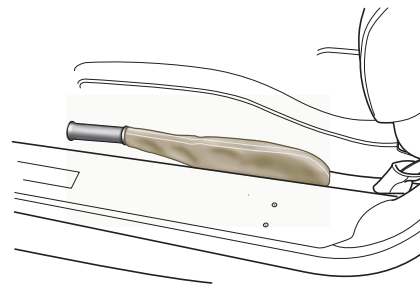

Driving

V8 Vantage

Always check that the brake warning lamp is correctly extinguished before moving off. Do not attempt to drive the vehicle if the brake warning lamp remains on.

An audible warning will sound if the vehicle is moving and the parking brake is still applied.

- If the vehicle is parked on a hill and facing **uphill**, select first gear and turn the steering wheel away from the curb.
- If the vehicle is parked on a hill and facing **downhill**, select reverse gear and turn the steering wheel towards the curb.

Dynamic Stability Control (DSC)



Warning

It is the drivers responsibility to drive safely according to the law and with due regard to prevailing conditions.



Warning

DSC must never allow the driver to be tempted into taking risks which could affect his or her safety or that of other road users. DSC cannot overcome consequences of applying too much engine power for prevailing conditions.

Dynamic Stability Control (DSC) is a system designed to enhance driving safety by improving the vehicle handling when the tires are at the limits of their grip capabilities. This is achieved through the reduction of engine torque and strategic application of the brakes at individual wheels.

Driver Interface and Control

The DSC system is switched 'On' when the engine is started. When the system is operating, the DSC warning lamp will flash.

DSC can be switched 'OFF' by pressing the DSC switch for a minimum of 4 seconds.



The DSC button lamp and the DSC symbol (instrument pack) will illuminate continuously when the system is switched 'OFF'.

'DSC FUNCTION OFF' will be displayed in the message centre right to indicate that DSC is 'OFF'.

Press and release the DSC switch again to switch the DSC 'ON'.

Use tires of the same manufacturer, brand, tread pattern and correct size specified for this vehicle on all four road wheels. Do not mix worn tires.

The DSC may not operate correctly when using tire chains or a temporary spare tire.

If repair or replacement of the steering or other surrounding equipment is necessary, always refer to your Aston Martin Dealer. If the centre position of the steering deviates, the DSC may not operate correctly because there is a sensor in the steering which detects steering wheel position.

Fault Indication

A malfunction in the DSC control system will be indicated by the following:

- The DSC lamp in the instrument cluster will illuminate continuously
- A warning message will be displayed in the message centre right depending on the fault detected

If vehicle cruise control (option) is engaged it will automatically disengage when traction control is operating.

Traction Control

 **Warning** 

It is the drivers responsibility to drive safely according to the law and with due regard to prevailing conditions.

 **Warning** 

Traction Control must never allow the driver to be tempted into taking risks which could affect his or her safety or that of other road users.

 **Warning** 

Traction Control cannot overcome consequences of applying too much engine power for prevailing conditions.

Traction control is a function of DSC, and is operated in association with the DSC system.

Traction control prevents excessive wheel-spin at standing starts, or during acceleration. Wheel-spin is usually caused by excessive use of the accelerator pedal, or slippery, loose or bumpy road surfaces.

To prevent excessive wheel-spin and maintain vehicle stability in such situations the traction control system will:

- Brake the driven-wheel when it starts to slip
- And / or adapt the engine torque to a level corresponding to the traction available on the road surface

These symptoms are normal and will clear as wheel spin is eliminated and normal engine power is restored.

During activation, the DSC warning lamp will flash. The driver may experience a loss in power or temporary 'misfire' as engine power is reduced.

If traction control cuts in when driving on extended icy or slippery surfaces, reduce engine power as necessary until the DSC warning lamp is extinguished.

Do not maintain engine power at such a level that traction control is activated for long periods (more than about one minute). This reduces fuel to the engine and may cause the exhaust catalysts to overheat. Overheating of the exhaust catalysts can destroy them.

Traction control is always operational when DSC on.

Positive Torque Control (PTC)

ABS and traction control are complemented by the addition of an engine drag-torque control system - PTC.



On slippery road surfaces, a downshift or sudden throttle closing can cause excessive brake slip at the driven wheels due to the engine braking effect. PTC increases engine speed by applying the accelerator appropriately, i.e. by intervening in the engine management system, so as to keep the speed of the wheels within the optimum range.

Fuel Filling

Open the fuel flap by pressing the fuel flap release switch.

The vehicle alarm must be off to enable the fuel flap release switch.

Rotate the cap anticlockwise past resistance, then lift off. Place the cap into it's holder.

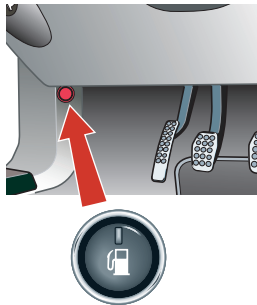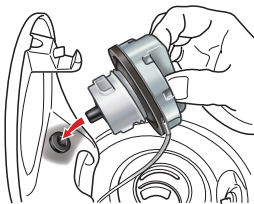

Install the cap by turning clockwise past resistance, until three 'clicks' are felt as the cap is fully tightened. Close and latch the fuel flap.

The fuel tank filler neck has a restricted opening which will only accommodate the fuel supply nozzle of unleaded fuel pumps.



The fuel system will not permit overfill but there will be instances when the nozzle will shut off prematurely. If this happens wait 5 seconds after nozzle shut off before trying to re-initiate fill.

Fuel Cutoff

In the event of a vehicle accident the vehicle will enter Crash mode. Power to the fuel pumps will terminate, thereby reducing fire risk.

Filler Flap Emergency Release

If the filler flap will not open when the release switch is pressed, open the filler flap manually (Refer to 'Filler Flap Emergency Release', page 4.14).

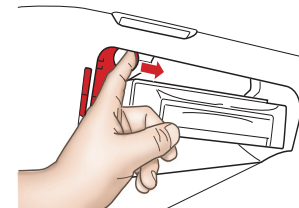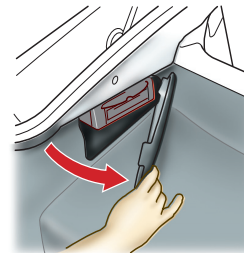

Catalytic Converters



Do not park over dry grass, leaves or other combustible material. Significant fire risk exists because of residual heat in the catalytic converters.



Do not drive through deep water. Rapid cooling of catalysts may cause them to break up.

Catalytic convertors convert harmful exhaust gasses into less noxious substances and so reduce environmental pollution.

They operate at high temperatures and continue to radiate a considerable amount of heat after turning off the engine.

Leaded fuel will cause irreparable damage to catalytic converters. If leaded fuel is inadvertently added to the fuel tank **do not start the engine, do not drive the vehicle.**

Contact your Aston Martin Dealer immediately.

Rear Parking Assist



Sensors do not replace need for total vigilance and caution when parking or reversing.



Rear parking assist assists in detecting obstructions as the vehicle is reversed towards them. The system is active when reverse gear is selected. When the system is operating, the button lamp illuminates and an intermittent 'beep' signal will be heard. The 'beep' frequency increases in pitch and persistence as the vehicle reverses to an obstruction.

The 'beeps' start at approx. 5.5 ft. (1.7 m) from any obstruction. The 'beep' becomes continuous at distances less than 1 ft. (30 cm).

If reversing into a confined area, i.e. a home garage, the rear parking assist outer sensors will detect the side walls 1 ft. (30 cm) and, after 3 seconds, the 'Beep' sequence will stop. As reversing continues the rear parking assist inner sensors will detect the rear wall / obstruction and the 'Beep' sequence will start again.

Press the parking assist switch to disable parking assist.

When parking or reversing make full use of rearward vision and all mirrors to be aware of persons or objects in the vicinity of the vehicle. Take appropriate measures to protect them from danger.

In heavy rain or similar adverse conditions, the sensors may not always be able to accurately measure distance to close objects. Irregular obstacles may also cause inaccurate measurements due to their size, shape or slope.

The parking sensors should be kept clear of dirt, snow etc. to ensure clean signals and accurate distance monitoring.



Driving Techniques

Procedures for driving this vehicle may be unfamiliar to many new owners. Please take time to safely acquire the necessary new driving skills. Practise in safe, lower speed conditions before investigating the high performance potential of the vehicle. Please ensure a safe and enjoyable entry into this new phase of Aston Martin motoring.

Performance Driving Courses are available to enable customers not only to understand the control functions of their vehicle but also the basic principles of Performance Driving.

Please contact your Aston Martin Dealer for further information.

Wet Conditions

When driving in wet conditions, water can build up under your tires so that eventually they ride on a layer of water. When the tire loses grip with the road it is called aquaplaning or hydroplaning and you will have little or no control.

Aquaplaning is more prone to occur at higher road speeds if there is water on the road and particularly if the tires are inflated to the incorrect pressure or approaching minimum tread depth.

It is important to take bends or curves at a safe, reasonable speed, particularly when driving on wet or slippery road surfaces.

Slow down when it is raining.

This vehicle should not be driven through water depths of up to 7 in (175mm) above 30 m.p.h. (50km/h) or through water depths over 7 in (175mm) above idle speed.

Water depths of 8 in (200 mm) or more should not be traversed as this may cause extensive damage to the engine.

Running-In

This vehicle is fully hot tested during manufacture and no special running-in procedures are necessary. Nevertheless it is prudent to limit engine loads (e.g. by accelerating gently and by using lower gears on steep hills or when negotiating tight turns) during the first 1000 mile (1500 km).

Starting the Engine

In extreme low temperatures ((-20°C (4°F) and below) do not allow the engine to 'rev' above 4000 r.p.m., while at standstill or when moving off, until the coolant temperature gauge reaches normal operating temperature.

Revving the engine before fully warmed up may cause severe engine and transaxle damage.

In extreme low temperatures ((-20°C (4°F) and below) Aston Martin strongly recommend the use of engine block heaters and an oil reservoir tank heater.

Refer to your Aston Martin dealer for details.

Ensure you are wearing appropriate footwear to efficiently operate the control pedals. Ensure pedal movement is not restricted by floor mats or other objects trapped beneath pedals.

1. Check that the parking brake is applied and insert the ignition key. Rotate to position 'II'.
The start button will not illuminate red until the clutch pedal is pressed down.

***'Please press clutch to start'** will show in the message display right.*

2. Press the illuminated (red) 'Engine Start' button, wait until the engine fires, then release the button.
The engine start button will show a white light when the engine is running, and then fade out.

If the start button does not illuminate red, check that the BDS is not active (Refer to 'Battery Charge', page 11.26). If the BDS is not active look for a fault message in the message centre right. Contact your Aston Martin Dealer.

Starting From Cold

The engine management system automatically compensates for cold or warm start conditions and makes appropriate adjustments to the fuel / air mixture and ignition timing.



ASTON MARTIN



ASTON MARTIN




ASTON MARTIN



ASTON MARTIN



ASTON MARTIN

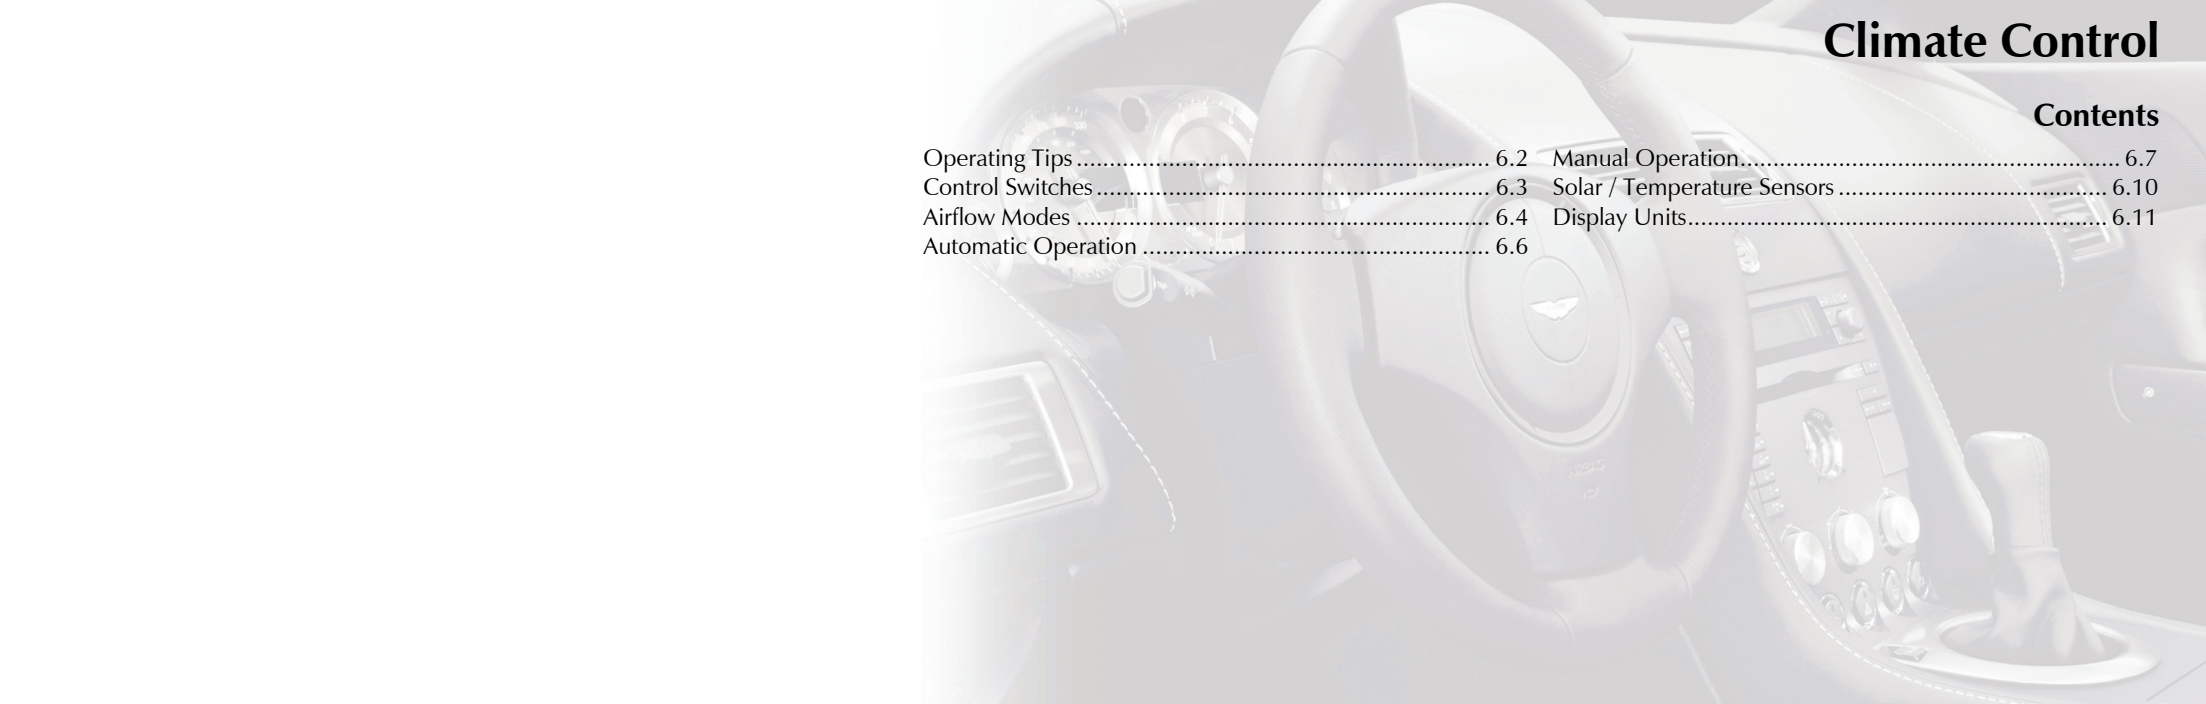

Climate Control


Contents

Operating Tips	6.2	Manual Operation.....	6.7
Control Switches	6.3	Solar / Temperature Sensors	6.10
Airflow Modes	6.4	Display Units.....	6.11
Automatic Operation	6.6		

Operating Tips

- A solar sensor is installed on top of the instrument panel, this should not be covered when driving
- The intake grille of the in-car temperature sensor is located in the driver's knee bolster, close to the centre console. To ensure optimum temperature control this grille should not be obstructed
- Moisture which forms on the evaporator in the air conditioning unit is discharged via a drain tube onto the road. After stopping, small puddles of water may form underneath the vehicle. This is normal and does not indicate a system malfunction
- Operate the climate control system with the engine running
- Clear all obstructions like leaves, snow and ice from the hood and the air inlet in the front grille to improve the system efficiency
- Windows may fog up easily in humid weather. Use the climate control system to demist the windows
- To help demist the windows, operate the air conditioner to dehumidify the air
- Use the 'outside air' position in normal conditions. The 'recirculated air' position should be used temporarily when driving on dusty roads or for quick cooling / heating of the interior
- If the vehicle has been parked in direct sunlight during hot weather, open the windows to let warm air escape, then close the windows and run the climate control system
- Run the climate control system at least once a month to keep internal parts lubricated
- Have the climate control system checked before the weather gets hot. If the climate control system is low on refrigerant or has a malfunction, consult your Aston Martin Dealer
- The vehicle is equipped with a pollen filter. It is necessary to change the filter periodically as indicated in scheduled maintenance. Consult your Aston Martin Dealer

Control Switches

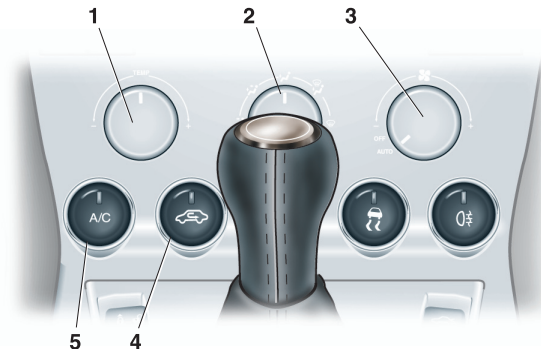

(1) Temperature Control Dial - Set the required in vehicle temperature. Turn clockwise for hot and anticlockwise for cold. The selected temperature is displayed on the Infotainment centre screen.

(2) Air Flow Dial - Select the required airflow. The selected air flow mode is displayed on the Infotainment centre screen.

(3) Fan Speed Dial - Turn the fan speed dial from 'Off' to set the required fan speed (clockwise for fast speed and anticlockwise for low speed). The fan speed is displayed on the Infotainment centre screen. Rotate to 'Auto' for fully automatic air conditioning operation.



Warning

Do not select re-circulated air in cold or rainy weather, it may cause the glass to mist up.

(4) Air Circulation Button - Controls the source of air entering the vehicle. Press to select re-circulated air (a lamp on the button illuminates to indicate that re-circulated air is selected). Use this position when going through tunnels, driving in congested traffic (high engine exhaust areas) or when maximum cooling is required.

On start up the default position is outside air selected. Use this position for normal conditions and demisting.


(5) A/C Button - Push the button to turn the air conditioning on (an indicator lamp on the button will illuminate when the fan control dial (3) is on). Push the button again to turn the air conditioning off

Air conditioning may not function when the outside temperature approaches 32°F (0°C). (Indicator remains on even when system is off.)


Airflow Modes

Climate Control


Face Only

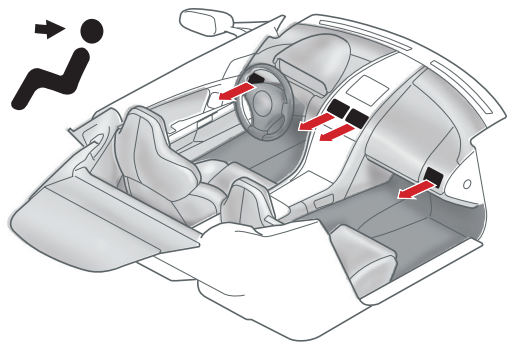

Face and Feet

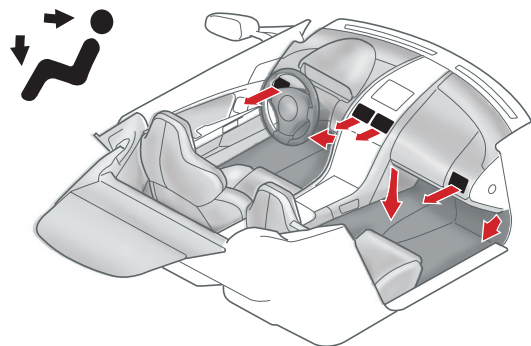


Feet Only

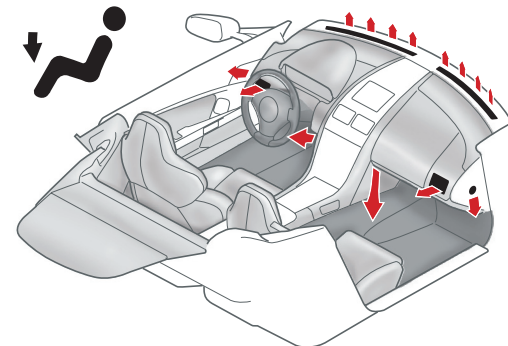


VB Vantage

Defroster and Feet

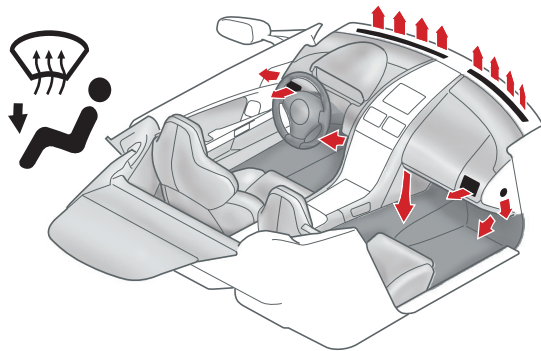


Defroster Only

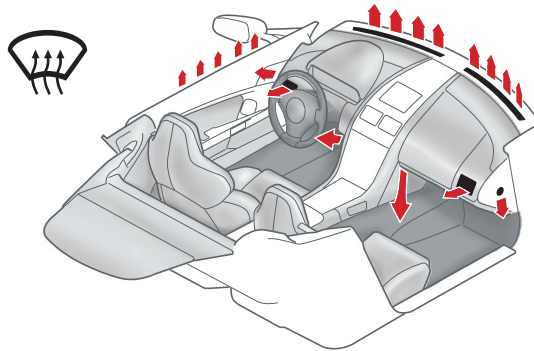

Adjusting the Vents

To adjust the air flow vents:

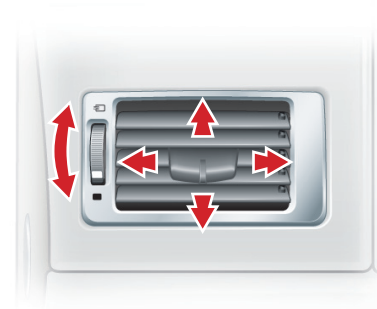

Automatic Operation

When using the air conditioner, mist may come out from the vents. This is not a sign of trouble but a result of humid air being suddenly cooled.

Turn the fan speed dial to **Auto** and set the required in-vehicle temperature (read the actual temperature setting in the Infotainment centre screen). The **A/C** button lamp will illuminate.



Adjustments to fan speed, air flow and air recirculation will be made automatically according to the set temperature and interior / exterior conditions.

*When resetting climate control functions other than the fan speed, fan speed will remain set as in automatic mode. Turn the fan speed dial from '**Auto**' to set the required fan speed.*

The **A/C** button lamp will switch off.

Automatic Windshield Defrosting and Demisting

Vehicles not installed with heated front windshield (option).

To defrost or demist the windshield on vehicle start up in extreme cold weather conditions, run the engine at 1500 r.p.m.

1. Turn the fan speed dial to the 'Auto' position.
2. Turn the air flow mode dial to the  position.

If the engine is cold the fan speed will be low for a few minutes until the engine warms up, then the fan speed will increase.

In the  position, outside air intake is automatically selected and air conditioning is automatically started. Recirculated air cannot be selected.

The heated front windshield (option) will activate and remain on for 6.5 minutes.

Automatic defrost and demist will remain active until the air flow mode dial is turned from the  position.

*If '**Auto**' mode is selected and the air flow mode dial is in a setting other than , and the heated front windshield button is operated, then auto defrost mode will be initiated for a period of two minutes. If the heated front windshield is turned off within the two minute period, then the auto defrost mode will cease and '**Auto**' mode will resume.*

Manual Operation

When using the air conditioner, mist may come out from the vents. This is not a sign of trouble but a result of humid air being suddenly cooled.


Heating

1. Select the required mode.



2. Set the required temperature.

The vehicle heater will continue to produce the selected temperature regardless of in vehicle conditions



3. Set the required fan speed.



4. If dehumidifying is required, press the **A/C** button.

Setting the temperature to Max., high or low will not provide the required temperature at a faster rate.

To prevent cool air blowing from the vents when heating immediately after starting a cold engine, the amount of airflow is reduced until the air warms up.

If the windshield fogs up easily, set the mode selector switch to the  position.

If cooler air is required at face level, set the mode selector switch at the  position and adjust the temperature control dial to maintain maximum comfort.


The air to the floor is warmer than air to the face (except when the temperature control dial is set at the extreme hot or cold position).

Cooling (With A/C)

1. Select the required mode.



2. Set the required temperature.



3. Set the required fan speed.



4. Press the **A/C** button (the button lamp will illuminate).


5. Adjust the fan speed and temperature to maintain maximum comfort.
6. To cease dehumidifying press A/C (the button lamp will switch off).

When maximum cooling is required, set the temperature to the extreme cold position and set the air intake to the recirculated air position, then set a fast fan speed.

If warmer air is required at floor level, set the mode selector switch to the  position and adjust the temperature to maintain Maximum comfort. The air to the floor is warmer than air to the face (except when the temperature control dial is set at the extreme hot or cold position).

Ventilation

1. Turn the air flow dial to .
2. Press the **Air Recirculation** button to select outside air (the button lamp will switch off).
3. Set the required temperature.



4. Set the required fan speed.



Windshield Defrosting and Demisting

Vehicles not installed with heated front windshield (option).

To defrost or demist the windshield on vehicle start up in extreme cold weather conditions, run the engine at 1500 r.p.m.

1. Turn the air flow mode dial to the  position.

In the  position, outside air intake is automatically selected and air conditioning is automatically started. Recirculated air cannot be selected.

If the engine is cold the fan speed will be low for a few minutes until the engine warms up, then the fan speed will increase.

2. Set the required temperature and fan speed.

For maximum defrosting and demisting set the temperature and fan speed dials to max.

The heated front windshield (option) will activate and remain on for 6.5 minutes.

To turn off windshield defrosting and demisting rotate the air flow mode dial away from the  position. Set the climate controls to reach the required in vehicle conditions.

Warning

Using the  position with the temperature set at cold may cause the inside of the windshield to mist up. Set the temperature to hot or warm position when using the  position.



ASTON MARTIN


Dehumidifying (With A/C)

Operate the air conditioner in cool or cold weather to help demist the windshield and side windows.

1. Select the required air flow.



2. Press the **Air Recirculation** button to select recirculated air (the button lamp will illuminate).
3. Set the required temperature.



4. Set the required fan speed.




5. Press the **A/C** button (the button lamp will illuminate).
6. To cease dehumidifying press **A/C** (the button lamp will switch off).

Solar / Temperature Sensors

The automatic air conditioner function measures inside and outside temperatures, and sunlight. It then sets temperatures inside the passenger compartment accordingly. To ensure effective operation do not obscure the following sensors.

A - Solar sensor.


B - In-vehicle temperature sensor.

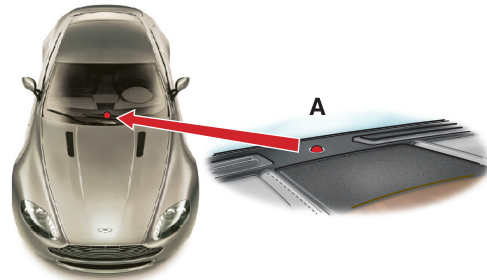

Display Units

To change the display units from °C to °F or °F to °C.

Press and hold in buttons 4 and 5 (A), of the centre stack key pad, while turning the ignition key from position 'I' through to position 'II'.

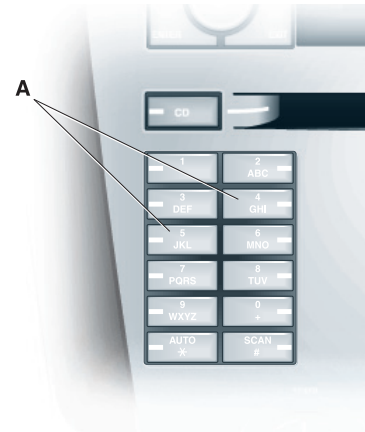

ASTON MARTIN



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN

Audio

Contents

Introduction	7.2	Programme Type (PTY).....	7.14
Display	7.3	Enhanced Other Networks	7.16
Battery Protection Mode	7.3	Automatic Frequency Updating.....	7.16
Controls	7.4	Regional Radio Programmes	7.17
Operation	7.6	Resetting Functions	7.17
Sound Settings	7.7	FM / AM Menus	7.18
Radio Functions	7.9	Multi-Disc CD Player.....	7.19
Radio Data System (RDS)	7.11	Multi-Disc CD Functions	7.19
Alarm.....	7.11	Multi-Disc CD Player Menu.....	7.21
News	7.12		
Traffic Information (TP)	7.12		
Radio Text	7.14		

Introduction

Audio is an integrated part of the Infotainment system along with 'in-vehicle' telephone (option) and Satellite Navigation system (option) functions. The infotainment system can be used easily and conveniently using the common control panel. The control panel display indicates the present function.

Standard System

Radio - AM / FM radio. 10 AM and 20 FM presets are available.

CD - 6 CD autochanger.

Speakers - Two door-mounted 40W speakers, each with mid-range and tweeter units, as well as an 80W subwoofer housed under the rear parcel shelf.

Power Output - 160W.

Premium Audio System (Option)

The Premium Audio System provides the following additional features:

- Door mounted speakers upgraded to 100W
- Two additional rear environment 100W speakers added (each with mid-range and tweeter units)
- Additional 100W centre-fill speaker
- Subwoofer speaker upgraded to 200W
- Dolby Pro-Logic II
- Total power output of 700W

Dolby Surround Pro-Logic II

Dolby Surround Pro-Logic II, with its centre speaker in the dashboard, provides more realistic sound reproduction.

The normal left and right stereo channels are divided into left-centre-right. In addition, ambient surround sound is produced through the rear speaker channels.

Dolby Surround Pro-Logic II and the Dolby icon are trade-marks of Dolby Laboratories Licensing Corporation. The Dolby Pro-Logic II Surround System is manufactured under license from Dolby Laboratories Licensing Corporation.



Display

The display shows the function currently in use, for example menu options, messages, telephone numbers or settings. In daylight the information is displayed against a light background. In darkness it is displayed against a dark background. Clean the display with a soft, dry cloth. Never use cleaning agent.

This display is also used for the climate control system.

Battery Protection Mode

Using the vehicle electrical systems, i.e. the infotainment system, with the ignition key at position 'I' (engine off) will drain the battery charge. Eventually the battery will drain to such a low level that it will not start the engine.

Replace the battery as soon as possible, if the battery is not capable of starting the engine.

To avoid this happening, a series of safety mechanisms shut down non-essential electrical systems before excessive battery drain takes place.

Warning messages will appear indicating the state of the battery charge.

(Refer to 'Battery Protection Mode', page 11.30).

Controls



(1) Enter - Select in the menu, activate a selection or activate the telephone from stand-by mode.



(2) AM / FM - Switch between FM1, FM2 and AM.



(3) Power - Press for audio On / Off.



(4) Volume - Rotate for volume control.




(5) Mute - Press and release to mute the audio system / pause a CD at any time. Press and release again to unmute

Turning the



dial left or right will also unmute the audio / CD.

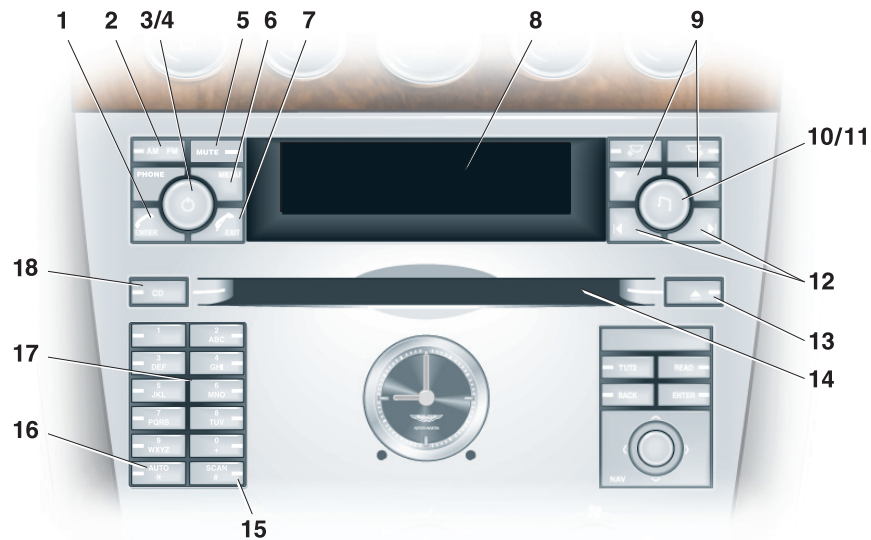



(6) Menu - Opens the main menu.



(7) Exit - Scroll back in the menu, cancel a selection, put the telephone (option) in stand-by mode, or erase the previous character when entering text and numbers.

(8) Display - Presents options, menus and information.



(9) Navigation buttons - Scroll up / down in the menus or scroll forwards / back when entering text and digits or select preset stations.



(10) Sound - Press to select sound settings. Rotate to set.



(11) Tuning - Turn to manually search stations, change tracks (CD) or scroll up / down in the menu.



(12) Search - Press left or right once to auto search the next station. Press and hold (left or right) to manually select a station.



(13) Eject - CD.



(14) Opening for insert / eject - CD.



(15) Scan - Automatic station search.

(16) Auto - Find and store the strongest stations.



(17) Buttons 0 – 9 - Station presets, CD changer position, number / character buttons for the telephone (option) and menu short-cuts.



(18) CD mode - CD.

Menus

Press  to access the main menu. The menu for the active audio source (i.e. radio) will be available.

Audio Settings cannot be made if the audio system is not switched on.

Using the menu:

- Use   (9) or  (11) to scroll up / down in the menu.
- Press  to cancel, decline an option, or go back one step in the menu structure.
- Press  or  to confirm, select or scroll from one submenu to the next submenu.

Operation

The audio system is available with the ignition key at least in position 'I' and remain active until the ignition key is removed from the ignition.

Audio On / Off

Press  to switch the audio system On / Off.

If the audio system is On when the ignition is switched off and the key removed, it will reactivate automatically the next time the ignition is moved to position 'I'.

Selecting the Sound Source

Select the sound source with the  or  buttons.

Volume Control

Turn  clockwise or anticlockwise to raise or lower the volume. This vehicle has a speed-dependent volume feature known as active sound control (ASC). This adjusts the volume automatically depending on the speed of the vehicle.

Pause Mode

When the volume is turned to zero, the CD player switches to pause mode. Reactivate the CD player by turning up the volume.

Volume Control for TP, PTY, News and Alarms

If a CD is playing when the radio receives a traffic announcement, the CD player enters pause mode. The announcement is played at the volume selected for that type of message. The system then returns to the volume selected for the CD player. If the volume is adjusted while the announcement is broadcast, this new volume is saved and used for the next bulletin.

Sound Settings

Sound Setting	Shown on the display
Bass	Bass
Treble	Treble
Balance between the front and rear speakers	Fader (Premium option)
Balance between the left and right hand speakers	Balance
Level for subwoofer	Subwoofer (Premium option)
Level for Equalizer	Equalizer (Premium option)
Level for centre speaker	Centre (Premium option)
Level for surround sound	Surround (Premium option)

Selecting a Sound Setting

1. Press  repeatedly until the required sound setting is shown on the display.
2. Rotate  to set the level. The display shows a max. / min. scale. The middle indicates the normal position. The level for the centre speaker can only be set if either Dolby Pro-Logic II (option) or 3 Channel has been selected from the sound source menu.

Setting the Surround Sound

1. Press . Select the sound source menu and press



2. Select *Audio Settings...* and press .

3. Select *Surround AM/FM...* or *Surround CD...* and press



4. Select *Dolby Pro-Logic II*, *3 Channel* or *Off* and press



5. Press  to return to the main display.

The symbol for Dolby Pro-Logic II (option) is shown on the display if Dolby Pro-Logic II is selected. '3CH' is shown on the display if 3 Channel is selected.

Off means the system is in normal stereo mode.

Equalizer - (Option)

Fine adjustment of the sound from the speakers:

1. Press . Select the sound source menu and press



2. Select *Audio Settings...* and press .

3. Select *Equalizer* and press .

4. Use the  dial to set the level.

5. Use the   buttons to select the next frequency. Five frequencies can be adjusted.

6. Press  to save any changes and exit. Press  to exit without saving any changes.

Tuning

1. Select FM1, FM2 or AM using the  button.
2. Press the left or right   buttons to search for the next strong station.
3. Press left or right again to initiate a new search.

Manual Tuning

There are two ways to tune into a station manually.

1. Turn the  dial to set the desired frequency.
2. Press and hold the left or right   button.

The frequency rolls slowly in the selected direction and increases speed after a few seconds. Release the button when the desired frequency appears on the display.

If the frequency needs adjusting, touch one of the arrows.

Storing Stations

10 stations can be stored for FM1, FM2 or AM (a total of 30 stations).

To store stations on the preset buttons 0-9.

1. Tune to the desired station.
2. Press and hold the button (0-9) the station is to be stored on. The sound will be muted for a couple of seconds and 'Station Stored' will show on the display.

Autostoring Stations

Up to ten AM or FM stations can be automatically tuned and stored in a separate memory.

If more than ten stations are found, the ten strongest are selected. This function is particularly useful if you are in an area in which you are unfamiliar with the radio stations and their frequencies.

1. Select FM1, FM2 or AM using the  button.
2. Start the search by pressing and holding  (more than 2 seconds).
3. 'Autostoring.' appears on the display and a number of strong stations (max. 10) from the selected frequency band are stored in the autostore memory. If there are no stations that are sufficiently strong, 'No AST Found' appears on the display.

The stations are stored on buttons 0-9. When the radio is in autostore mode, 'Auto' is shown on the display. Return to the ordinary radio mode by pressing either   or by pressing and releasing  (less than 0.7 seconds).

To access the Auto store memory press and release , then select a station with buttons 0-9.

Scanning

Scanning automatically searches for the next strong FM or AM station signals. When the radio finds a station, scanning pauses for approximately 8 seconds, after which it continues.

Scanning for a station:

1. Select FM or AM with the  button.
2. Press . 'Scan' appears on the display.
3. Press  or  to accept the station.

Radio Data System (RDS)

RDS is a system that links together specific network transmitters. It is used, for example, to tune the correct frequency of a station irrespective of the transmitter or the active audio source (e.g. CD). The system can also be used for receiving traffic information (TP) and for finding broadcasts of a specific type. Radio text is also a component of RDS. A radio station can transmit information about the radio programme currently being broadcast.

Some radio stations do not use RDS or only use a limited range of its features.

Automatic Search for Transmitter (PI Seek)

'PI seek' appears on the display when reception is poor for the selected station. The radio automatically searches for the strongest transmission for that station. 'PI seek Exit to cancel' is shown on the display until the station is found.

Alarm

Alarms are transmitted automatically. The function cannot be deactivated. 'Alarm!' is shown on the radio display when an alarm message is broadcast. The function is used to warn motorists of serious accidents or disasters.

News

Messages with a programme code (such as news from RDS stations) will interrupt other audio sources at the volume set for this. As soon as the news broadcast is finished, the audio system returns to the previous audio source and resumes the previous volume setting.

Activating / Deactivating News

1. Select FM  or CD  and press .
2. Select the sound source menu and press .
3. Select News. Press  to select or de-select.

A  in the box indicates that News is active.

4. Press  to return to the main display.

When active 'NEWS' is shown on the display.

When active News appears on the display. Press  to cancel the news item in progress. The News function remains active and the radio waits for the next news programme.

Activating News From Current Station

1. Select the radio with the  button.
2. Activate the station broadcasting the news items and press .
3. Select *Advanced Audio Settings...* and press .
4. Select *News station...* and press .
5. Select *News from current station* and press .

Traffic Information (TP)

Traffic information (TP) from RDS stations interrupts other sound sources. The message is heard at the volume set for this specific feature. As soon as the message ends, the audio system returns to the previous sound source and volume setting.

Activating / Deactivating TP

1. Press . Select the sound source menu and press .
2. Select TP. Press  to select or de-select.

A  in the box indicates that TP is active.

3. Press  to return to the main display.

When active 'TP' is shown on the display.

If the set station does not broadcast traffic information, 'TP)))' appears on the display. Press  to exit the current traffic announcement. TP remains active and the radio waits for the next traffic announcement.

TP From a Specified Station

1. Select AM or FM with the  button.
2. Activate the station from which traffic information is to be received and press .
3. Select the sound source menu and press .
4. Select *Advanced radio settings...* and press .

5. Select *TP...* and press .
6. Select *TP station...* and press .
7. Select *TP from current station*.
8. Press  to return to the main display.

TP From All Stations

1. Press . Select the sound source menu and press .
2. Select *Advanced radio settings...* and press .
3. Select *TP...* and press .

4. Select *TP Station...* and press .
5. Select *TP from all stations* and press .
6. Press  to return to the main display.

TP Search

This function allows you to listen to traffic information when travelling between different areas and countries without selecting a station.

1. Press . Select the sound source menu and press



2. Select *Advanced radio settings...* and press .

3. Select *TP...* and press .

4. Select *TP search*. Press  to select or de-select.

A  in the box indicates that *TP Search* is active.

5. Press  to return to the main display.

Radio Text

Some RDS stations broadcast information, such as about programme content and artists.

Activating / Deactivating Radio Text

1. Press . Select the sound source menu. Press .
2. Select *'Radio text'*. Press  to select or de-select.

A  in the box indicates that *Radio Text* is active.

3. Press  to return to the main display.

Programme Type (PTY)

Use the PTY function to select between the various programme types.

Activating / Deactivating PTY

1. Press . Select the sound source menu and press .

2. Select *PTY...* and press .

3. Select *'Show PTY'*. Press  to select or de-select.

A  in the box indicates that *PTY* is active.

4. Press  to return to the main display.

When active the set station's programme type will be shown on the display, e.g. Current affairs, Information, Drama, Rock music, etc.

Not all radio stations have a PTY designation.

Searching for a Specific PTY

1. Select FM1 or FM2. Press .
2. Select the sound source menu and press .
3. Select *PTY...* and press .
4. Scroll to *Select PTY...* and press .
5. Press  for one or more of the listed programme types. A  in a box indicates that programme type is activated.

The PTY symbol on the display lights up when the first selection is made and the radio is set to stand-by for PTY.

6. Press  to go back.
7. Select *Search PTY* and press .

If the radio finds a station with the selected programme type, this is played.

If a station with the selected programme type can not be found, the screen shows 'No Station Found' and the radio returns to the previous frequency.

PTY is then on stand-by until the selected programme type is broadcast. When this happens, the radio automatically switches to the station broadcasting the selected programme type.

Clear All PTY

1. Select the sound source menu and press .
2. Select *PTY...* and press .
3. Select *Clear all PTY...* and press  to confirm.

The PTY symbol disappears from the display and the radio returns to normal mode.

Enhanced Other Networks

With Enhanced Other Networks (EON) activated, traffic announcements and news broadcasts interrupt radio programmes.

The function has three levels:

Local - Only interrupts if the signal is strong.

Distant - Interrupts even if the signal is weak.

Off - Deactivated.

Activating / Deactivating EON

1. Press . Select the sound source menu and press



2. Select *Advanced radio settings...* and press .

3. Select *EON...* and press .

4. Select *Local*, *Distant* or *Off* and press .

5. Press  to return to the main display.

When active 'EON' is shown on the display.

Automatic Frequency Updating

The Automatic Frequency Updating (AF) function is normally activate and ensures that the radio tunes to the strongest available transmitter.

Activating / Deactivating AF

1. Press . Select the sound source menu and press



2. Select *Advanced radio settings...* and press .

3. Select *AF*. Press  to select or de-select.

A  in the box indicates that AF is active.

4. Press  to return to the main display.

When active 'AF' is shown on the display.

Regional Radio Programmes

The regional function is normally deactivated. When the function is activated you can continue to listen to a regional broadcasts even if the signal is weak.

Activating / Deactivating Regional

1. Press . Select the menu for the sound source and press .
2. Select *Advanced radio settings...* and press .
3. Select *Regional*. Press  to select or de-select.

A  in the box indicates that *Regional* is active.

4. Press  to return to the main display.

When active 'Reg' is shown on the display.

Resetting Functions

Resets all radio settings to the original factory settings.

1. Press . Select the menu for the sound source and press .
2. Select *Advanced radio settings...* and press .
3. Select *Reset all...* and press .
4. Press  again to confirm.



ASTON MARTIN

FM / AM Menus

FM Menu

News • On / Off* TP • On / Off* PTY... • Select PTY... • Search PTY • Clear all PTY... • Show PTY (On / Off) Radio text • On / Off*	Advanced Radio Settings... • TP... • TP station... • TP search • On / Off* • News station... • AF • On* / Off • Regional • On / Off* • EON • Off / Local / Distant* • Reset all...
--	---

Audio Settings...

- Surround AM / FM
 - Dolby Pro-Logic II / 3 Channel / Off*
- Surround CD
 - Dolby Pro-Logic II / 3 Channel / Off*

- Equalizer
- Auto. volume control
 - Low / Medium / High
- Reset all...

* Default / Factory Setting

AM Menu

Audio Settings... • Surround AM / FM... • Dolby Pro-Logic II / 3 Channel / Off* • Surround CD... • Dolby Pro-Logic II / 3 Channel / Off*	• Equalizer • Auto. volume control • Low / Medium / High • Reset all... * Default / Factory setting
---	---

Multi-Disc CD Player

CDs

Use only 12 cm CDs.

Do not use CDs with adhesive disc labels. The heat from the CD player can cause the label to come loose from the disc. The CD player could be damaged.

If the quality of the CD does not comply with the requirements of standard EN60908 or if it has been recorded using poor equipment, sound quality may be poor or playback interrupted.

The Multi-Disc CD Player can hold up to six discs.

Loading CDs

1. Press the  button.
2. Select an empty slot using buttons 1-6 or the   buttons. The display shows which slots are empty.
3. Load the CD.

Ensure 'Insert disc' is displayed before inserting the disc.

Selecting a CD

Select the CD to play using buttons 1-6 or the   buttons. The number of the disc and track are shown on the display.

Multi-Disc CD Functions

Changing Tracks

Press the left or right   button to skip to the previous or next track or turn  clockwise or anti-clockwise to skip to the previous or next track. The track number is shown on the display.

Fast Forward / Reverse

Press and hold the left or right   button to search within a track or the whole disc. Searching continues for as long as the button is depressed.

Random Play

Plays tracks from a CD or CDs in random order.

1. Press . Select the sound source menu and press .
2. Select *Random...* and press .
3. Select *Single disc* or *All discs* and press . A  in the box indicates that single disc (play random tracks from a single disc) or all discs (play random tracks from all discs) is activated.
4. 'RND' or 'RND ALL' is shown on the display while the function is active. Press the right   button to select the next random track.
5. Press  to deactivate random play.

Scan

Scan plays the first ten seconds of each track.

1. Press .
2. While the system scans press  to stop the scan and play the current track.

Disc Text

Some CDs have title information. The information is displayed as text on the display.

Activating / Deactivating Disc Text

1. Press . Select the sound source menu and press .
 2. Select *Disc text*. Press  to select or de-select.
- A  in the box indicates that Disc Text is active.
3. Press  to return to the main display.

If information is stored on the disc, this is shown on the display.

Multi-Disc CD Player Menu

Ejecting one CD

Press .

The CD remains ejected for only 12 seconds. The Multi-Disc CD Player will then feed the CD back in and switch to pause mode. Press  to reactivate the player.

Ejecting all CDs

Press and hold  (for longer than 2 seconds). The entire magazine is emptied, CD by CD. 'Eject all' is shown on the display.

Random...

- Off*
- Single disc
- All discs

News

- On / Off*

TP

- Off* / On

Disc text

- On / Off*

Audio Settings...

- Surround AM / FM
 - Dolby Pro-Logic II / 3 Channel / Off*

• Surround CD

- Dolby Pro-Logic II / 3 Channel / Off*
- Equalizer
- Auto. volume control
 - Low / Medium / High
- Reset all

* Default / Factory Setting



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN

Car Phone (Option)

Contents

Introduction	8.2	Calling from the Memory	8.9
Telephone Controls.....	8.2	Call Waiting	8.9
Battery Protection Mode	8.4	Functions During a Call	8.10
Emergency Calls.....	8.4	Phone Book	8.10
Subscriber Identity Module Card	8.5	Messages.....	8.11
IMEI Number	8.5	Text Entries	8.12
Intelligent Driver Information System.....	8.6	Telephone Menus	8.13
Operation	8.6		
Making and Receiving Calls.....	8.7		
Last Dialed Number	8.8		
One-Key Dialling	8.8		

Introduction

The 'in-vehicle' telephone is an integrated part of the Infotainment centre system along with the audio system and Satellite Navigation system (option) functions. The infotainment system can be used easily and conveniently using the common control panel. The control panel display indicates the present function.

Always put traffic safety first.

- Switch off the telephone system when refuelling this vehicle
- Switch off the telephone system near blasting work

The 'in car' telephone installed to this vehicle does not support Unstructured Supplementary Services Data (USSD). Refer to your service provider for more information.

Vehicles installed with the 'in-car' phone and the Bluetooth systems.

If both systems are active then the Bluetooth system will override the in-car' phone system. An active call on the 'in-car' phone will be ended if a call is received on the Bluetooth system or any of the Bluetooth menus are used.

PIN Code

The default PIN code for this 'in-car' phone system is 1234.

For increased security select your own PIN code (Refer to 'Edit codes', page 8.13).

Telephone Controls



(1) Enter - Accept a call, make a menu selection, activate the telephone from stand-by mode. A short press of the **Enter** button displays the last dialled number.



(2) Phone - On / off / stand-by.




(3) Volume - Controls the background noise from the radio etc. during a call.



(4) Menu - Open the main menu.



(5) Exit - Terminate or reject a call, scroll back in the menu, cancel a selection, erase entered digits or characters.

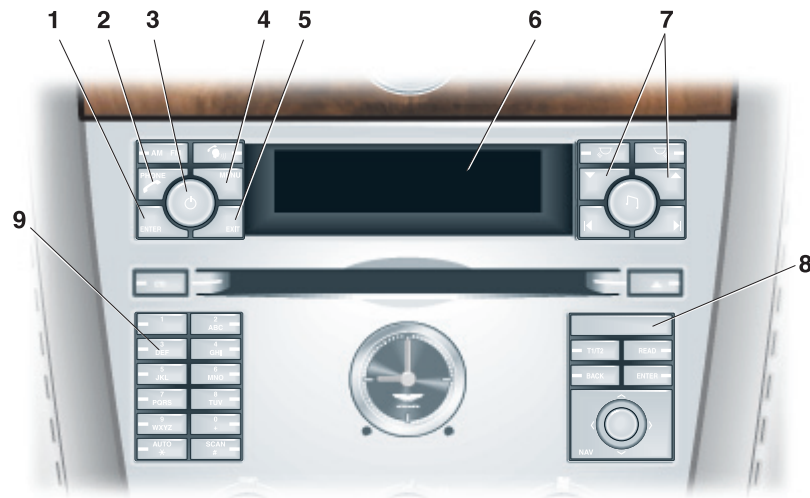

(6) Display - Number and character buttons as well as menu short-cuts.



(7) Navigation buttons - Scroll up / down in the menus, scroll forward / back when entering text and digits.



(8) Sim Card - Remove the panel and insert / remove the sim card.

1	2 ABC
3 DEF	4 GHI
5 JKL	6 MNO
7 PQRS	8 TUV
9 WXYZ	0 +
AUTO *	SCAN #

(9) Keypad - Use to dial number and enter characters.

Microphone

The hands free microphone is integrated in the roof console beside the rear-view mirror.

Speakers

The telephone uses the speakers mounted in the driver and passenger doors.

Battery Protection Mode

Using the vehicle electrical systems, i.e. the infotainment system, with the ignition key at position 'I' (engine off) will drain the battery charge. Eventually the battery will drain to such a low level that it will not start the engine.

Replace the battery as soon as possible, if the battery is not capable of starting the engine.

To avoid this happening, a series of safety mechanisms shut down nonessential electrical systems before excessive battery drain takes place.

Warning messages will appear indicating the state of the battery charge.

(Refer to 'Battery Protection Mode', page 11.30).

Emergency Calls

Emergency calls to alarm centres can be made without a SIM card as long as there is coverage by a GSM operator.

Making an Emergency Call

1. Press  to activate the telephone.
2. Ring the emergency number that applies to your region.
3. Press  .

Subscriber Identity Module Card


The telephone can only be used with a valid Subscriber Identity Module (SIM) card. The card is managed by different network operators. Contact your network operator if you experience difficulties with the SIM card.

Insert the SIM card to start using the telephone.


1. Ensure that the phone is switch 'Off'.
2. If On.

Press  and hold in for three seconds to switch the telephone off.


3. Remove the SIM card holder.

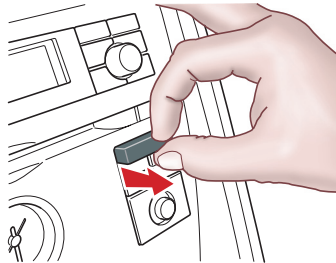

4. Insert the SIM card metal side up. Ensure that the bevelled corner of the SIM card matches the bevel of the holder.

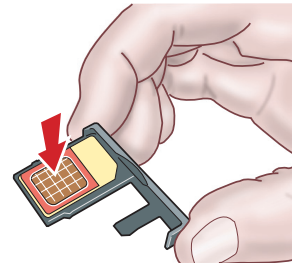

5. Carefully press in the holder again.

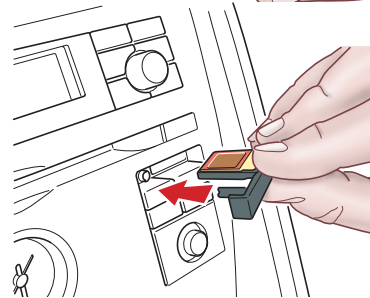

IMEI Number

To restrict a telephone the network operator must be informed of the telephone's IMEI number. This is a 15 digit serial number programmed into the telephone.

To display this number, press '*#06#' on the keypad. Press

 to cancel.

Make a note of this number and keep it in a safe place.

Intelligent Driver Information System

The Intelligent Driver Information System (IDIS) system allows the priority of incoming telephone calls and SMS messages to be reduced so that the driver can concentrate on driving. Incoming calls and SMS messages can be delayed for 5 seconds before they are connected. Missed calls are shown in the display. IDIS can be deactivated using the menu functions (Refer to 'Phone sett...', page 8.13).

Operation

When the telephone system is active or in stand-by mode, a handset is shown in the display.

If the ignition is switched off while the telephone system is on, the system will be on the next time the ignition is switched on. No calls can be received when the telephone system is switched off.

Activate

1. Press .
2. If asked enter the PIN code and press .

Deactivate

Hold  in for three seconds to switch off the telephone system.

Stand-by

Calls can be received while the audio system is active and information from the audio system sources is shown in the display. The telephone must be in active mode to use the other functions of the telephone system.

1. Press  or  to keep the telephone system in stand-by mode.
2. Press  briefly to reactivate the system.

Volume Reduction During a Telephone Call

If the telephone rings when the audio system is on, the audio volume is lowered when the call is answered. When the call is concluded, the volume returns to the previously set level.

The audio system can be muted automatically while a telephone conversation is in progress (Refer to 'Phone sett...', page 8.13).

Satellite Navigation (option) guidance messages will be muted if the telephone is in use. A 'Beep' will sound if a guidance message is transmitted.

Menu Short-cuts

In the menu system, numbers can be used instead of the arrows and  to select the right menu on the main menu level. Each menu selection is numbered. The numbers are shown in the display together with the menu alternative.

Traffic Safety

For reasons of safety, the menu system cannot be accessed at speeds in excess of 5 m.p.h. (8 km/h). Only activities started in the menu system can be completed. The speed limiter can be disconnected using menu function (Refer to 'Phone sett...', page 8.13).

Making and Receiving Calls

To Make a Call

Dial the number from the keypad and press .

Press  and release to erase the last entered character. Press for greater than two seconds, to erase the entire number.

To Receive a Call

Press .

Automatic Answer can also be used. (Refer to 'Auto answer', page 8.13).

To End a Call

Press  on the keypad. The audio system resumes its previous activity.

Reject an incoming call by pressing .

Last Dialed Number

The telephone automatically stores the last telephone numbers / names dialled.

Calling the Last Dialed Number

1. Press  on the keypad (when in active mode).
2. Use the   buttons to scroll up or down through the last numbers dialled. These are shown in the display.
3. Press .

One-Key Dialling

A number stored in the phone book can be linked to a one-key dial button (1-9).

Storing a Number

1. Press .
2. Select 'Phone book...'. Press .
3. Select 'One-key dial...'. Press .
4. Select 'Select Number.'
5. Use the   buttons to scroll up or down to select which number is to be the speed dial number. Press  to confirm.
6. Use the keypad to enter the name or telephone number to search for in the phone book. Press  to select.

Using One-Key Dialling

Hold in the desired speed dial button for approximately two seconds to make the call or press the number briefly followed by pressing .

When the telephone is switched on, it takes a while before speed dialling is available. Menu (Refer to 'Phone book...', page 8.13) must be activated to use a speed dial number.

Calling from the Memory

1. Press .
2. Select 'Phone book...'. Press .
3. Scroll to the desired name using the   buttons or press the first letter of the name (or enter the entire name). Press .
4. Select 'Call'. Press .
5. Press  to dial the selected number.

Call Waiting

If call waiting is active (Refer to 'Call options...', page 8.13) a two-tone signal during a telephone call indicates that there is another incoming call.

The display shows 'Answer?'.

To Receive an Incoming Call

1. Press . Your current call will be put in hold mode.
2. Press  to finish the call and return to a call on hold.

To Reject an Incoming Call

Press .

Functions During a Call

Several functions are available during a call. During a call use the   buttons to scroll up / down. Press  to make a selection.

Hold - Choose if the current call is to be held or resumed.

Phone book - Show phone book.

Additional functions are available during a call while another call is on hold.

Three-way calling - Conference call (provides further options).

Switch - Select between two calls.

Phone Book

Telephone numbers and names can be stored in either the telephone memory or the SIM card memory.

If the number of the person calling is stored in the phone book, the name of the caller will be shown in the display.

The telephone memory can store up to 255 names.

Storing Telephone Numbers with Names

1. Press .
2. Select 'Phone book...'. Press .
3. Select 'New number'. Press .
4. Enter a name. Press .
5. Enter a number. Press .
6. Select 'SIM' or 'Phone' to save the number. Press .

Copy to...

Copy a phone book entry from the phone to the SIM card and SIM card to the phone.

1. Select .
2. Select 'Phone book...'.
3. Select 'Copy all...'.
4. Select 'From SIM card to Phone book' and press .

Erase Entries

1. Select .
2. Select 'Phone book...'.
3. Select 'Search'.
4. Specify the first letter of the name (or the entire name) and press .
5. Scroll to the name to be erased and press .
6. Select 'Erase' to remove the name. Press  to confirm.

Messages

A double 'Beep' will sound when a SMS message is received.

To Read a Message

1. Press .
2. Select 'Messages...'. Press .
3. Select 'Read'. Press .

Received and saved messages will be viewed.

4. If required, use the   buttons to scroll up or down.
5. Press  to leave the message screen.

To Write / Send a Message

1. Press .
2. Select 'Messages...'. Press .
3. Select 'Write New'. Press .
4. Enter text using the keypad. When complete press .

5. Select 'Send'. Enter the phone number to send to.

Select 'Save' to save the message. Select 'Edit' to return to the message and edit.

6. Press  to send.

Text Entries

Press the button with the relevant character on the keypad. Press once for the first character, twice for the second character and so on. Press 1 for space.

1	space 1-? ! , . : " ' ()	6	m n o 6 ñ ö ò Ø
2	a b c 2 ä å à æ ç	7	p q r s 7 ß
3	d e f 3 è é	8	t u v 8 ü ù
4	g h i 4 ì	9	w x y z 9
5	j k l 5	0	+ 0 @ * # & \$ £ / %

***** if you enter two letters in a row from the same button, press * between them or wait a few seconds

Switch between upper and lower case

Exit Erase the last entered character. If you press this for two seconds or more, the entire number or text is deleted.

Cancelling Text Input

1. Erase all entered characters with a long press on the  button.
2. Return to the menu with an additional long press on the  button.

Telephone Menus

Call Register... • Missed calls • Received calls • Dialled No. • Erase list... • All calls • Missed calls • Received calls • Dialled No. • Call duration... • Last call • Call count • Total time • Reset timers	Messages... • Read • Write new • Message sett. • SMSC number • Validity time... • Select time from list • Message type... • Text • Fax • Paging	Phone book... • New number • Search • Copy all... • SIM to phone • Phone to SIM • One-key dial... • Active / Select number • Erase SIM • Erase phone • Memory status	Call options... • Send my number • Call waiting • Auto answer • Auto redial • Diversions • All calls • When engaged • Not answered • Not reachable • Fax calls • Data calls • Cancel all	Phone sett... • Network... • Automatic • Manual select... • Language... • Select language • SIM security... • On / Off / Auto • Edit codes • PIN code • Phone code	• Sounds... • Ring volume • Ring signal • Mute radio • Msg. beep • Traff. safety... • Menu lock • IDIS • Factory sett...
---	---	--	--	--	--



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN

Bluetooth (Option)

Contents

Introduction.....	9.2	Call Waiting.....	9.12
System Active / Inactive.....	9.2	Sending DTMF Tones.....	9.13
Controls.....	9.3	Bluetooth Contact List.....	9.14
Getting Help.....	9.5	System Prompts.....	9.16
Connecting a Phone.....	9.5	Selecting a Language.....	9.17
Making Calls.....	9.8	Troubleshooting.....	9.18
Receiving Calls.....	9.10	Definitions.....	9.18
Ending Calls.....	9.11	LED Indicator Functions.....	9.19
Transfer a Call.....	9.11		
Reject a Call.....	9.12		
Mute and Un-mute a Call.....	9.12		

Introduction

The Bluetooth system installed in this vehicle offers the following features:

- Seamless, wireless handsfree audio through a Bluetooth connection
- Digital audio interface with high quality, full-duplex, handsfree speech
- Speaker Independent Voice Recognition (VR)
- Voice-driven menu prompts
- Automatically mutes the radio
- Automatically pauses the CD player during calls
- Noise reduction and acoustic echo cancellation
- Compliance with Bluetooth Hands Free 0.96 and 1.0 profiles
- Audio through the door speakers

Vehicles installed with the 'in-car' phone and the Bluetooth systems.

If both systems are active then the Bluetooth system will override the 'in-car' phone system. An active call on the 'in-car' phone will be ended if a call is received on the Bluetooth system or any of the Bluetooth menus are used.


When in voice recognition (VR) mode:

- Always **speak normally**. The system reacts to a normal voice pattern. Do not shout or speak erratically
- When prompted to speak, speak after the 'beep'


System Active / Inactive

The Bluetooth system is only active when the vehicle ignition is switched to **On**. If, during a call, the ignition is switched to **Off** the call will transfer to the mobile phone after approx. 6 seconds.

The Bluetooth system will not recognize a mobile phone, even if it is 'paired' (Refer to page 9-5), if the mobile phone does not have Bluetooth enabled. For more information refer to the user's guide for your mobile phone.

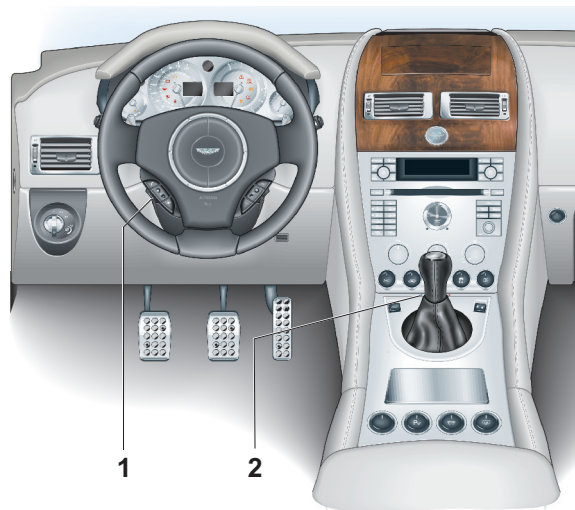

1. Control pad.
2. System LEDs (Refer to 'LED Indicator Functions', page 9.19).
3. Integrated microphone (behind the rear view mirror).
4. Integrated amplifier (not shown).
5. Answer.
6. Volume.
7. End.
8. Talk.

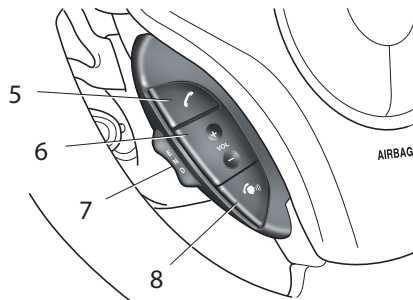

(5) Answer Button

If	'Press and Release'
when receiving a call	- to answer that call.
when the system is not on a call	- to make a call using the last number dialled.
while a call is in progress	- to toggle between hold and resume.
while on a call and after a call waiting notification is received	- to answer the waiting call.
with two active calls	- to toggle between calls.
If	'Press and Hold'
during an active call	- to switch audio between handsfree and privacy modes.

(6) Volume Button**VOL**

If	'Press and Release' (+ or -)
during a call	- to increase or decrease the Bluetooth speaker volume.
the microphone is muted	- to un-mute.
If	'Press and Hold' (+ or -)
during a call	- to mute the microphone

(7) End Button**END**

If	'Press and Release'
during an active call when the system is in voice recognition (VR) mode	- to end that call - to cancel VR mode.
when receiving an in coming call when in a pairing session	- to reject that call. - to cancel the pairing session.
If	'Press and Hold'
during an active call (including multi-party calls)	- to end all calls.
when the system is not on a call	- to terminate the Bluetooth connection.

(8) Talk Button**Talk**

If	'Press and Release'
during normal operation	- once to initiate a voice recognition (VR) session. When a VR session starts, you will hear a prompt and then a short 'beep'. The 'beep' indicates that the system is waiting for a verbal command.
a prompt is being played	- to skip the prompt and go to the 'beep'.
'Press and Hold'	
Initiates the paring process (Refer to 'Connecting a Phone', page 9.5).	

Getting Help

If	Say
while learning to use the system, or whenever a reminder is required	- 'Help' into the microphone. The system includes help prompts in every menu.
whenever you are prompted for a yes or no	- 'Repeat'. The system will repeat the question.

Connecting a Phone

A connection between the vehicle Bluetooth system and a phone is called a 'Paired Link'.

When a paired link is set up the Bluetooth system remembers the phone's ID. Once the Bluetooth system and the phone are paired, the Bluetooth system automatically connects to your phone every time you start your vehicle or power up the vehicle's Bluetooth system.

This system supports paired links with up to four phones.

The process of initiating a Bluetooth connection with a phone varies per phone manufacturer. For more information refer to the user's guide for your mobile phone.

Initial Pairing

Use this procedure only if there are no handsets paired to the system.

Using Voice Recognition

1. Press the  button. When prompted say 'Pair phone'. The system responds with 'Set your phone in scan mode and enter 1234 when prompted for the passcode'.
2. When the phone displays 'Aston Martin' select the device. The phone displays the passcode entry screen.
3. Enter the passkey (1234). The phone displays 'PIN verified' and the system will say 'Pairing complete. Connection in progress'.

*Some phones will ask you to accept the BT link. Enter **Yes**.*

Upon successful completion the system say's 'Connection is complete. Phone <n> ready for use'.

Additional Pairing

To pair additional phones to the system:

Using Voice Recognition

1. Press the  button. When prompted say 'Set-up menu'. The system responds with 'Set-up menu. Please say a command'.
2. Say 'Pair phone'. The system responds with 'Set your phone in scan mode and enter 1234 when prompted for the passcode'.
3. When the phone displays 'Aston Martin', select the device. The phone will display the passcode entry screen.
4. Enter the passkey value provided by the system. The phone confirms that the PIN is verified and the system will say 'Pairing complete. Connection in progress'.

Some phones will ask you to accept the BT link. Enter Yes.

Upon successful completion the system will say
'Connection is complete. Phone <n> ready for use'.

Selecting a Phone

The phone to be selected must be in close proximity to the Bluetooth system.

Using Voice Recognition

1. Press the  button. When prompted say 'Set-up menu'. The system responds with 'Set-up menu. Please say a command'.
2. Say 'Connect phone <n>'. The system responds with 'Connecting phone <n>'. Upon successful completion the system says 'Connection complete'.

List Paired Phones

Using Voice Recognition

1. Press the  button. When prompted say 'Set-up menu'. The system responds with 'Set-up menu. Please say a command'.
2. Say 'List phones'. The system responds with 'The following phones have been paired: phone 1, etc.'.

Removing a Paired Phone

Using Voice Recognition

1. Press the  button. When prompted say 'Set-up menu'. The system responds with 'Set-up menu. Please say a command'.
2. Say 'Remove phone <n>'. The system responds with 'Removing phone <n>. Are you sure?'.
3. Say 'Yes'. The system responds with 'Phone <n> removed'.

Removing All Phones

Using Voice Recognition

1. Press the  button. When prompted say 'Set-up menu'. The system responds with 'Set-up menu. Please say a command'.
2. Say 'Remove all phones'. The system responds with 'Are you sure you want to remove all phones?'.
3. Say 'Yes'. The system responds with 'All phones removed'.



ASTON MARTIN

Making Calls

When connected, all of these calls are handsfree. Terminate a VR session at any time by pressing the  button.

Placing a Call with Voice Recognition (VR)

A phone number can be entered as a whole number or by two or more segments. A segment can include up to 15 digits. An entire number can include no more than 32 digits. If required a number can also begin by saying either 'Star' (*), 'Pound' (#) or 'Plus' (+).

Speak numbers as continuous digits. For example, dictate 555-2211 as '5-5-5-2-2-1-1', not '5-5-5-twenty-two-eleven'.

Calling with a Whole Number

Using Voice Recognition

1. Press the  button. When prompted, say 'Dial Number'. The system responds with 'Number please?'.
2. Dictate the phone number as a single set of digits (without pauses between digits). The system recites the digits heard.
3. If the number recited by the system is correct, say 'Dial'. The system responds with 'Dialling'.

Calling with Number Segments

Using Voice Recognition

1. Press the  button. When prompted, say 'Dial Number'. The system responds with 'Number please?'.
2. Dictate the first segment of the whole number (For example, say the 1st three numbers.) The system recites the numbers heard.
3. Dictate the next segment of the whole number. The system recites the numbers heard. Repeat until you have entered the complete phone number.
4. When the complete number is recited by the system, say 'Dial'. The system responds: 'Dialling'.

To delete a phone number segment, say '**Clear**' when prompted for the next segment. The system responds with '**Last String Cleared**', echoes any remaining segments, and waits for you to dictate a new segment.

To clear all phone number segments dictated so far, say '**Clear All**' when prompted for the next segment. The system clears all segments and returns to the 'Number please?' prompt.

Calling a Number from the Bluetooth Contact List

Using Voice Recognition

1. Press the  button. When prompted, say 'Call <contact>'. The system responds with 'Do you want to call <contact>?'.
2. If the number recited by the system is correct, say 'Yes'. The system responds with 'Calling'.

The contact must be a valid contact stored in the Contact List (Refer to 'Bluetooth Contact List', page 9.14).

Calling a Number Using Phone Voice Tags

The voice tag must already be stored in the mobile phone.

Using Voice Recognition

1. Press the  button. When prompted, say 'Phone voice tag'. The system responds with 'Phone voice name, please'.
2. Say '<voice tag>'. The system calls the number associated with the phone voice tag.

Calling a Number Using Speed Dial

Using Voice Recognition

1. Press the  button. When prompted, say 'Speed Dial'. The system responds with 'Speed dial number, please'.
2. Recite the speed dial number. The system repeats the number it heard and asks: 'Is this correct?'.
3. If the number recited is correct, say 'Yes'. The system responds with 'Dialling', and places the call.

Speak speed dial numbers as continuous digits. For example, dictate speed dial location 22 as '2-2', not 'twenty-two'.

Using Redial

Using Voice Recognition

Press the  button. When prompted, say 'Redial'. The system responds with 'Redialling'.

Using the Control Pad

Press the  button.

Receiving Calls

Using the Control Pad

Press the  button.

Using the Phone

Press the phone's 'answer call' key.

Caller ID

When receiving an incoming call, the system responds with 'Call from < Caller ID >', if available.

If Caller ID is not available:

- The system plays the 'in-band' ring tone, if the phone supports it.
- If no 'in-band' ring tone is supported, the system generates a local ring tone.

Ending Calls

Using Voice Recognition

Press the  button. When prompted say 'Hang Up'. The system responds with 'Call ended'.

Using the Control Pad

Press the  button.

Using the Phone

Press the phone's 'end call' key.

Transfer a Call

From the Vehicle to Your Phone

Using Voice Recognition

Press the  button. When prompted, say 'Privacy Mode'.

Using the Control Pad

- Press and hold the  button
- Turn the vehicle ignition to Off (If your phone asks to switch to handset mode, press **Yes**.)

From Your Phone to the Vehicle

Using Voice Recognition

Press the  button.

When prompted, say 'Handsfree Mode'.

Using the Control Pad

- Press and hold the  button
- Turn the vehicle ignition to On

Some mobile phones will end the Bluetooth connection. If this happens the only way of transferring to the vehicle is by the mobile phone menu (if supported)

Reject a Call

Using the Control Pad

Press the  button.

The system responds with 'Call rejected'.

Using the Phone

Press the phone's **ignore**, **End**, or **Hang up** key. The system responds with 'Call ended'.

Mute and Un-mute a Call

Using the Control Pad

Mute - Press and hold either the  **Up** / **Down** button.

Un-mute - Press and release either the  **Up** / **Down** button.

Using Voice Recognition

Mute - Press the  button. When prompted, say 'Mute'.

Un-mute - Press the  button. When prompted, say 'Un-mute'.

Call Waiting

If the mobile phone supports call waiting.

When you are on a call, an audible 'beep' signals a 2nd call.

Some mobile phone give two 'beeps'

Using the Control Pad

Press and release the  button to place the 1st call on hold and answer the incoming call.

Press and release the  button to toggle between active calls.

If the  button is not pressed, the incoming call is automatically rejected and sent to voicemail (if set up on the phone).

The incoming call can also be rejected by pressing and releasing the  button.

Sending DTMF Tones

Using Voice Recognition

Press the  button. When prompted, say 'Enter <digits>' to send numbers as DTMF tones.

Using the Phone

Use the phone keypad.



ASTON MARTIN

Bluetooth Contact List

A list of names and phone numbers can be stored in the systems contact list. The list can include up to 20 entries.

A phone must be connected to the system before the contacts list can be accessed.

Adding an Entry

Warning

When adding, deleting or listing contacts ensure that the vehicle is stationary with the parking brake applied, and the gear selector in 'P' or 'N' (Automatic) or Neutral (Manual).

Using Voice Recognition

1. Press the  button. When prompted, say 'Contact List'.
If the system responds with 'Contact list is empty. Do you wish to add a contact?', say 'Yes'.
If the system responds with 'Contact list. Please say a command', say 'Add contact'.
If the name sounds like one that is already stored, or if an error is detected, the system asks you to try again.
2. The system responds with 'Please say the name', recite the contact to be stored.
If the name is accepted, the system responds with 'Please say the number for <contact>'.

3. Dictate the phone number either as:
 - An entire number (without pauses between digits)
 - A series of segments (for example, say the 1st 3 digits, then the next 3, etc.), until you have dictated the entire numberThe system repeats the number it heard.
4. When the entire number has been correctly entered say 'Store'. The system responds with 'Contact added. Would you like to add another contact?'.
Say 'No' to return to the system's ready state.
Say 'Yes' to add another entry.

Deleting an Entry

Using Voice Recognition

1. Press the  button. When prompted, say 'Contact List'.
If the system responds with 'Contact list. Please say a command', say 'Delete <contact>'.
If the system responds with 'Contact list is empty. Do you wish to add a contact?', say 'No'. The system then exits to ready state.
2. When the system responds with 'Are you sure you want to delete the contact <contact>?', say 'Yes'. The system responds with 'Contact deleted'.

Listing Contacts

Using Voice Recognition

- Press the  button. When prompted, say 'Contact List'.
- If the system responds with 'Contact list. Please say a command', say 'List contacts'. The system begins to list the stored entries.
- If the system responds with 'Contact list is empty. Do you wish to add a contact?', say 'No'. The system exits to ready state.
- To move quickly through the list, say **'Previous contact'** or **'Next contact'**.



ASTON MARTIN

System Prompts

Voice Prompts

To turn voice prompts On or Off:

Using Voice Recognition

1. Press the  button. When prompted, say 'Set-up menu'.
2. Say 'Prompts On' or 'Prompts Off'. The system responds with 'Prompts On' or 'Prompts Off'.

Announcing a Caller

To turn the Caller Announce function On or Off:

Using Voice Recognition

1. Press the  button. When prompted, say 'Set-up menu'.
2. Say 'Caller Announce On' or 'Caller Announce Off'. The system responds with 'Caller Announce On' or 'Caller Announce Off'.

Audio Indicators

When the system is not in a call or an active VR session, the following audio indicators may be heard:

If supported by the mobile phone.

Message	Meaning
You have a voicemail	- New voicemail message received.
You have a new message	- New SMS message received.
Phone battery low	- Low battery.

These messages are turned off when you turn off voice prompts.

Selecting a Language

When changing the system's language, all contacts in the Bluetooth contacts list are deleted.

Using Voice Recognition

1. Press and hold the  button while turning on the vehicle ignition. Continue holding the  button for at least 10 seconds.
The system enters language selection mode and responds with *'Language Menu. Press volume up or down to change language'*.

2. Use the volume **Up** / **Down** button to scroll through the language choices. As a language appears, the system plays the prompt for that language (For example: *'English. To choose this language, restart the vehicle'*).

When the desired language has been selected, turn the vehicle ignition to Off. Wait for 6 seconds, then switch the ignition to On, the new language is then loaded.



ASTON MARTIN

Troubleshooting

Symptom	Action
New phones will not pair with the vehicle system	• The phone must support Bluetooth Handsfree Profile 0.96 or 1.0. • The system supports a maximum of 4 phones at once. Make sure this limit is not exceeded. • Remove all previous pairings using the 'Remove All' command. The system should then be restarted. • Delete the pairing information on the phone and ensure that the phone is removed from any other systems with which it is paired.

Symptom	Action
Poor VR Performance	• Enter the digits in segments • Speak with no pauses • Talk louder • Speak towards the direction of the microphone • Check that the centre air vents are not facing directly up to the microphone

Volante Only: Driving with the roof lowered.
If making or receiving calls, microphone performance will be degraded.

Definitions

Continuous Voice Recognition - The ability to find word boundaries without requiring pauses between words.

Pair - The process used by two wireless devices, with pass codes as an input, to create the link of the Bluetooth authentication process.

Passcode - A term that is generally synonymous with PIN or passkey, used in the Bluetooth specifications. The passcode is entered into the devices involved in pairing, enabling them to verify the operation.

In this application, to avoid confusion, passkey is used as distinct from PIN, which is used to unlock a handset's SIM card.

Press and Hold - A button press of at least 1 second.

Press and Release - Pressing a button for 100 milliseconds.

Ready State - The system is paired to a phone but is not in an active call.

Speaker Dependence - The degree to which a speech recognition system requires knowledge of a speaker's individual voice characteristics in order to successfully process speech.

Speaker Independence - Describes speech recognition systems that do not need to be trained by a user.

Voice Recognition (VR) - The method of verbal input into the speech interface.

LED Indicator Functions

LED	Phone Status	LED State				
		Power Off	Power On	Pairing in Progress	Mute Mode	Call Waiting
Blue	Not connected	Off	Off	Flashing	N/A	N/A
	Connected (in a call)	Off	On	N/A	Flashing	N/A
	Connected (no active call)	Off	On	N/A	N/A	N/A
Amber	Not connected	Off	Off	Off	N/A	N/A
	Connected (in a call)	Off	On	Off	N/A	Flashing
	Connected (no active call)	Off	Off	Off	N/A	N/A

When the Bluetooth system has been powered down the Bluetooth system LEDs will flash three times, indicating that the power has been removed.



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN

Satellite Navigation (Option)

Introduction	10.2	Next Destination	10.21	Guidance	10.27
Map Disc	10.2	Current Position	10.22	Avoid Areas	10.28
System Controls	10.4	Last Ten Destinations	10.22	Detours	10.31
Getting Starting	10.4	Return Trip	10.22	Using Map View	10.32
Menu Structure	10.5	Store a Destination	10.23	Frequently Asked Questions	10.35
Map Image	10.8	Start Guidance	10.25		
System Settings	10.9	Itinerary	10.26		
Demo (Simulation)	10.12				
Set a Destination	10.12				
Free Search	10.20				

Introduction

The Satellite Navigation system is an integrated part of the Infotainment centre system along with the audio system and telephone (option) functions.

The system includes features that enable you to set itineraries, search for certain types of points of interest along your route, store special destinations, etc.

GPS (Global Positioning System)

The navigation system uses GPS signals to determine the vehicle's speed, and a gyroscope to determine the vehicle's current location and direction.

Screen Care

The screen must only be cleaned with a soft, lint less, lightly dampened cloth, or a cloth with a mild window cleaning agent.


Map Disc

Be careful when handling map discs. Make sure they do not become dirty and are not exposed to moisture.

When not in use, map disc's should be stored in their cases. Avoid storing them in high temperatures, direct sunlight or dusty environments.

To Load / Change a Map Disc

The disc player is located in the vehicle boot.

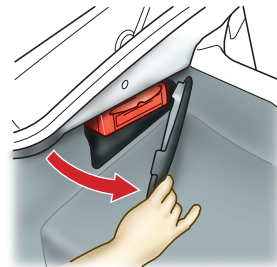

Change the discs as follows:

1. Shut down the Satellite Navigation system.
2. Open the hatch on the player. The disc will eject (the ignition must be On).
3. Insert the new disc and close the hatch.

The screen goes black and 'Loading new program – please wait' is displayed at the bottom.

The entire procedure can take up to five minutes. Once programming is complete, the start screen is displayed.


Changing to an updated map disc may in some cases also add new software, images, menus and new functions to the system.

One or more Map disc(s) may be supplied with the Satellite Navigation system. Each disc covers the same area.

If more than one disc is supplied each disc will contain area specific information.

Each disc has it's specific areas printed on it.

If an entered address, facility etc. is not available on the disc in use then the following message will show.

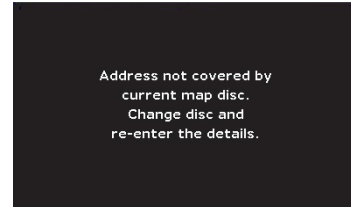

Eject the current disc and insert the disc for the area. Re-enter the address, facility etc. details.

Factors such as the constant expansion and rebuilding of the road network, new traffic regulations constantly being introduced etc. means that the digital map database is not always up-to-date. The contents of the map disc determine the scope of destinations, points of interest, roads, etc.

The digital maps are continuously updated and the coverage is increased gradually.

For information on the latest versions of the map disc's, contact your Aston Martin Dealer.

⚠ Warning ⚠

Never use the navigation system or any other feature in the vehicle in a way that distracts you from the task of driving safely.

⚠ Warning ⚠

Distraction can lead to a serious accident. Always be aware of the current traffic situation.


⚠ Warning ⚠

Set and make changes in the navigation system only with the vehicle parked.

⚠ Warning ⚠

Always comply with relevant traffic regulations.

System Controls

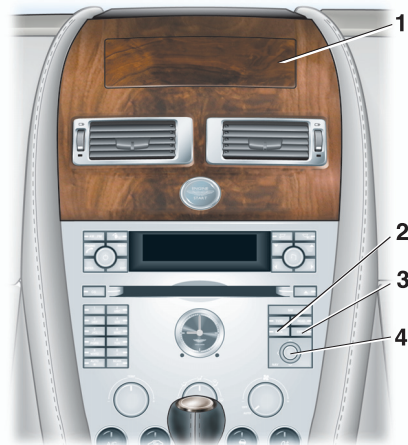

(1) Screen - Displays maps and provides detailed information on route type, distance, etc.



(2) Back - Press to return to the previous menu or to undo a choice.



(3) Enter - Press to confirm options or to activate different menus.

Enter can also be selected by pressing the Navigator.



(4) Navigator - Move 'Up', 'Down', 'Right' or 'Left' to navigate through different menu options, traffic messages, etc.

Getting Starting

Using this Guide

Search Path

Menu paths are indicated for each operation in the following format:

(Set destination > Address > City)

Menu selections in the text are indicated by *<address>*.

Navigate through the menus by using the Control pad.

Turning the Navigation System 'On'

The ignition key must be in position 'I' or 'II'. Press any button on the user control pad. The system may need a few seconds to detect your position and movement.

Turning the Navigation System 'Off'

Move to <shutdown> using **Navigator** and press **ENTER**.

The Navigation system can be accessed even if the engine is switched off. Always switch the ignition key to position '0' or remove it when the system is not in use so the battery does not become discharged.

The locations used in this chapter do not necessarily reflect known places and are for the purpose of describing operating procedures only.

Guidance Voice

(Refer to 'System Settings', page 10.9)


With Audio On – If guidance is active, when guidance is provided the audio system will mute until the guidance message has finished.

Phone in Use – If guidance is active, guidance messages will be muted if the in-car phone is in use.

If a guidance message is broadcast during a phone call an audible 'Beep' will sound.

Menu Structure


Left Hand Menu

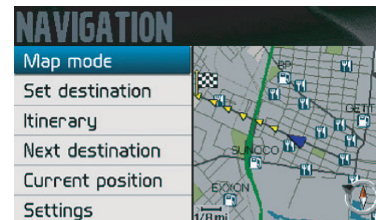

Provides access to system functions (main menu).

While in the default screen (map view) press **BACK**. Move **Up** / **Down** to select a menu option and then move **Right** or press **ENTER** to access the functions.


Right Hand Menu

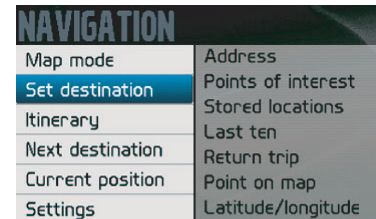

Each menu heading in the left-hand section has a sub menu containing further options.

Select an option using **Up** or **Down** and press **ENTER**. Press **BACK** to return to the main menu.

Quick Menu

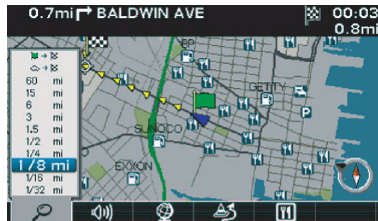


Press **ENTER** while in map view to access Quick menus. Select a Quick menu using **Right / Left**. Select an option using **Up / Down** and press **ENTER**.

Quick menus make it easier to access certain system options.


Some options are only accessible through the Quick menus.

Map Scale

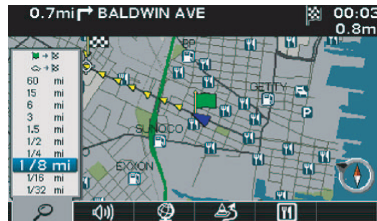


Used to zoom in or out. The entire route from start to finish or the remaining route from the current position to the destination can be displayed (Refer to 'Map Scale', page 10.33).

Guidance

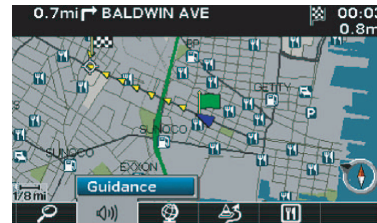

Press **ENTER** to repeat a voice guidance.


Map

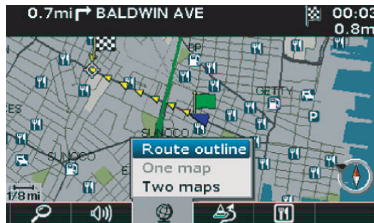

Used, for example, to choose between displaying one or two maps (Refer to 'Using Map View', page 10.32).


Select <Route outline> to view a list of approaching guidance points (Refer to 'Guidance', page 10.27).

Detour

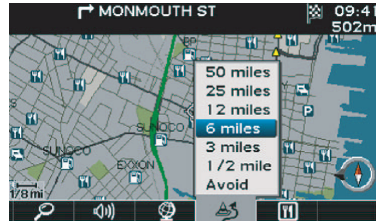

Avoid parts of the calculated route, e.g., to avoid construction (Refer to 'Avoid Areas', page 10.28). It is also possible to avoid specified streets along the route (Refer to 'Avoid Areas', page 10.28).

Points of Interest

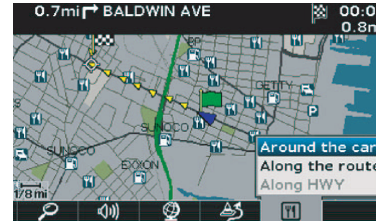


Search for points of interest around your vehicle and along the itinerary, e.g. select <Along HWY> to search for points of interest which are easily accessible from the highway (Refer to 'Map Icons', page 10.34).



ASTON MARTIN

Map Image

1. Distance to the next guidance point.
2. Next guidance.
3. Name of the next street.
4. Road sign information.
5. City center
6. Next guidance point.
7. Intermediate destination.
8. Final Destination.
9. Remaining travel time and distance to destination.
10. Map scale.
11. Current location.
12. Stored Destination.
13. Starting point.

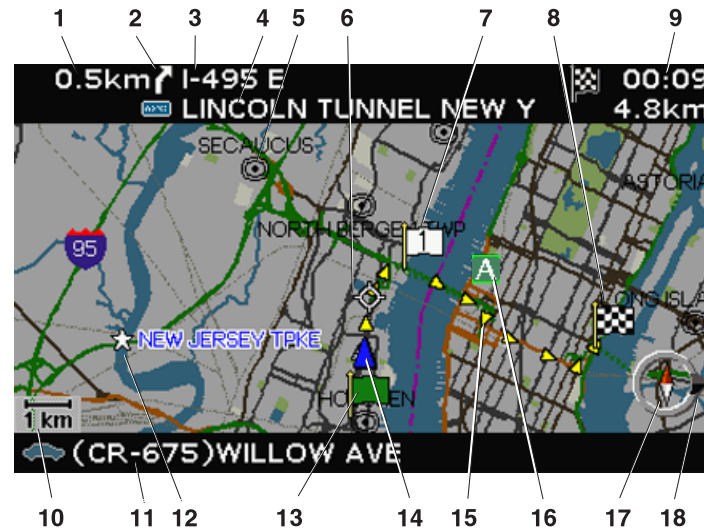

14. Position of vehicle.
15. Route.
16. Facility symbol for Aston Martin Dealer.
17. Compass.
18. Direction of destination

Road types

Highway – green

Main road – red

Smaller main road – brown

Normal road – dark grey

Local road – dark green


System Settings

Compass

The red tip of the compass needle points in a northerly direction on the map and the white tip points south. The blue destination arrow in the outer ring of the compass points in the direction of the destination.

Under *Map options* on the Settings menu you can choose to show or hide the compass and destination arrow.

Route Options

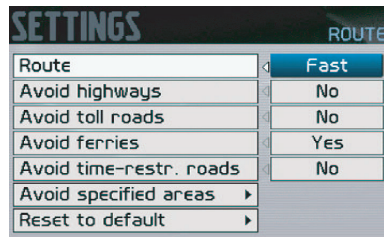

(**Settings** > *Route options*)

Use **Up** / **Down** to move between the functions and select the desired setting using **Right** / **Left**. Confirm settings made using



Route – Selects the fastest or shortest route when calculating.

Avoid highways – Indicate if highways are to be avoided when calculating the route.

Avoid toll roads – Indicate if toll roads are to be avoided when calculating the route.

Avoid ferries – Indicate if ferries are to be avoided when calculating the route.

Avoid time-restr. roads – Indicate if the system should pay consideration to time-restricted roads when calculating the route.


The correct time zone must be set for the function to work (Refer to 'System Settings', page 10.9).

Avoid specified areas – Select the areas the system is to avoid when calculating the route. Press **Right**. Select <Selected> using **Up** / **Down** and press **Right** again to specify areas.

Reset to default – Restore factory settings. Press **Right**. Select <OK> using **Up** / **Down** and press .

The system can only use larger roads when calculating a route extending over a long distance. If NO is selected for toll roads and highways, they are avoided to the greatest possible extent and are only used if there is no other reasonable alternative.

Map Options

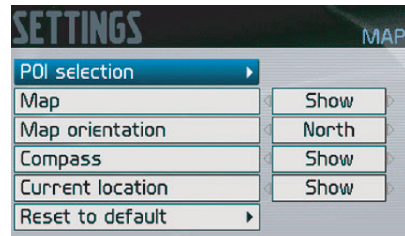

(**Settings** > *Map option*)

Use **Up** / **Down** to move between the functions and select the desired setting using **Right** / **Left**. Confirm settings made using **ENTER**.

POI selection – Press **Right** to obtain the submenu.
Select <Show all> to see all points of interest symbols on the map image.

Select <Hide all> if no symbols are to be displayed.

Select <Show selected> and press **Right** to specify which symbols are to be shown on the map image. These are activated with a cross.

Step using **Up** / **Down** to choose among the symbols. Activate or deactivate using **Right** / **Left**. Confirm settings made using **ENTER**.

Map – If the map is hidden, the system guides with an arrow.


Map orientation – Indicate whether north or the heading (direction of travel) should be up when looking at the map.

Compass – Indicate if the compass is to be shown on the screen.

Current Location – Indicates if the name of the street on which the vehicle is currently driving should be shown at the bottom of the screen.

Reset to default – Restore factory settings. Press **Right**. Select OK using **Up** or **Down** and press **ENTER**.

Guiding Options

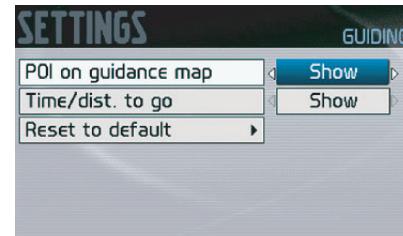

(**Settings** > *Guiding options*)

Use **Up** or **Down** to move between the functions and select the desired setting using **Right** or **Left**. Confirm settings made using **ENTER**.

POI on guidance map – Select *Show* if point of interest are to be displayed on the junction map.


Select *Hide* if no points of interest are to be displayed on the junction map.

Time/dist. to go – Select *Show* to see the remaining travel time and distance from the current position to the destination during guidance.

Select *Hide* if the remaining time and distance is not to be displayed.

Reset to default – Restore factory settings. Press **Right**. Select *OK* using **Up** or **Down** and press .

System Options

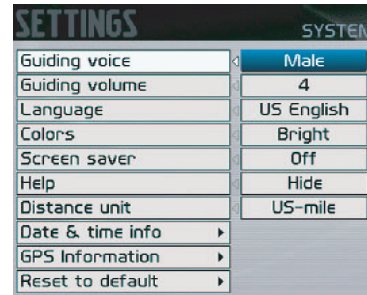

(**Settings** > System options)

Use **Up** / **Down** to move between the functions and select the desired setting using **Right** / **Left**. Confirm settings made using

.

Guiding voice – A male or a female guiding voice can be selected.

Guiding volume – Guiding voice on / off and volume.

Language – Indicate the language to be used in the system.

Colors – Choose between Light, Dark or Contrast.

Screen saver – Indicate whether the screen saver is to be used (comes on after 30 seconds).

Help – Indicate if help texts are to be displayed at the bottom of the screen.

Distance unit – Indicate which unit of distance is to be used for navigation.


Date & time info – Press **Right** to set date and time format.

GPS Information – Press **Right** to view coordinates and address of the vehicle's position, as well as the number of satellites the system is in contact with.

Reset to default – Restore factory settings. Press **Right**. Select *<OK>* using **Up** / **Down** and press .

About – System information.

Demo (Simulation)

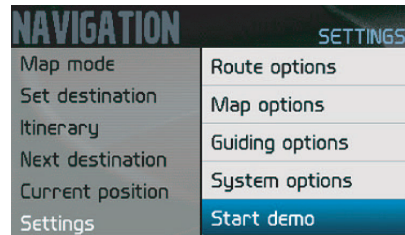

(**Settings** > *Start demo*)

The demo illustrates how the system works when the vehicle is stationary by simulating a trip to a specified destination. All settings can be made during the demonstration. <*Stop demo*> interrupts the simulation.

A destination must be entered for the demo to work.

Set a Destination

The Navigation system requires a destination to be entered so that a route to the destination can then be calculated. Various destination options are available.

If the screen is in map view press  BACK to access the main menu.

Once a valid destination has been entered <*Start Guide*> will be available (Refer to 'Guidance', page 10.27).

Various destinations can be entered and saved as an itinerary (Refer to 'Itinerary', page 10.26).

Specify an Address

Select State



(**Set Destination** > *Address*)

Move **Up** / **Down** to select <*State*> and press .

Press **Right** when an arrow is displayed on the right of the line. A list of the five last entered States / Cities will be displayed. Select the required State / City, if available, from the list and press .

Use **Navigator** to spell out the desired state from the Character table. Press  for each letter.

When there are no more alternatives, the system fills in the remaining letters itself.

A list of the first three states matching that letter combination is shown at the bottom of the screen. A scroll bar on the right-hand side indicates that there are several alternatives in the list.

The number indicates how many.
Move **Down** and select directly from the list in the menu. Select using **Up / Down** and press **ENTER**.



Return to the Character table with **BACK**.
Press **BACK** to delete the entered letters one at a time.

States, Cities and Street names are deleted when the destinations in 'Last ten' are deleted.


Select City

Select <City> and press **ENTER**.

Press **Right** when an arrow is displayed on the right of the line. A list of the five last entered countries will be displayed.

Follow selection methods described for States.

Select Street

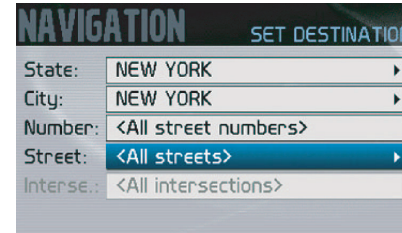


Move to <all Streets> and press **ENTER**.

It is also possible to search for street addresses throughout the country without specifying a particular city.

Move **Up** to <City> and press **ENTER** then **BACK**. Then move **Down** to <Street> and press **ENTER**.

No street addresses are stored in the system for some small towns. The town centre, however, can always be specified as the destination.

Use **Navigator** to select the desired letters from character table and press **ENTER** or move **Down** and select directly from the list in the menu.

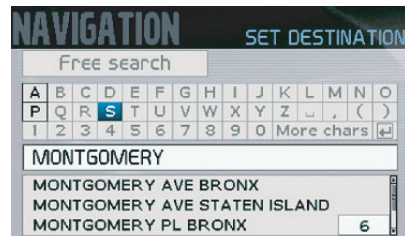


Select a street and press **ENTER**. A scroll bar on the right-hand side indicates that there are several alternatives in the list. The number indicates how many.

Return to the character table with **BACK**.

Press **BACK** to delete the entered letters one at a time.

<Free search> (Refer to 'Free Search', page 10.20).

Select Street Number / Intersection

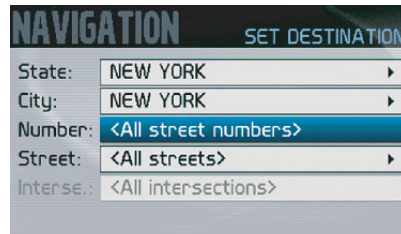

If the street number of the selected address is known, it can also be entered to make guidance more exact. An intersection can also be entered instead of the street number.

It is possible to move directly **Down** to <Start guide> and press **ENTER**.



Move to <Number> and press **ENTER**.


Existing street numbers are then displayed.

Select a number using **Right / Left** and press

ENTER.

Set – Confirm entered number.

Cancel – Go back to the previous screen.

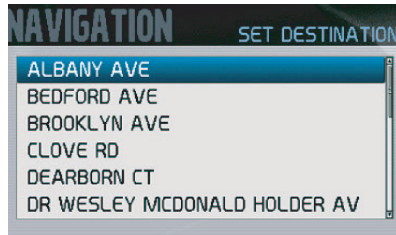


Move **Down** to *<Interse>* and press **ENTER**.
The names of the intersecting streets will be listed. Select from among the streets using **Up** / **Down** and press **ENTER**.

A scroll bar on the right-hand side indicates that there are several alternatives in the list.

Specify a Zip Code

Use **Up** / **Down** to move to *<City>* and press


ENTER.

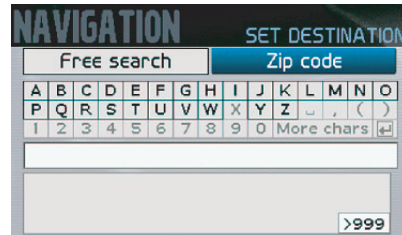

Move **Up** and then **Right** to *<Zip code>*.

Press **ENTER**.


Use **Navigator** to select the desired letters and numbers from the character table and press **ENTER** or move **Down** and choose a Zip Code directly from the list if options are available.

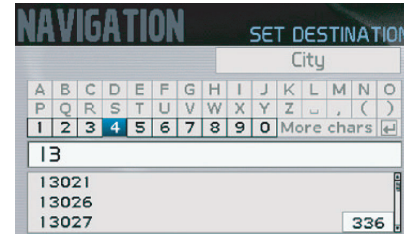

The scrolling list on the right-hand side indicates that there are more options in the list.

Press **BACK** to return to the table of characters to delete entered characters. Delete entered characters, then move **Up** to *<City>* and press **ENTER** to return to the previous screen.


Select Street Address

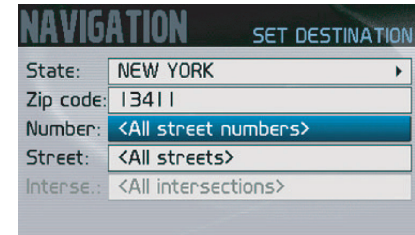

Move to <Street> and press **ENTER**. Choose letters using **Navigator** and press **ENTER** or move **Down** and choose a street name directly from the list if options are available. Then move to <Number> or to <Interse> to specify a street number or a crossroads. Select <Start Guide> to obtain guidance to the destination.

Specify a Point of Interest


Points of interest is a collective name for places such as Petrol Stations, Hotels, Restaurants, Aston Martin dealers, Hospitals, vehicle Parking, etc.

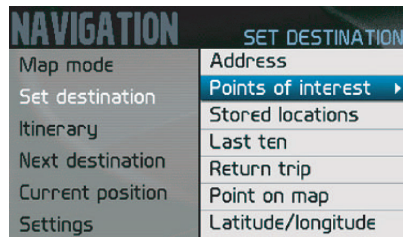

(**Set destination** > Points of interest)

Press **ENTER** to access a submenu with search options.

It is also possible to search for points of interests around the vehicle, along the itinerary and along the highway using the Quick menu (Refer to 'Menu Structure', page 10.5).

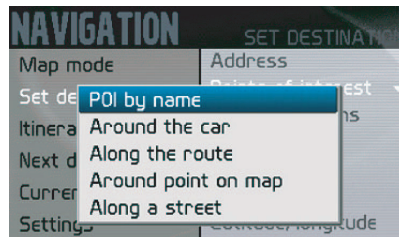

POI by name – Enter the name of a point of interest or select a point of interest type from the list in the menu. The list can vary and only shows the points of interest of the selected City or area.

Around the car – The system searches in a circle with a radius of at least 1.5 mile. If less than 40 points of interest are found, the search is extended to a radius of max. 62 km.

Along the route – If a destination has been specified, the system can search for points of interest within an area max. 0.5 mile from the route and max. 62 mile ahead.

Around point on map – The system searches the same way as <Around the car>, but around a specified point on the map.

Along a street – The system searches along a specified street.

Select an option using **Up** / **Down** and press



Search Point of Interest by Name / Type



(**Set destination** > *Points of interest* > *POI by name*)

Move to <Type> or <Name> and press



Use **Navigator** to select the desired letters and press or move **Down** and select directly from the list in the menu.

A scroll bar on the right-hand side indicates that there are several alternatives in the list.

The number indicates how many. Select using **Up** / **Down** and press .

Certain points of interest (when selecting by <Type>) have further options. For example, select gas station and press .

The names of different gas station chains found in that area are then displayed. Select from among the alternatives and press



Return to the character table with . Press to delete the entered letters one at a time.

<Free search> (Refer to 'Free Search', page 10.20).


Points of Interest - Quick Menu



In map view press **ENTER** to access the Quick menu. Select the *<Points of interest>* menu using **Right/Left**. Select *<Along HWY>* using **Up/Down** and press **ENTER**.

From the Points of interest Quick menu it is possible to search for Points of interest which are easily accessible from the highway.


When a calculated route extends over more than one highway, the system also searches adjoining highways. If no route is calculated, the system searches along the highway the vehicle is travelling on.

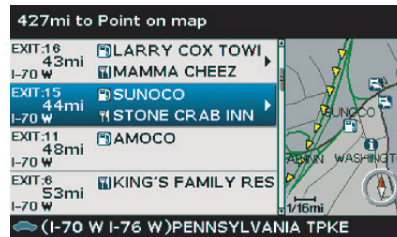

The list shows rest areas, gas stations and restaurants along the highway along with the distance. Select a point of interest using **Up/Down**.


The point of interest is displayed on the map image. Press **ENTER** to view the whole map and to obtain map scroll mode. Press **ENTER** again to obtain the map scroll menu. Select *<Set as destination>* and press **ENTER** to select the point of interest as the destination (Refer to 'Map Scroll', page 10.32). In cases where there is more than one point of interest at the destination, an arrow is displayed to the right of the list. Press **Right** to view a submenu of points of interest. Select point of interest and press **ENTER** to view it on the map.

Specify Destination on the Map

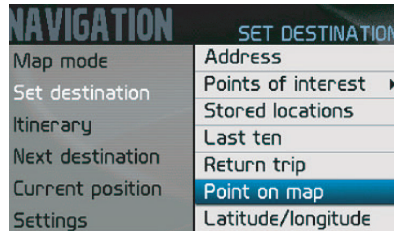


(**Set Destination** > *Point on map*)

Press **ENTER**. Use **Navigator** to move the cross on the map and specify a destination directly on the map, for example.

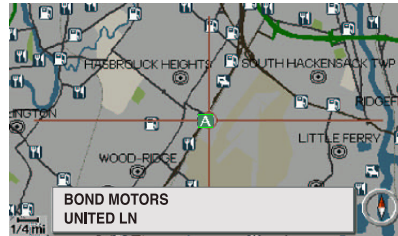

The centre of the cross indicates the current destination on the map. The name and destination that correspond to the cross position are shown at the bottom of the map.

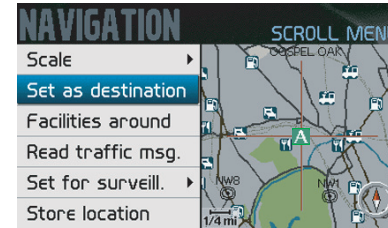

Use **Navigator** to move the cross to the desired destination and press **ENTER** to access the scroll menu. Move to <Set as destination> using **Up / Down** and press



The destination is registered and added to the itinerary.

Start guidance – Starts guidance to the destination.

Add to itinerary – Add another destination.

Route options – Settings for route priorities.

Clear itinerary – Erases the itinerary.

Specify Coordinates

The screenshot shows the 'NAVIGATION SET DESTINATION' screen. It has two rows of input fields. The first row is for Latitude (Lat:) with fields for 4, 0, 4, 3, 1, 0, and a direction 'N'. The second row is for Longitude (Long:) with fields for 0, 7, 4, 0, 3, 0, 1, and a direction 'W'. Below the fields are 'OK' and 'Cancel' buttons.

(*Set Destination* > Latitude / longitude)

Move **Left** / **Right** to move from row to row and **Up** / **Down** to set coordinates.

OK – Shows the destination of the specified coordinates on the map. Press **ENTER** to access the scroll menu. Move to *Set as destination* using **Up** / **Down** and press **ENTER** to select the destination as a Destination.

Press **BACK** to return to coordinate input.

Cancel – Return to the previous screen.

Free Search

The screenshot shows the 'NAVIGATION SET DESTINATION' screen with search criteria. It has four rows of input fields: 'State:' with 'NEW YORK', 'City:' with 'NEW YORK', 'Number:' with '<All street numbers>', and 'Street:' with '<All streets>'. Below these is 'Interse.:' with '<All intersections>'. There are right arrow buttons on the right side of each field.

Searches can be done using part of the City or Street name. Move to *<City>* or *<Street>* using **Up** / **Down** and press **ENTER**.

The screenshot shows the 'NAVIGATION SET DESTINATION' screen with the 'Free search' option selected. It has a grid of letters A through Z, a space bar, and a 'More chars' button. Below the grid is a text input field and a '>999' button.

Move **Up** to *<Free search>* and press **ENTER**.

The screenshot shows the 'NAVIGATION SET DESTINATION' screen with the 'Start' option selected. It has a grid of letters A through Z, a space bar, and a 'More chars' button. Below the grid is a text input field containing 'GOME' and a large empty area below it.

Use **Navigator** to enter part of the name and press **ENTER**. Move **Up** to <Start> and press **ENTER**.




Use **Up** / **Down** to move to the desired option and press **ENTER**.

A scroll bar on the right-hand side indicates that there are several alternatives in the list. The number indicates how many.

Press **BACK** to return to the previous screen.

Next Destination

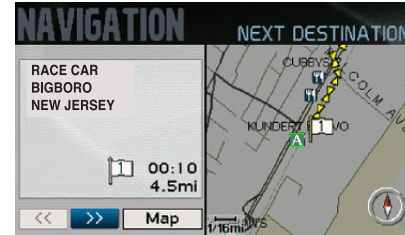


(Next destination)

Press **ENTER** or **Right** to obtain information on the destination, such as name, remaining journey time and distance from present position to the destination.

Press **ENTER** again if more destinations are specified to obtain information and to view them on the map image.

Move to <Map> and press **ENTER** to view the whole map image and obtain scroll mode. Press **ENTER** again to obtain the map scroll menu (Refer to 'Map Scroll', page 10.32).


Current Position

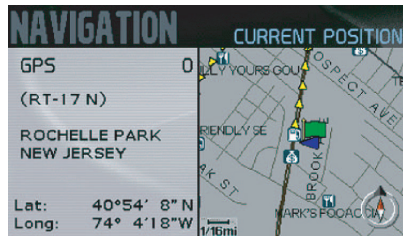

(Current position)

Press **ENTER**. The map image shows the vehicle's position. Press **ENTER** or **Right** to obtain information on the destination, for example name and coordinates.

Last Ten Destinations

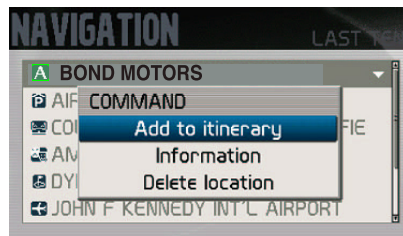

(Set destination > Last ten)

Press **ENTER** to see the ten most recently entered destinations.

The scroll bar on the right-hand side indicates that there are several alternatives in the list. Move to the desired destination using **Up** / **Down** and press **Right** or **ENTER** to access the submenu.

Add to itinerary – Adds the destination to the itinerary.


Information – Provides information on the destination.

Delete Location – Deletes the entered destination.

Return Trip

(**Set destination** > *Return trip*)


Press **ENTER** to obtain guidance back to the starting point.

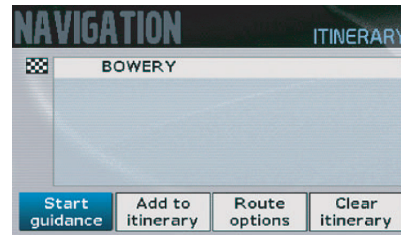

Select <Start guidance> and press **ENTER**. The system then starts guiding back to the destination Start guidance was last selected.


Store a Destination

Up to 250 destinations can be saved and reused.

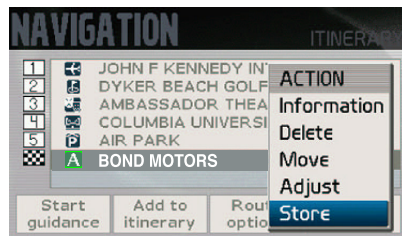

(Itinerary)

Move **Up** to the destination in question and press **ENTER** or **Right**. Use **Up** / **Down** to select <Store> from the submenu and press **ENTER**.

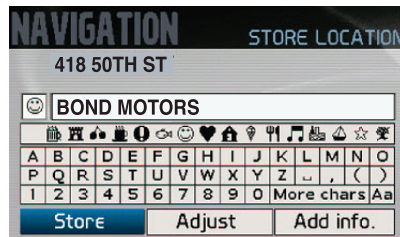


The Map scroll function can also be used to save a destination (Refer to 'Map Scroll', page 10.32).

All stored destinations are marked with symbols on the map. Move **Up** to the symbols. Use **Right** / **Left** to select and press **ENTER**. The name of a stored destination is indicated automatically.


Press **BACK** to erase the original name and replace it with a new one.

Select <Store> to save the destination.

Adjust

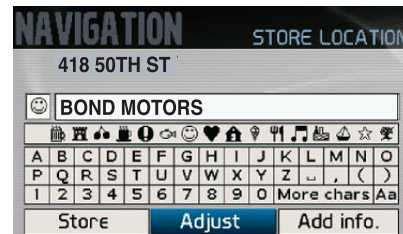

Select <Adjust> and press **ENTER** to move the position of the stored destination on the map.

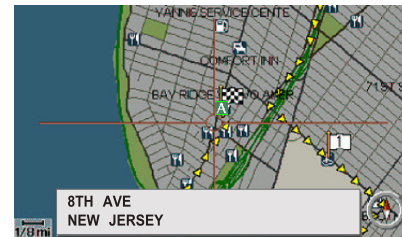

Use **Navigator** to move the cross to the new position of the stored destination and press **ENTER**. Then select <Save Destination> and press **ENTER** to save. Select <Scale> to change the scale.

Add Info.

NAVIGATION STORE LOCATION

Icon: [Icon]

Name: BOND MOTORS

Address: 418 5TH ST

City: NEW JERSEY

State: NEW JERSEY

Phone: (718) 679-9794

E-mail: [Highlighted]

URL: [Empty]

Select <Add info.> and press **ENTER** to add additional information on the stored destination.

NAVIGATION STORE LOCATION

418 5TH ST

BOND MOTORS

[Icons]

A B C D E F G H I J K L M N O
P Q R S T U V W X Y Z [More chars] Aa

Store Adjust Add info.

Use **Up / Down** to select a field and press

ENTER to add new information or edit exiting information.

Stored Destinations

NAVIGATION SET DESTINATION

Map mode

Set destination

Itinerary

Next destination

Current position

Settings

Address

Points of interest

Stored locations

Last ten

Return trip

Point on map

Latitude/longitude

(**Set destination** > *Stored Destinations*)

Press **ENTER**. A list of stored destinations is displayed.

A stored destination is a previously saved destination.

NAVIGATION STORED LOCATIONS

COMMAND

Add to itinerary

Information

Edit

Sorting

Delete location

Move among the stored destinations using **Up / Down**. Press **Right** or **ENTER** to access the submenu.

Add to itinerary – Add the stored destination in the itinerary.

Information – Provides information on the stored destination.

Edit – Change the name, etc. of the stored destination.

Sorting – Sort stored destinations by icon or name.


Delete Destination – Delete a stored destination.

Select an option using **Up** / **Down** and press



Start Guidance

The <Start guide> option is only available when a valid destination has been entered.

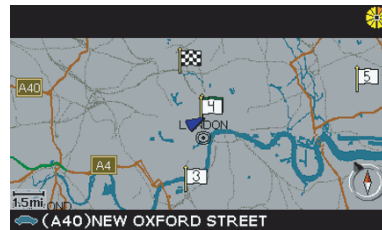

When <Start guide> is selected, the system begins calculating the route and distance to the destination (during this time, a yellow / orange symbol is shown at the top of the screen).

If a detour is made from the planned route during the trip, the system automatically calculates a new route (Refer to 'Guidance', page 10.27).

NAVIGATION		SET DESTINATION
State:	NEW YORK	▶
City:	NEW YORK	▶
Number:	<All street numbers>	
Street:	MONTGOMERY ST BROOKLYN	▶
Interse.:	<All intersections>	
Start guide Itinerary Information		


If neither a street number nor an intersection is specified the system guides to the middle of the street chosen.

Start guide – The system guides to the destination.

Itinerary – Adds the destination to the itinerary.

Information – Provides information on the destination.


Information

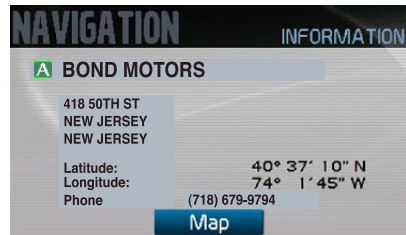

The address, coordinates and in some cases the telephone number of a point of interest is shown under *<Information>*. Select *<Map>* and press **ENTER** to see the point of interest destination on the map.

Itinerary

An itinerary, containing several destinations, can be entered to avoid entering destination after destination during your trip. One destination with up to six intermediate destinations can be specified.

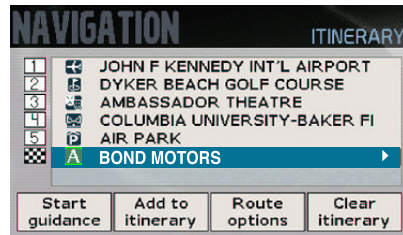

(Itinerary)


Start guidance – Starts guidance to the destination.

Add to itinerary – Add another destination.

Route options – Settings for route priorities.

Clear itinerary – Erase the entire itinerary.

Edit an Itinerary

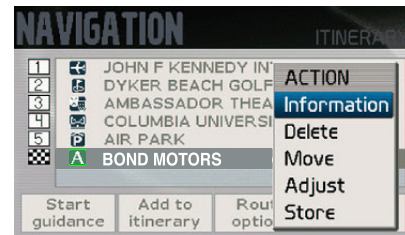

(Navigation > Itinerary)

Select a destination using **Up / Down** and press **ENTER** or **Right** to access options.

Information – Provides information on the destination.

Guidance

Delete – Clears the destination from the itinerary.

Move – Changes the placement of the destination in the itinerary.

Adjust – Changes the destination of the destination on the map.

Store – Saves the destination under <Stored Destinations>.

Select an option using **Up** / **Down** and press




In map view press . When approaching an intersection, a detailed intersection map will indicate the type of manoeuvre required. Distance to and name of the next exit road are shown along the top edge of the map.

Road sign information is shown on the line underneath. If there is a road number and exit number or exit name, they are also shown.

The current position is indicated at the bottom of the screen.

Route Outline

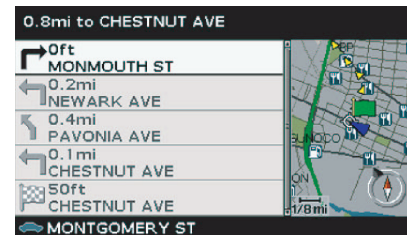


(**Quick menu** > **Map menu** > **Route outline**)

The destination and remaining distance are shown at the top of the screen. The next guidance point is highlighted.

This is followed by a list of remaining guidance points. In addition to the name of the road, the distance between guidance points and an arrow indicating the type of manoeuvre are shown.

Guidance points are deleted as they are passed. If a deviation is made from the given route, the system calculates a new one.


Arrow Navigation

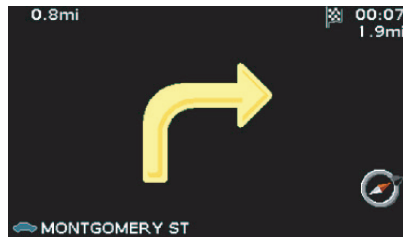

(**Settings** > *Map options*)

Guidance can be shown without a map. The system then shows an arrow that points in the direction you should turn. Select <Hide> to hide the map.

Avoid Areas

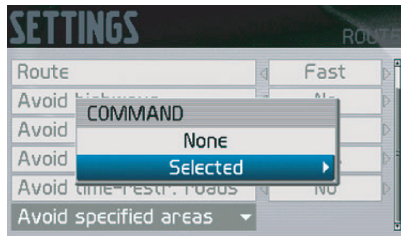

(**Settings** > *Route options*)


Specify specific areas the system is to avoid in calculating the route.

Move to <Avoid specified areas> using **Up** / **Down** and press **Right**. Select <Selected> and press **Right** again to specify areas.

None – Press **ENTER** to deactivate areas already activated.

Selected – Press **Right** to specify new areas. Press **ENTER** to activate areas already saved which are marked with a cross.

Avoid Area Options

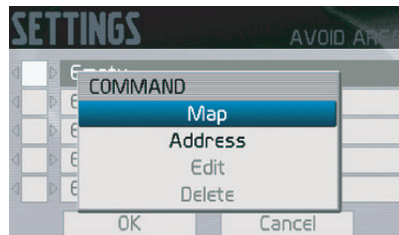

(**Settings** > *Route options* > *Avoid specified areas* > *Selected*)

Press **ENTER**. Choose option on the submenu using **Up** / **Down** and press **ENTER**.

Map – Use **Navigator** to indicate the area to be avoided directly on the map.

Address – Enter the address of the area to be avoided. The address constitutes the centre of the area.

Edit – Change the name of the saved area.

Delete – Erase a saved area. Confirm with **OK**.


Specify an Area on the Map



Select <Map>. Using **Navigator**, move the centre point of the hairline cross to the centre of the area to be avoided.

The name of the destination the centre point rests on is displayed at the bottom of the map.

The rectangle indicates the size of the area. Press **ENTER** to obtain the submenu.

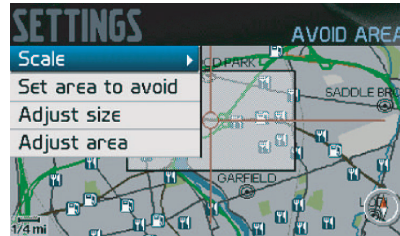

Select option in the submenu using **Up / Down** and press **ENTER**.


Scale – Specify the size of the area to be avoided.

Set area to avoid – Saves specified area.

Adjust size – Change the size of the area.

Adjust area – Move the area.

Change Size of Map Area

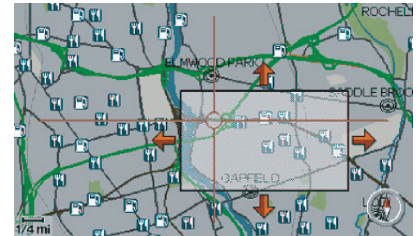

Change the size of the area using **Navigator**.


Press **BACK** to undo the change, or press **ENTER** and select <Avoid selected area> to save.

Move the Map Area



Move the area using **Navigator**. Press **BACK** to undo the move, or press **ENTER** and select *<Avoid selected area>* to save.

Saved Specified Areas

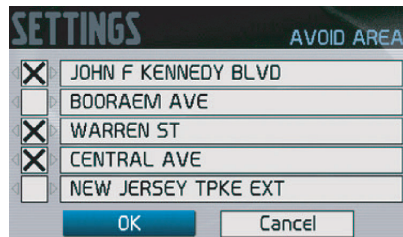


Choose which of the saved areas are to be avoided in calculating route. These are marked with a cross. Step using **Up / Down** to choose among the areas. Mark or un-mark using **Right / Left**.

OK – Activates areas marked with a cross. The areas activated are displayed on the map image.

Cancel – Undoes settings made and returns to Route options settings.

Specify an Area Address

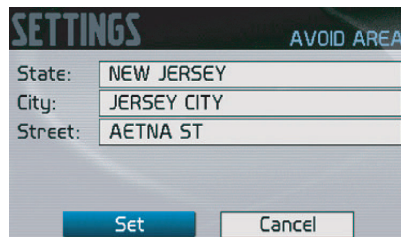


Select *<Address>*. Enter the address of the area to be avoided. The address then constitutes the centre of the area. Use **Up / Down** to move between the rows and press **ENTER** to enter the address.

Select – The specified area is shown on the map. Press **ENTER** to obtain the submenu. Choose *<Scale>* to specify the size of the area to be avoided. Select *<Set area>* to avoid to save the area. Select *<Adjust size>* to change the size of the area or select *<Adjust area>* to move the area.

Cancel – Returns to saved areas.

Detours

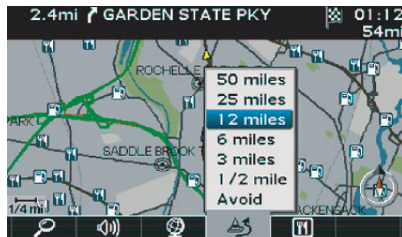


When the detour function is used, the system calculates an alternate route to avoid part of the calculated route. This is used to avoid construction, for example.

Press **ENTER** in map view to access the Quick menus. Move to the Detour Quick menu using **Right** / **Left**.

Set the number of miles the route is to be avoided using **Up** / **Down** and press **ENTER**. The system then calculates a new route and avoids the original route for the specified number of miles starting from the current position.

A destination must be specified for the function to work.

Avoid Specific Street

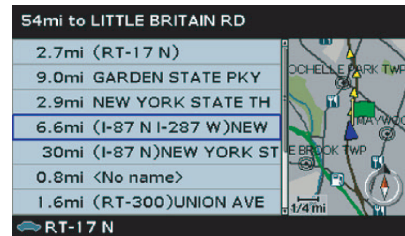


Select **<Avoid>** from the detour menu and press **ENTER**. A list of streets that are part of the route are displayed. Move to the street to be avoided using **Up** / **Down** and press

ENTER.

Several streets can be selected by moving with **Up** / **Down** and confirming each selection with **ENTER**. The system then calculates a new route.

Using Map View

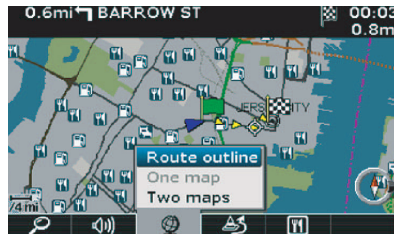

Press **ENTER** in Map view to access the Quick menu. Move to the Map Quick menu using **Right / Left**.

Route outline – View a list of approaching guidance points (Refer to 'Guidance', page 10.27).

Two maps – View two map images.

Two Maps

One or two map images can be selected. Different degrees of magnification can be selected for each map image of the same area.



Select **<One map>** on the Map menu and press **ENTER** to return to the previous right-hand map image.


Map Scroll



While in map view move the **Navigator** in any direction activate Map scroll. The **Navigator** can then be used to move the cross freely over a large area with a detailed scale.

The destination that corresponds to the cross position is shown at the bottom of the map.

Scroll Menu

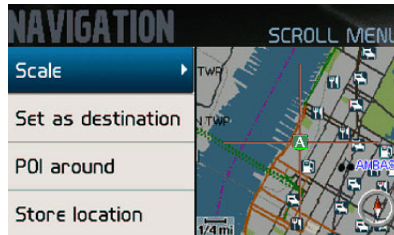

Press **ENTER** to access the scroll menu.


Scale – Function to temporarily change the scale. Press **BACK** to return to the original scale and to return to the vehicle's position on the map.

Set as destination – Select a destination on the map as a destination or intermediate destination (Refer to 'Specify Destination on the Map', page 10.19).

POI around – The system searches for points of interest around a specific point on the map. The system searches in a circle with a radius of 1.3 mile. If less than 40 points of interest are found, the search is extended to a radius of max. 62 mile.

Store location – Save a location on the map. Select an option using **Up / Down** and press **ENTER**.

Map Scale

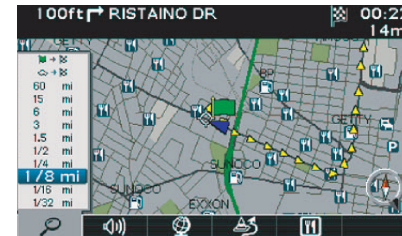

Press **ENTER** in Map view to access the Quick menus. Move to the map scale Quick menu using **Right / Left**. Choose a scale using **Up / Down** and press **ENTER**.

If two map images are displayed on the screen, use **Right** / **Left** to move to the map that is to be changed.

Scale is indicated at the bottom of the screen. Select the option (green flag + finish flag) at the top of the Map scale Quick menu and press **ENTER**.

The thick line on the map shows the whole route from start to destination.



The option (vehicle + finish flag) second from top on the Map scale Quick menu shows the remaining route from the present position to the destination.

Press **ENTER** to change scale. Press **Navigator** to obtain map scroll.

Map Icons

A Aston Martin Dealer	
Airport	Amusement park
ATM	Automobile club
Bank	Bus station
Vehicle rental	Casino
City centre	City hall

Civic / Community centre	Convention centre
Court house	Ferry terminal
Gas station	Golf course
Historical monument	Hospital
Hotel	Library
Major company	Marina
Movie theatre	Museum
Night life / Music club	Park & ride
Parking garage	Parking lot

 Police station	 Recreation area
 Rest area	 Restaurant
 Shopping centre / Groceries	 Ski resort
 Sports complex	 Theatre / Opera
 Toll booth	 Tourist attraction
 Tourist information	 Train station
 University / College / School	 Winery

Frequently Asked Questions

(Q) The position of the vehicle on the map is wrong or jumps.

(A) The GPS system indicates the position of the vehicle with an accuracy of about 65.5 ft. (20 m) There is a greater chance of error when driving on roads lying parallel to another road, winding roads, roads on several levels and after driving a long distance without making any distinctive turns. High mountains, buildings, tunnels, viaducts, over/underpasses etc. also have a negative affect on the reception of GPS signals, which means that accuracy in calculating the position of the vehicle may decrease.

(Q) The navigation system does not always calculate the fastest / shortest road.

(A) When calculating a route, distance, width of road, type of road, number of right or left turns, roundabouts etc. are all taken into account in order to produce the best theoretical route. A more efficient selection of route may be possible based on experience and knowledge of the area.

(Q) The navigation system uses toll roads, highways and ferries even though I chose to avoid them.

(A) When calculating routes over longer distances, for technical reasons, the navigation system can only use larger roads when calculating a route extending over a long distance. If *NO* is selected for toll roads and highways, they are avoided to the greatest possible extent and are only used if there is no other reasonable alternative.

(Q) The position of the vehicle on the map is incorrect after transportation.

(A) If the vehicle is transported, for example by ferry or train, or in such a way as to impede the reception of GPS signals, it can take up to 5 minutes before the position of the vehicle is correctly calculated.

(Q) The position of the vehicle on the map is incorrect after the vehicle battery has been disconnected.

(A) If power has been cut from the GPS antenna, it can take more than 15 minutes for the GPS signals to be received correctly and the position of the vehicle to be calculated.

(Q) The map image does not correspond with the real situation.

(A) Factors such as the constant expansion and rebuilding of the road network, new traffic regulations constantly being introduced etc. means that the digital map database is not always complete. The information stored in the maps is constantly being developed and updated. An Aston Martin Dealer can provide further information.

(Q) The scale of the map sometimes changes.

(A) Scale is affected by vehicle speed. At speeds over 85 m.p.h. (140 km/h) the largest possible degree of magnification is 0.2 mile (250 m). Once speed decreases to 75 m.p.h. (120 km/h), the system is once again able to display all degrees of magnification. If no detailed map information is available, the largest degree of magnification is 0.3 mile (500 m) regardless of speed.

(Q) The expected menu option is missing.

(A) Look at the settings that have been made. Select *Reset to default* to restore the original settings.

(Q) The system shows the route I am already on when I request *Calculate new route* or *Detour*.

(A) The system cannot find a good alternative to the current route.

(Q) The vehicle symbol on screen jumps forwards or spins.

(A) The navigation system may need a few seconds to sense the position and movement of the vehicle before driving off. Switch off both the navigation system and the engine. Start again, but remain stationary for a while before starting to drive.

Maintenance

Contents

Introduction	11.2	Battery Charge	11.26
Vehicle Jacking.....	11.3	Battery Protection Mode	11.30
Servicing Precautions	11.4	Electrical Start From Another Vehicle.....	11.32
Dangerous Substances.....	11.5	Fuses.....	11.34
Vehicle Tool Kit	11.6	Bulb Kit.....	11.39
Owner Maintenance	11.6	Headlamp Bulbs.....	11.39
Opening / Closing the Hood	11.7	Headlamp Alignment	11.41
Fluid Levels.....	11.8	Rear Lamp Clusters	11.43
Windshield Blade Replacement.....	11.12	Other External Bulbs	11.43
Brake Pad 'Bedding-in'	11.13	Internal Bulbs.....	11.44
Wheels and Tires	11.13	Door Window Reset.....	11.45
Winter Wheels and Tires.....	11.16	Bodywork	11.45
Tire Sealant System	11.16	Vehicle Cleaning	11.46
Department of Transportation	11.22	Vehicle Storage	11.49
Transporting and Towing.....	11.24		
Battery Warnings.....	11.25		
Battery	11.25		

Introduction

Each item in the Service Schedules must be performed on time as failure to do so may void the New Car Warranty or other warranties. It is the owner's responsibility to see that the vehicle is maintained properly and in accordance with the manufacturer's service schedules.

Due to the sophistication of the various systems and the specialized equipment required to maintain your vehicle, owner maintenance should be restricted to the routine procedures described in this Owner's Guide. If you think that your car is not functioning properly, please return it to an Aston Martin Dealer to be checked professionally.

Restraint Systems

Aston Martin recommend that the inflatable (airbags) restraint systems and seat belt components installed to this vehicle are replaced at 10 (ten) year intervals from the date of manufacture on the certification label.

Electronic Fuel Injection

 **Warning** 
If the fuel system is allowed to run dry irreparable damage to the fuel pumps may occur.

The electronic fuel injection system requires special equipment and test facilities to set up and maintain so that the vehicle gives maximum performance coupled with economy, reliability and safe vehicle emissions. You are, therefore, strongly advised to entrust all service work to an Aston Martin Dealer.

Warning

Any modifications or additions to the fuel system not specifically designed by Aston Martin are prohibited. If carried out, they may cause damage to the fuel system which in some circumstances could result in fire. All Service Action Campaigns must be undertaken by an Aston Martin Dealer.

Parts and Lubricants

When undertaking a servicing task only parts, materials, lubricants, etc. that are specifically recommended by Aston Martin should be used. Failure to do so can result in damage to your vehicle and may invalidate your New Car Warranty or other warranties (Refer to 'Warranty', page C.1).

This vehicle's warranty may be invalidated if damage is caused by the use of improper engine oil. Low quality or obsolete oils do NOT provide the protection required by modern, high performance engines.

Failure to use engine oil that meets the required specification (Refer to 'Fluids and Capacities', page 12.11) could cause excessive engine wear, a build up of sludge and deposits, and increased pollution. It could also lead to engine failure.


Emission Warranty

The emission control systems installed to vehicles for certain markets are covered by a separate warranty. A statement of the provisions is given in the Warranty section of this Owner's Guide. **You are advised to familiarise yourself with all warranty conditions at the earliest opportunity after taking delivery of your car.**

Vehicle Jacking

If this vehicle is to be raised using a vehicle jack ensure the following jacking points are use.

Do not raise the vehicle by placing a vehicle jack under the suspension arms.

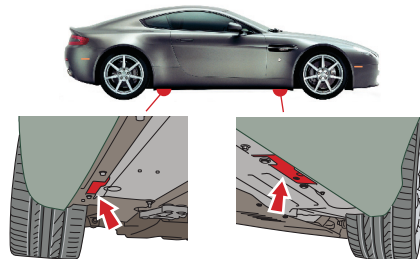

⚠ Warning ⚠

Ensure that no persons are in the vehicle before jacking commences.

⚠ Warning ⚠

Ensure that the parking brake is set and that the vehicle is in 1st Gear.

⚠ Warning ⚠

Ensure that the vehicle is parked on firm and level ground to ensure a secure base for the jack.

Servicing Precautions

To avoid personal injury, the following safety precautions must be observed when the hood is open and the engine is running or the ignition is switched on.

Warning

Protect yourself against dangerous substances (Refer to 'Dangerous Substances').

Warning

Keep hands, hair, tools, items of clothing and jewelry clear of all drive belts, pulleys and operating mechanisms. The cooling fans may operate even though the engine is not running.

Warning

Do not breathe exhaust fumes. Exhaust fumes contain carbon monoxide. Carbon monoxide is a dangerous gas, which is colorless and odorless and can cause unconsciousness and may be fatal. Never start or leave the engine running in an enclosed, unventilated area.

Warning

Avoid skin contact with all exhaust system and engine components, engine fluids and escaping steam. They may be hot and will burn you.

Warning

Do not work beneath the vehicle with a vehicle lifting jack as the only support. Place suitable stands under the vehicle.

Warning

Keep children and pets clear of the vehicle. Do not allow anyone inside the vehicle unless specifically working to your instructions.

Warning

Whenever possible work in the engine compartment with the engine cool, the ignition switched off and the vehicle battery disconnected.

Warning

Petrol is highly flammable and, in confined spaces, is also explosive and toxic. In the event of spillage, switch off the engine, use no naked flame or light. Do not smoke. Do not inhale fumes.

Dangerous Substances



Warning



Dangerous substances should be kept out of reach of children.



Warning



Many liquids and other substances used in motor vehicles are poisonous and should under no circumstances be consumed and should, so far as possible, be kept from contact with the skin. These substances include battery electrolyte, antifreeze, oil, brake and clutch fluid, petrol, windshield washer additives, lubricants, refrigerant and various adhesives.



Warning



Particular care should be taken to avoid unnecessary contact with used engine oil. Always read carefully the instructions printed on labels or stamped on components and follow them carefully. Such instructions are included for reasons of your health and personal safety. Never disregard them.

Engine Oils



Warning



Prolonged and repeated contact with used engine oils can cause serious skin disorders, including dermatitis and cancer. Avoid excessive contact, wash thoroughly after contact. Keep out of reach of children. When your oil is changed, be sure that it is done by an experienced person. In addition, observe all laws regarding the disposal of waste oil and toxic fluids.

Protect The Environment




Warning



It is illegal to pollute drains, water courses, or soil. Use authorized waste disposal facilities, including civic amenity sites and garages providing facilities for receipt of used oil. If in doubt, contact your local authority for advice.

Vehicle Tool Kit

A vehicle tool kit is located in the rear stowage compartment.

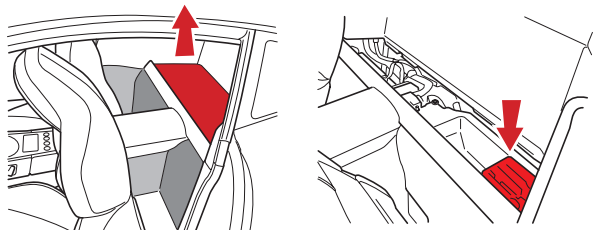

The tool kit consists of:

Item	Description
Towing eye	(Refer to 'Transporting and Towing', page 11.24)
Screwdriver	For the removal of the rear licence plate.

Item	Description
Road Wheel Lock Nut Socket (option)	For the removal of a road wheel(s) when Servicing / Maintenance is required.
Bulbs	Main Beam Dipped Beam (Halogen only) (Refer to 'Bulb Kit', page 11.39)

Fire Extinguisher (Option)

A fire extinguisher is installed in the trunk.

First Aid Kit (Option)

A first aid kit is located in the rear stowage compartment.

Owner Maintenance

In the interests of safety and reliability, it is advisable to carry out the following checks at the intervals suggested (more frequently if your vehicle is heavily used or operating in adverse conditions), and always before starting on a long journey. Refer to the following pages for advice and check procedures.

Before Use Check:

- Operation of lamps, horn, indicators, wipers, washers and warning lamps
- Check there is sufficient fuel for the intended journey, particularly at night and before entering highways
- Operation of the seat belts
- Operation of the brakes
- Check for fluid deposits underneath the vehicle

Weekly Checks

(daily if covering high mileage or touring)

- Tires
- Coolant level
- Brake fluid level
- Power steering level
- Operate Air Conditioning
- Windshield washer fluid level
- Check operation of windshield washers



Engine Oil Level

Check the engine oil level every fourth fuel tank fill or weekly - whichever is the soonest.

Opening / Closing the Hood


Opening

Take care not unintentionally to pull on or catch the Hood release lever.

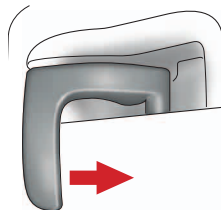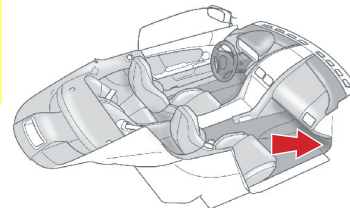

Pull lever (A) to release the hood latch. The hood will rise but remain secured by the hood secondary catch.

Lift slightly on the hood front edge whilst pulling upward on the hood safety catch (B) to release it. Lift the hood until fully open. The hood is held open by two gas struts.

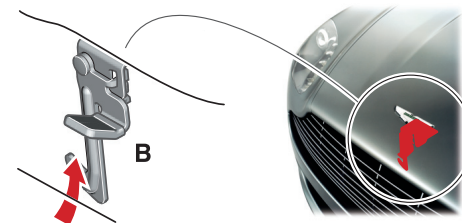

If the windshield wipers are switch on, they will temporarily rest in the park position while the hood is un-latched.


Closing

Before closing the hood, remove any tools, cleaning cloths, etc. from the engine compartment. Ensure that no one is obstructing the 'closing' area and that hands, clothing etc. are clear.

Lower the hood until it starts to fall under its own weight. At that point let the hood fall to close.

Warning

Do not pull on the hood secondary catch to assist in closing the hood. This may displace the hood secondary catch. If the catch is displaced it may not work correctly.

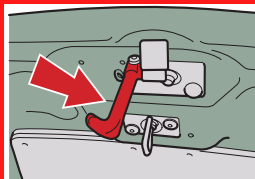


If the hood does not fully close or it opens during driving the warning message 'Hood not fully closed' will appear in the message display right and an audible warning will sound.

If the hood does not shut, open the hood again and repeat the closure procedure, this time assist using light hand pressure as the hood falls.

Hard pressure on a hood that has not closed correctly may damage the hood.

Fluid Levels

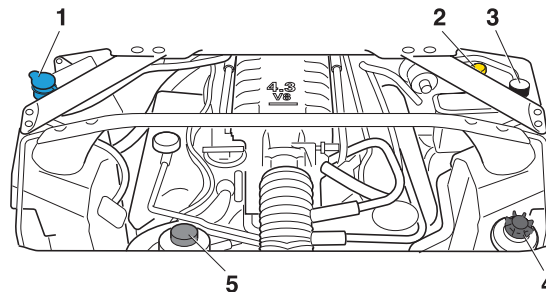

1. Washer Fluid Reservoir.
2. Engine Coolant Reservoir
3. Brake Fluid Reservoir.
4. Power Steering Fluid Reservoir.
5. Engine Oil Filler Cap and Dipstick

⚠ Warning ⚠
Engine components may be hot and could cause severe burns.

Windshield Wash Fluid Level

Top up as required. In winter, to prevent the windshield wash fluid freezing, increase the fluid concentration (refer to the manufacturers recommendations on the windshield wash fluid container).

When the level of screen wash fluid is low an information message will show in the message centre right and the amber warning lamp will illuminate.



State or local regulations may restrict the use of volatile organic compounds (VOCs), which are commonly used as antifreeze agents in windshield washer fluid. A windshield washer fluid with limited VOC content should be used only if it provides adequate freeze resistance for all regions and climates in which the vehicle will be operated.

Windshield Washer Jets

Washer jet housings are located on the rear edge of the hood. Each housing contains two washer jets.

Windshield washer jets are set during manufacture and should not need adjustment. However, if adjustment is required, adjust up / down so that the fluid strikes between a third and half way up the windshield.

Brake Fluid Level

⚠ Warning ⚠
Do not drive the vehicle if the brake fluid level is below the Min. mark.

Ensure brake fluid does not contact the paint work during the topping-up operation. Serious paint work damage can result. If a spillage does occur, immediately flush any brake fluid from the paint work with clean, fresh water and then wipe with a clean damp cloth.

Wipe the reservoir cap clean before removing to prevent ingress of contaminants.



The brake fluid level should read between the Min. and Max. marks.

1. Remove the reservoir cap. Top up to the indicated Max. level.
2. Install the reservoir cap securely.

Engine Coolant Level Check

Warning
Do not remove the filler cap until the coolant system has cooled. Scalding can be caused by escaping steam or coolant.

Use a cloth or glove to protect hands and protect face and arms adequately.

1. Remove the pressure cap to check the coolant level. The correct coolant level is to the top of the reservoir tank. Top up with the correct antifreeze mix (Refer to 'Fluids and Capacities', page 12.11), if required.



2. Ensure the filler cap is secure after topping up.

Do not over tighten.

If required to remove the pressure cap before the engine is cold, **use gloves or a protective cloth** and slowly loosen the pressure cap. Allow residual pressure to slowly drop. Continue to turn the pressure cap until it is released.

Power Steering Fluid Level

Ensure power steering fluid does not contact the paint work during topping up. Serious paint work damage can result. If a spillage does occur, immediately flush any power steering fluid from the paint work with clean fresh water, then wipe with a clean damp cloth.

Always check the reservoir level when the engine is cold and with the front road wheels in the straight ahead position.

Wipe the reservoir cap clean before removing to prevent an ingress of contaminants.



1. Remove the reservoir cap and wipe the dipstick clean with a lint free cloth. Replace and remove again. The fluid level should read between the Min. and Max. marks.
2. If required, top-up fluid level. **Do not overfill.**

Engine Oil Level



Warning

Engine components may be hot and could cause severe burns.

Running the engine with engine oil below the lower mark or above the upper mark can cause serious engine damage.

Ensure that there is oil in the reservoir before the engine is started. Look for an indication of engine oil on the dipstick.

Running the engine with no engine oil in the reservoir can cause serious engine damage.

The vehicle should be on level ground.

Before starting the engine to check the oil level, remove the oil reservoir cap and wipe the dipstick clean with a lint free cloth. Replace the cap fully tighten and then remove. Check that there is engine oil on the dipstick.

If there is no oil on the dipstick top up the reservoir until oil registers on the dipstick. Replace the cap and fully tighten.


Oil Level Check

Oil will expand when hot. For an accurate indication, check the engine oil level when the engine is cold.

1. Run the engine at 1500 - 2000 rpm for 20 seconds. Switch the engine off.
2. Wait 30 seconds then remove the oil reservoir cap and wipe the dipstick clean with a lint free cloth. Replace the cap and fully tighten.

- Remove the cap again - avoid contact with the sides of the tank.

If the level is below Max., top up to the Max. mark with the recommended engine oil.

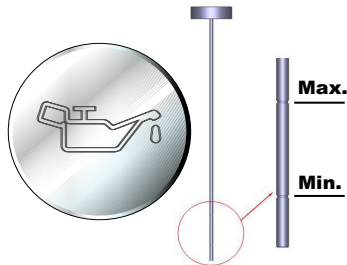




Min. to Max. is 4 pts (2 ltr).

- Repeat from step 1 to check the level.

Windshield Blade Replacement

To replace the windshield wiper blades the wiper arms must be set at 90° to the vehicle.

- While holding in buttons 8 and 9 (infotainment keypad) turn the ignition key from position 'O' to position 'II'. This will manoeuvre the wiper blade arms to the 90° position. Return the ignition key to position 'O'.
- Lift the wiper arm(s) up and remove the worn wiper blade(s). Install the new wiper blade(s) and lower the wiper arm(s).
- After replacing the wiper blade either:
 - Turn the ignition key back through to position 'II' to lower the wiper arms. Return the ignition key to position 'O' or remove.
 - Operate the wiper stalk - the wiper arms will complete the request and then park.

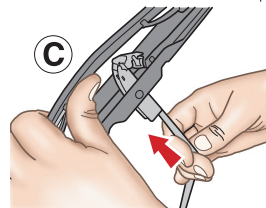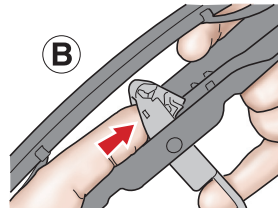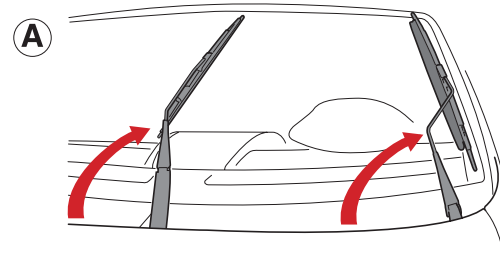

Brake Pad 'Bedding-in'

Failure to 'bed-in' new brake pads will result in reduced brake performance and possible brake judder or squeal.

After the installation of new brake pads, brake performance will be limited, as the brake rotors and pads need to be 'Bedded-in'. For the first 250 mile (400 km) of new brake pad use, avoid excessive braking (hard stops from high speed, alpine descents, etc.).

Wheels and Tires

Tires of the correct type, manufacturer and dimensions, with correct cold inflation pressures are an integral part of every vehicle's design. Regular maintenance of tires contributes not only to safety, but to the designed function of the vehicle. Roadholding, steering and braking are especially vulnerable to incorrectly pressurised, badly installed or worn tires.

Tires of the correct size and type, but of different make have widely varying characteristics.

Only install tires approved by Aston Martin (Refer to 'Tires', page 12.6).

Tire Pressures

Ensure that correct tire pressures are carefully maintained (Refer to 'Tires', page 12.6). Road holding, steering, braking and tire wear are especially vulnerable to incorrect tire pressures.

Check tire pressures regularly and before starting any journey. Re-inflate any tire with a low pressure at the earliest opportunity.

Pressures increase slightly when the tires are hot. For an accurate reading, pressures should be checked when the tires are cold. After adjusting the tire pressures, ensure that the valve caps are securely replaced to provide an additional air seal and to prevent the ingress of dirt.

Tire Service

Because of the high performance potential of this vehicle, Aston Martin strongly recommend replacement of any damaged or worn tire.

The recommended tires for this vehicle are asymmetrical and must be installed to the wheel with the tire mark 'Outside' on the outside of the wheel rim.

They are also of different sizes on the front and rear axles, therefore complete wheels cannot be swapped between axles. Complete wheels can, however, be swapped from side to side on the same axle.

Damage

Tires should be examined at regular intervals for wear and damage. Inspect the tire treads and sidewalls for damage, i.e. bulges in the tread or the sidewalls, cracks in the tread groove and separation in the tread or the sidewalls. If damage is observed or suspected have the tire inspected by a tire professional.

Stones or other objects which have become lodged in the tire treads should be carefully removed.

Flat Spots

It is a characteristic of high performance tires that temporary 'flat spots' may develop if the vehicle is left standing in high or low ambient temperatures for any length of time.

These 'flat spots' will manifest themselves as minor vibrations when the car is first driven from cold. As the tires warm up to operating temperature, normal tire shape should be restored and the vibrations cease. If vibrations persist, consult your Aston Martin Dealer.

Age

Tires degrade over time, even when they are not being used. It is recommended that tires generally be replaced after 6 years of normal service. Heat caused by hot climates or frequent high loading conditions can accelerate the aging process.

State or local regulations on tire life may apply.

New Tires

New tires should not be installed to the front wheels in combination with worn rear tires, as rear end stability will be affected. When new tires are required consult your Aston Martin Dealer for advice if the rear tires are also worn. Each wheel and tire unit must be balanced dynamically to ensure efficient steering, optimum tire wear and maximum ride comfort. Because of the potentially high speeds, it is essential that wheel balancing is carried out when new tires are installed.

'Running-In' New Tires

When new tires have been installed, speed should be limited, particularly during the first 50 mile (80 km) or so of driving. Fast cornering, hard braking, and harsh acceleration should also be avoided during this period.

Tread Wear Indicators

Tread wear indicators (A) are incorporated into the construction of all tires. These indicators are integral moulded ribs spaced at regular intervals around the circumference of the tire and extend across the full width of the tread, in all primary grooves.



When a tire has worn causing one or more of the indicators to be flush with the outer face of the tread the tire has reached its wear limit. It then becomes illegal in certain countries and must be replaced.



ASTON MARTIN

Winter Wheels and Tires

The tires installed as original equipment are designed with a rubber compound, tread pattern and width specially suited for high speeds in normal road conditions, but they are less suitable during extremes of low temperatures, snow and ice. The use of winter tires will considerably improve handling during these conditions.

Two options are available for winter motoring.

Winter Tires

Only use Aston Martin approved winter tires.

Winter tires must be used in vehicle sets, that is, installed on all four wheels. Four special wheel rims and winter tires (Refer to 'Winter Tires', page 12.7) are required for severe weather driving. Do not exceed the tire speed rating when using winter tires.



Warning

Maximum speed with winter tires is 149 m.p.h. (240 kph).

Contact your Aston Martin Dealer.

Snow (Chains) Spiders

These are available from your Aston Martin Dealer for temporary use when driving in heavy snow conditions. Snow spiders should only be installed to the rear (driven) wheels.



Warning

The maximum speed when using snow spiders is 30 m.p.h. (48 km/h). Remove the snow spiders immediately the roads are clear of snow.

Ensure the installation instructions supplied with the snow spiders are kept in a safe place.

Tire Sealant System



Warning

Read these instructions and warnings carefully before using the sealant system.

Compliance with these instructions is vital to guaranteeing vehicle safety and, if a damaged is being sealed, the safety of the user as well. Noncompliance with these instructions means risking severe damage and hazardous vehicle behavior which can lead to a road accident involving damage to property and / or injury to persons.

- Ensure the vehicle is parked far enough from traffic so that there is no danger from passing vehicles and passing traffic is not disrupted. Warn other vehicles using the warning triangle
- Read the user instructions and warnings on the system

- The system should only be used between – 40°F and 158°F (– 40°C and 70°C)
- The system will effectively seal a tire that was punctured by an object with a diameter of up to 1/4" (6mm).

It is possible that a tire, especially with greater damage, will not be sealed.

- Do not remove the object(s) that punctured the tire if they are still lodged in the tire
- Do not exceed a maximum speed of 50 m.p.h. (80 km/h) at any time after sealing the tire with the system
- The system provides only a **temporary emergency repair** for continuing the journey up to 125 mile (200 kms) or to the nearest Aston Martin Dealer

- If the nearest Aston Martin Dealer is over **125 mile (200 kms)** away contact Aston Martin Roadside Assistance (Refer to 'Assistance', page B.1)

⚠ Warning ⚠

If, at any point, the tire cannot be repaired or subsequent checks within this procedure indicate that the tire is defective, do not continue the journey.

Contact Aston Martin Roadside Assistance (Refer to 'Assistance', page B.1).

- The sealant bottle needs to be exchanged before it's date expires. **Do not** use the system after the expiry date on the sealant bottle or the casing has been reached. Contact your nearest Aston Martin Dealer

- Do not attempt to inflate objects other than a passenger vehicle tire

⚠ Warning ⚠

Do not attempt to seal up damage other than that located within the visible tread of the tire. Do not try to seal damage to the tire's sidewall.



⚠ Warning ⚠

Do not use the tire sealant system if the tire has already been damaged as a result of being driven under inflated. Do not continue your journey.

Sealing a Punctured Tire

Stage 1: Pumping the tire sealant and air into the tire

1. Remove speed label (D) from the system and place it on the steering wheel, below the metal ring (1), as a reminder to not exceed the Maximum speed.
2. Ensure that the orange On / Off switch (B) is in the '0' position.

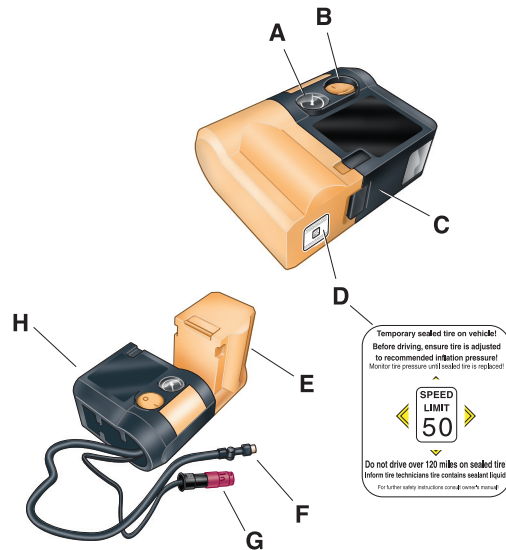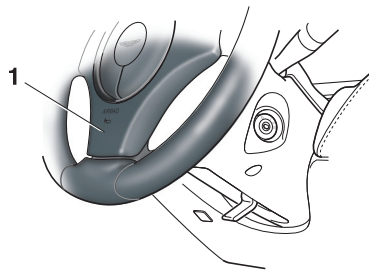

3. Remove the lead (G) and the hose (F) from the compartment (H) on the side of the system.
4. Remove the valve cap from the punctured tire and screw the hose (F) of the system onto the tire valve.
5. Place the lead plug (G) into the accessory socket of the vehicle.
6. Release the safety latch (C) and turn the orange part of the system through 90° (E), so that the orange part is in the vertical position.

Warning

It is dangerous to inhale car fumes. Do not leave the engine running in closed or insufficiently ventilated areas.

7. Start the engine of the vehicle (Only if the vehicle is in an open and well ventilated area).

⚠ Warning ⚠

Do not stand directly beside the tire while the compressor is pumping. Watch the side wall of the tire. If there are any cracks, bumps or similar damage turn off the compressor. The journey should not be continued. Contact your nearest Aston Martin Dealer.

8. Turn the orange On / Off switch (B) to position 'I'.

While pumping the sealant through the tire valve a temporary pressure of 60-90 psi (4-6 bar) may arise. After approximately 30 seconds this pressure will drop.

9. Inflate the tire for 7 minutes. Switch off the compressor briefly by pressing 'O' so as to be able to read the actual tire inflation pressure on the gauge (A).

⚠ Warning ⚠

If a tire pressure of 26 psi (1.8 bar) cannot be reached in 7 minutes then the tire can not be sealed. Do not attempt to reinflate the tire. Contact your nearest Aston Martin Dealer.

10. If a tire inflation pressure of 26 psi (1.8 bar) is reached, unscrew the hose from the tire valve and screw on the valve cap.
11. Remove the lead from the accessory socket. Return the orange part of the system to its original position and fasten the latch. Stow the system safely in vehicle.

⚠ Warning ⚠

If the pressure in the tire after driving for 2 mile (3 kms) is below 19 psi (1.3 bar) the tire has not been effectively sealed. The journey should not be continued. Contact your nearest Aston Martin Dealer.

12. Immediately continue with your journey for approximately 2 mile (3 kms) at a maximum speed of 50 m.p.h. (80 km/h) to allow the sealant to seal the puncture.

Stage 2: Checking the tire pressure

1. Stop after driving for approximately 2 mile (3 kms) and re-check the tire pressure by following these steps:
 - 1 Connect the hose to the tire valve.
 - 2 Plug the lead plug into the accessory socket.
 - 3 Read the pressure off the pressure gauge.
2. If the tire pressure is more than 19 psi (1.3 bar) then switch the system on and inflate the tire to the required tire pressure (Refer to 'Tires', page 12.6) (Pump for approximately 2 minutes.) Use the pressure release valve on the hose (F) if the tire pressure is too high.
3. Remove the hose from the tire valve, replace the valve cap, disconnect the lead and stow the system safely in the vehicle.

⚠ Warning ⚠

After using the sealant drive no faster than 50 m.p.h. (80 km/h).

⚠ Warning ⚠

The damaged tire must be replaced as quickly as possible (within a maximum driving distance of 125 miles (200 km)).

⚠ Warning ⚠

Do not continue the journey if heavy vibrations, unsteady steering behaviour or noises should occur while driving. Hidden tire damage will not be remedied by using a sealant.

⚠ Warning ⚠

Before driving ensure that the tire is adjusted to recommended inflation pressure (as described above from 'Checking tire Pressure'). Monitor the tire pressure until the sealed tire is replaced.

The tire sealant kit only provides temporary mobility. Always refer to local laws and regulations on the use and repair of tires that have been treated with any form of temporary mobility aid.

Consult a tire specialist for advice.

4. Drive to the nearest tire specialist and have the damaged tire replaced.

Inform the tire specialist that the tire contains sealant.

Both the hose and the bottle of sealant need to be replaced after using the system.

Sealant deposits in a used hose may impair proper functioning of the system.

New bottles of sealant can be purchased from your Aston Martin Dealer.

Dispose of **empty** sealant bottles together with normal household waste.

Remains of liquid sealant must be handed over to your dealer or disposed of in compliance with local waste disposal regulations.

To Pump Air Only

1. Ensure that the orange On / Off switch (B) is in the '0' position.
2. Remove the lead and the hose from the compartment (H) on the side of the system.
3. Connect the hose to the valve
4. Do not release the safety latch (C) and do not turn the orange part of the system into the 90° position (E). The orange part should be in the horizontal position.
5. Place the lead plug (G) into the accessory socket of the vehicle.

Warning

It is dangerous to inhale car fumes. Do not leave engine running in closed or insufficiently ventilated areas.

6. Start the engine of the car (Only if the car is in an open and well ventilated area).
7. Turn the orange On / Off switch (B) to the 'I' position.
8. Inflate the item to the required pressure.

Warning

Do not inflate items with pressure requirements of more than 58 psi (4 bar).

9. Turn the orange On / Off switch (B) to the '0' position when the required pressure has been reached.

Department of Transportation

Uniform Tire Quality Grades

The following information relates to the tire grading system developed by the National Highway Traffic Safety Administration, which grades tires by tread wear, traction and temperature performance.

All passenger vehicle tires must conform to federal safety requirements in addition to these grades.

Tread Wear

The tread wear grade is a comparative rating based on the wear rate of a tire tested, under controlled conditions, on a specified government test course. For example, a tire graded 150 would wear one and a half times ($1\frac{1}{2}$) as well, on the government course, as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the normal due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction

The traction grades, from highest to lowest, are AA, A, B, and C. The grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

 **Warning** 
The traction grade assigned to this tire is based on straight-ahead braking traction tests and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

Temperature

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Safety Standard No. 109.

Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.



Warning

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, under inflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.



ASTON MARTIN

Transporting and Towing

The recommended method for moving a defective vehicle is to have it transported in a purpose built, covered, vehicle transporter.

When moving the vehicle by transporter ensure the vehicle is not strapped down by the suspension control arms.

The front towing eye is only for **emergency use** when moving the vehicle for **short distances**, e.g. If it is causing an obstruction or if it requires winching onto a transporter.

If moving the vehicle in such a situation:

Power braking and power steering are not available with the engine turned off. Substantially higher brake pedal pressures and steering effort are required.

1. Rear Only.


Use the screwdriver, provided in the vehicle tool kit, to remove the rear licence plate.

2. Remove the towing eye from its storage location in the vehicle tool kit.
3. Install the towing eye to the exposed female threads (A) Front, (B) Rear.

The towing eye incorporates a left hand thread.

4. Select 'Neutral'. Turn the ignition key to position 'I'.
5. When being towed use the parking brake or footbrake very gently as required to prevent excessive slack in the tow rope.

If a transmission fault is present, this vehicle must be transported.

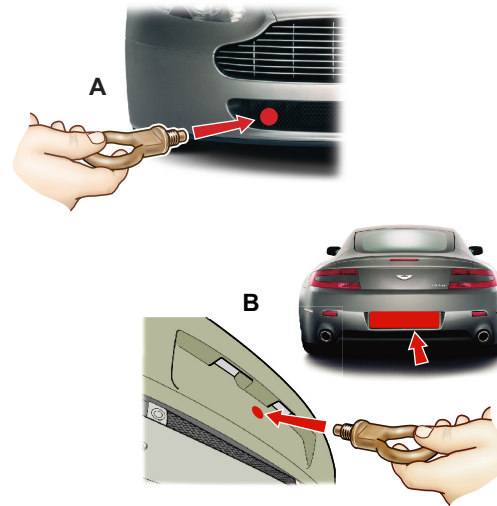

Battery Warnings


The following warnings are located on the vehicle battery.



Battery

The engine must never be run with the battery disconnected.

The battery (A) is maintenance free and should only require checking by your Aston Martin Dealer during regular vehicle services.

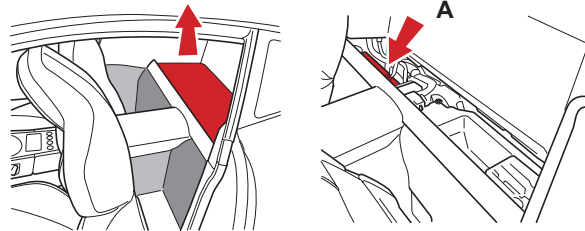

Apart from vehicle recovery, this vehicle must not be driven if the vehicle battery is incapable of starting the engine. In this case the vehicle battery must be replaced. Contact your Aston Martin Dealer.

Warning

Wash hands after handling the battery posts, terminals and any related battery accessories. These items contain lead and lead compounds.

Warning

Do not allow flames, sparks or lighted substances to come near the battery. Batteries normally produce explosive gases which can cause personal injury. When working near the battery, always shield your face and protect your eyes. Always provide proper ventilation.

⚠ Warning ⚠

When lifting a plastic-cased battery, excessive pressure on the end walls could cause acid to flow through the vent caps, resulting in personal injury and/or damage to the vehicle or battery. Lift the battery with a battery carrier or with your hands on opposite corners.

⚠ Warning ⚠

Keep batteries out of reach of children.

⚠ Warning ⚠

Batteries contain sulphuric acid. Avoid contact with skin, eyes or clothing. Shield your eyes when working near the battery to protect against possible splashing of acid solution. In case of acid contact with skin or eyes, flush immediately with water for a minimum of 15 minutes and get prompt medical attention. If acid is swallowed, call a physician immediately.

Battery Disposal

Always dispose of automotive batteries in a responsible manner.

Follow your local authorized standards for disposal. Call your local authorized recycling centre to find out more about recycling automotive batteries.

Battery Charge

Various systems, for example, the clock, security systems and Infotainment centre system continue to drain battery power even with the ignition switched off.

A **new fully charged** battery has the ability to start this vehicle, if left unused, for up to 45 days without the battery conditioner being used (Refer to 'Battery Conditioner (Option)', page 11.27) or the Battery Disconnect switch being activated (Refer to 'Battery Disconnect Switch (BDS)', page 11.28).

In cold climates this time may be reduced.

Battery charge can be drained excessively in a number of ways:

- If the vehicle is unused for long periods of time

Aston Martin recommend that if this vehicle is to be left unused for ten (10) days or more the battery conditioner (mains power available) or the BDS (mains power not available) should be used.

- If the vehicle is used regularly but only for short journeys, e.g. less than 30 mile (48 km) a journey
- If electrical systems are in use without the vehicle engine running
- If the vehicle ignition key is left in the ignition for long periods of time without the engine running

Excessive battery drain would ultimately mean that the battery would not be able to start the engine.

Battery Conditioner (Option)

If this vehicle is not going to be used for a period of time, and **mains power is available**, use a battery conditioner to maintain the battery charge level.



Warning

Do not attempt to start the vehicle with the battery conditioner connected to the mains supply.




Warning

Do not smoke. Prevent flames and sparks. Explosive gasses are given off by batteries during charging.

For indoor use only. Disconnect mains supply before making or breaking battery connections.

Ensure the vehicle is in a secure area.

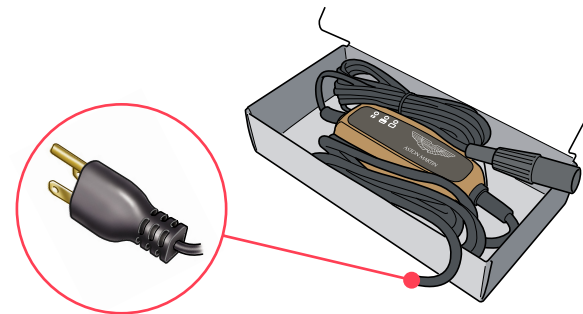



The battery conditioner (option) supplied with the vehicle is suitable for use on all types of 12 volt lead acid batteries.

The battery conditioner is designed for conditioning of partially or fully charged batteries.

When connected the battery conditioner will maintain a small trickle charge to keep the battery in a fully charged state. The battery conditioner may be left in this state indefinitely.

To Connect the Battery Conditioner

Do not leave the vehicle keys and remote transmitter in the trunk. If the tailgate is closed there will be no access to the contents of the trunk.

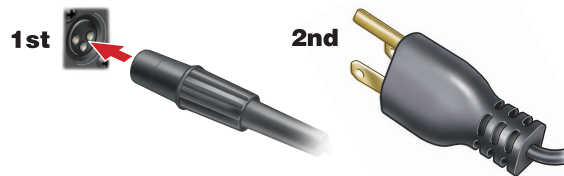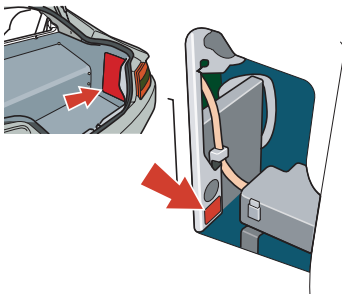

Gently close, but do not latch, the tailgate. This avoids possible damage to the tailgate water seal from the battery conditioner power cable.

With the tailgate left open the vehicle doors can be locked and armed (Refer to 'Leaving the Tailgate Open While the Vehicle is Locked', page 2.10).

To remove the battery conditioner first disconnect from the mains supply, then from the vehicle socket.


Battery Disconnect Switch (BDS)

Located in the trunk (right side).

If this vehicle is not going to be used for a period of time, and **mains power is not available**, press the Battery Disconnect Switch (BDS) to shut down all electrical systems, except:

- Vehicle access, via the remote transmitter
- Engine immobiliser (PATS)
- Alarm functions
- Door window memory
- Clock

Radio preset stations will be lost (Refer to 'Audio', page 7.1).

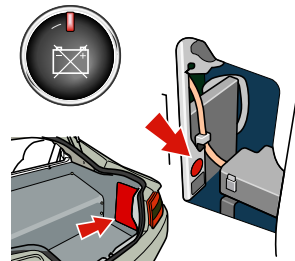




V8 Owner's Guide Correction



Battery Conditioner Plug

For Battery Conditioners with a Power Accessory Socket style plug.

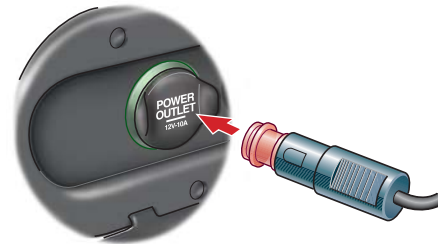




ASTON MARTIN



This will allow this vehicle to remain unused for up to 70 days (approx.) without any long term damage to the battery.

Once the BDS is activated the glovebox is locked (for added security). The Owner's Guidebook will not be accessible.

To reactivate the electrical systems and start this vehicle press the yellow Battery Connect Switch (BCS), which is located behind the RH seat.

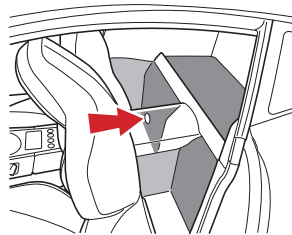

FAQ

Can the BDS be activated while driving?

No – The BDS can not be activated while the vehicle ignition is in positions 'I' and 'II'.

What if I press the BDS by accident?

In this situation you would not be able to start the vehicle.

How can I tell that the BDS has been pressed by accident?

Turn the ignition key to position 'II' – if the BDS has been activated the:

- Message Centre Right will display 'Warning BDS activated'
- Starter button will **not** illuminate red
- Engine check lamp on the instrument cluster will **not** be illuminated
- GPID, Message Centre Left and Odometer will display dashes
- Warnings lamps such as ABS, DSC and Brake will be illuminated

Battery Protection Mode

Using the vehicle electrical systems, i.e. the infotainment system, with the ignition key at position 'I' (engine off) will drain the battery charge. Eventually the battery will drain to such a low level that it will not start the engine.


Replace the battery as soon as possible, if the battery is not capable of starting the engine.

To avoid this happening, a series of safety mechanisms shut down non-essential electrical systems before excessive battery drain takes place.

Warning messages will appear indicating the state of the battery charge.

FAQ

What is the first indication of battery protection mode?

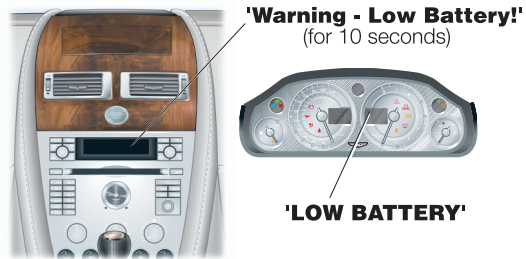


What should I do next?

Turn off all unnecessary electrical systems to reduce battery drain. Start the engine to recharge the battery. Run the engine for a reasonable length of time.

What happens if I ignore the warning messages?

After approx. two to ten minutes (dependent on the rate of battery charge drain) the following messages will appear:

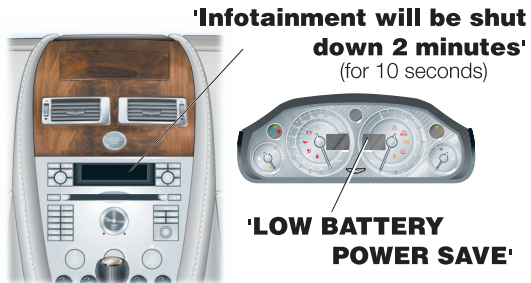

If the audio is on the sound will mute for 10 seconds and a short 'Beep' will be heard when the message is first displayed.

What should I do if these messages are displayed?

Turn off all unnecessary electrical systems. Start the engine to recharge the battery. Run the engine for a reasonable length of time.

What happens if I ignore second warning messages?

The infotainment system will shut down in two minutes. No other electrical system will be shut down. This significantly reduces the rate of battery drain. The following functionality will be lost:

- CD Player
- Radio Tuner
- Car Phone (option)
- Navigation System (option)

What should I do if the infotainment system shuts down?

Start the engine to recharge the battery. Run the engine for a reasonable length of time.

The infotainment system will not operate without the engine running until the battery has regained its charge.

With the engine running the infotainment system will start up.

What is a reasonable length of time to run the engine?

The vehicle battery normally requires a journey of approx. 30 mile (48 km) to bring the battery to a level where the infotainment system will operate again. Additionally, use the battery conditioner to restore the vehicle battery charge.

What if I cannot restart the engine?

If the battery has been run down to a point where it will not start the engine then an external battery charger will be required or your vehicle will require a 'jump start' (Refer to 'Electrical Start From Another Vehicle', page 11.32).

Replace the battery as soon as possible, if the battery is not capable of starting the engine.

Electrical Start From Another Vehicle

(Jump Start)

Apart from vehicle recovery, this vehicle must not be driven if the vehicle battery is incapable of starting the engine. In this case the vehicle battery must be replaced.

If the voltage or earth of the donor vehicle is different or not known, do not attempt starting in the way described.

If this vehicle will not start due to a discharged battery, it may be started, **for vehicle recovery**, by connecting the battery from another vehicle (donor) to this vehicle (recipient).

Warning

The donor vehicle must have a 12 volt battery and a negative (-), black earth terminal to ensure that the correct battery polarity is maintained.

Jump Start Procedure

1. Position the vehicles so that the connecting cables will reach into the recipient engine bay. Apply the parking brake and switch off the ignition.


Remove rings, metal watch bands and any other jewellery.

Turn off all electrical motors and ancillaries in both vehicles.

Switch off all lamps except those needed to protect vehicles or illuminate work area.

2. Access the jump start terminal in the recipient engine bay.

3. Connect the + ve (red) cable between the '+ve' (red) terminal of the donor battery and the jump start terminal of the recipient vehicle.
4. Connect the '-ve' (black) cable between the '-ve' (black) terminal of the donor battery and a good earth (-ve) point in the recipient engine bay (i.e. alternator mounting bracket).
5. Start the donor vehicle engine and run at about 1500 – 2000 rpm.

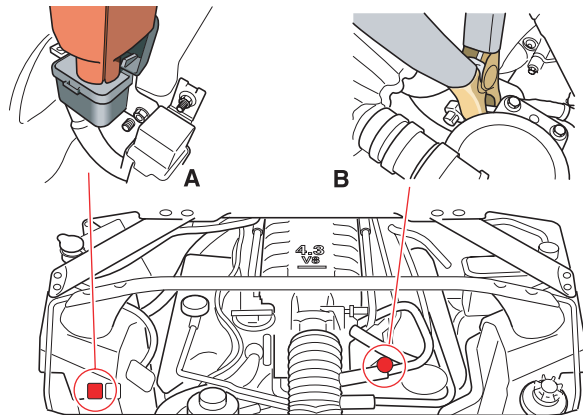

6. Start the engine of the recipient vehicle.

Recharge time will depend on the initial 'state of health' of discharged battery.

7. Once both vehicles are running remove the jump start cables (first the '- ve' (black) cable from both vehicles and then the '+ve' (red) cable from both vehicles).

Allow the recipient engine to run until the discharged battery is sufficiently recharged (15 to 20 minutes) to start the engine without assistance.

Switch off and restart the recipient engine. Take the vehicle on a long run to fully charge the battery.


If this vehicle will not start consult your Aston Martin Dealer.

Contact your Aston Martin Dealer to have the battery checked or replaced.

Fuses

The electrical system is protected by fuses. If any lamps, accessories, or controls don't work, inspect the appropriate circuit protector.

If a fuse has blown, the inside element will be melted. If the same fuse blows again, avoid using that system and consult your Aston Martin Dealer as soon as possible.

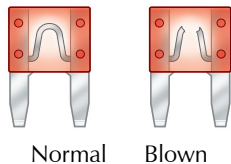


Fusebox Location

Engine Bay fuse box – Passenger Side.

Cabin fuse box – Passenger Footwell.

Trunk fuse box – RH side of trunk.

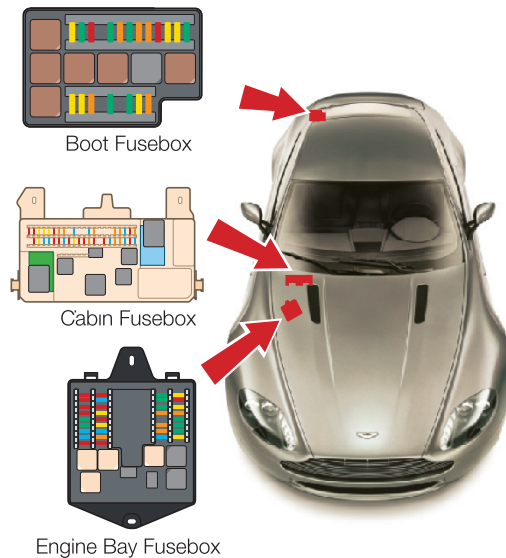

Engine Bay Fuses

Fuse	Rating	Function
F1	10A	Spare
F2	10A	Clock
F3	10A	Cooling fan module
F4	20A	Engine management (PCM)
F5	20A	Spare
F6	15A	Spare
F7	15A	Spare
F8	10A	Engine coolant level sensor / Valve electric vapour management (VEM)
F9	20A	Spare
F10	10A	A/C clutch

Engine Bay Fuses		
Fuse	Rating	Function
F11	15A	Horn
F12	10A	Keep alive power (PCM)
F13	20A	Injectors
F14	10A	Exhaust gas recirculation module
F15	25A	Starter motor solenoid
F16	15A	Coils / Suppressors
F17	5A	Glove box release solenoid
F18	15A	Exhaust Gas Oxygen (HEGO) sensors / Catalyst monitor sensor (CMS) / Variable camshaft timing solenoids (VCT)

Engine Bay Fuses		
Fuse	Rating	Function
F19	30A	ABS module / Battery feed
F20	30A	ABS module / Battery feed
F21	30A	Heated front windshield (option)
F22	5A	Mass airflow sensor (LH and RH)
F23		Blank
F24	5A	Alternator warning lamp
F25	5A	Spare
F26	20A	Headlamp wash pump
F27	25A	Spare
F28	10A	ABS module, Steering angle sensor / Ignition key reader

Engine Bay Fuses		
Fuse	Rating	Function
F29	25A	Spare
F30	5A	Battery sensing
F31	30A	Heated front windshield (option)
F32	30A	Wiper motor (slow)
F33	30A	Wiper motor (fast)
F34	20A	Heater Blower motor

Cabin Fuses		
Fuse	Rating	Function
F35	60A	Cooling fan module
F43	15A	Multi media module display / Phone (option) / GPS tuner (option) / Media player
F44	10A	Airbag module
F45	15A	Accessory socket illumination
F46	5A	Driver Information / Master lamp switch / Glove box relay / Master lock switch / Battery off switch / Tailgate release / Engine bay fusebox

Cabin Fuses		
Fuse	Rating	Function
F47	5A	Interior lamps (front / footwell) / Seat switchpack / Glovebox release / Fuel Flap release / Trunk accessory socket
F48	15A	Windshield washer relay and pump
F49	10A	Airbag module
F50	5A	Spare
F51	15A	Diagnostic inputs / Centre stack switches
F52	5A	Start button
F53	10A	Headlamp levelling module
F54	10A	Engine fuse box, Trunk fuse box
F55	20A	Spare

Cabin Fuses		
Fuse	Rating	Function
F56	10A	Centre console module / Sounder module / Hazard switch
F57	15A	Diagnostic connectors / Brake pedal switch
F58	10A	Headlamp (RH)
F59	10A	Headlamp (LH)
F60	15A	Drivers seat
F61	15A	Passenger seat
F62	20A	A/C module
F63	20A	Spare
F64	5A	AM / FM receiver module

Cabin Fuses		
Fuse	Rating	Function
F65	5A	Media player / Multi media module and display / Antenna amplifiers / Audio amplifier
F66	10A	Centre console module / Infotainment control module
F67	15A	Spare
F68	5A	Spare
F69	5A	Trunk fusebox
F70	15A	Spare
F71		Blank
F72		Blank
F73	5A	Spare

Cabin Fuses		
Fuse	Rating	Function
F74	15A	Fuel pump
F75		Blank
F76		Blank
F77	15A	Trunk power output
F78		Blank
F79	5A	Reversing lamps / Parking Assist module
F80	5A	Battery 'Off' switch
F81	20A	Ignition switch
F82	25A	Passenger door module

Cabin Fuses		
Fuse	Rating	Function
F83	25A	Driver door module
F84	25A	Passenger seat power and switch pack
F85	25A	Driver seat power and switch pack
F86	5A	Start button, Driver and passenger seats / Engine fusebox

Trunk Fuses		
Fuse	Rating	Function
F1	5A	Spare
F2	20A	Spare
F3	30A	Heated rear windshield
F4	20A	Spare
F5	30A	Audio amplifier
F6	20A	Spare
F7	5A	Battery disconnect switch (BDS) power
F8	30A	Spare
F9	30A	Fuel pump module
F10	30A	Spare
F11	20A	Spare

Trunk Fuses		
Fuse	Rating	Function
F12	20A	Spare
F13	10A	Spare
F14	5A	Rear parking assist module
F15	5A	Spare
F16	30A	Spare
F17	5A	Spare
F18	30A	Audio amplifier
F19	5A	Spare
F20	10A	Spare
F21	30A	Spare
F22	20A	Exhaust by-pass valve and vacuum pump



ASTON MARTIN

Bulb Kit

Any bulb used from the kit should be replaced at the earliest opportunity so that a full bulb kit is always available.

Specification	Type
Main beam	12V 65W (H9)
Dipped beam	12V 55W (H11)

Vehicles installed with HID dipped beam bulb (option).

HID bulbs are not renewable. Refer to your Aston Martin Dealer if a HID bulb fails to operate.

Headlamp Units: Condensation


The headlamp units will generate condensation under certain conditions. However, this should clear after approximately 10 minutes.

Headlamp Bulbs


Access

Access to the headlamp unit is through an access panel in each wheel arch liner.

Turn the steering to the opposite lock from the headlamp unit with the defective bulb. Using a flat blade, i.e. a screwdriver or a small coin, release the screw on the access panel. Remove the access panel.

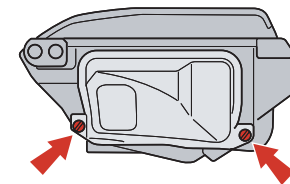

Using a screwdriver release the two knurled screws and remove the headlamp unit cover.

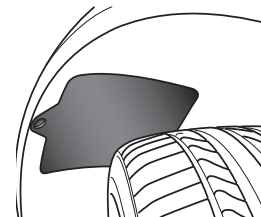

Headlamp Bulbs

- Main Beam
- Dipped Beam (Halogen (Standard))




Warning

Handle a halogen headlamp bulb carefully and keep out of children's reach. Grasp the bulb by only its plastic base and do not touch the glass. The oil from your hand could cause the bulb to break the next time the headlamps are operated.

1. Remove the access cover.
2. Rotate the bulb unit a quarter turn anticlockwise.

A - Dipped beam

B -Main beam

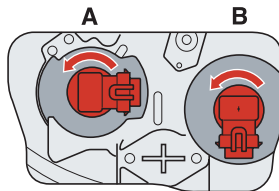

The main beam bulb (B) is inboard on both the left and right headlamp units)

Withdraw the unit and disconnect the wiring harness plug.

3. Connect a new bulb unit, insert the bulb unit and turn a quarter turn clockwise to lock. Install the headlamp access cover and wheel arch liner access panel.

Bulb specification – (Refer to 'Bulbs', page 12.7)

Dipped Beam Bulb (HID (Option))



Warning

High Intensity Discharge (HID) bulbs produce a very high voltage. They should only be serviced by an Aston Martin Dealership.

HID systems produce a brilliant white light by establishing a high-voltage electrical arc between two electrodes within a sealed glass tube. Once the arc is established, the voltage lowers to normal operating conditions.

HID bulbs are not renewable. Refer to your Aston Martin Dealer if a HID bulb fails to operate.

Front Indicator and Parking LED's


The front indicators and parking lights consist of LED's and are not repairable.

LED's can last tens of thousands of hours and are resistant to heat, cold, shock and vibration.

If a front indicator and / or a parking light LED fails contact your Aston Martin Dealer.


Headlamp Alignment

Headlamp aim check / adjustment must be completed with the vehicle parked on a flat surface facing a vertical wall at a distance of 25 ft. (7.6 m) to the outboard internal lens, with no additional loads in the vehicle.

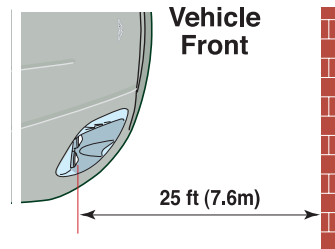

Check

1. Switch on the dipped beam, ensuring that only the outer lamp each side is illuminated.
2. Measure the height of the LH side of the beam pattern projected onto the wall. This should measure 23.19 in. (0.60 m) from the ground for a correctly aimed lamp. This must be completed for both RH and LH headlamps.

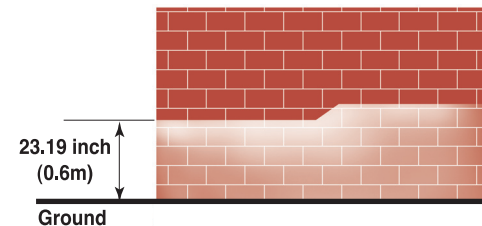

Adjustment



Warning

Never allow anyone to turn the steering wheel whilst working in the road wheel arch.




Warning

Never remove the bulb access caps without reading the the bulb replacement instructions.

Should either headlamp require adjustment:


1. Remove the access panel.
Turn the retaining screw 90° anti clockwise using a flat bladed screw driver or coin and pull out the access panel.

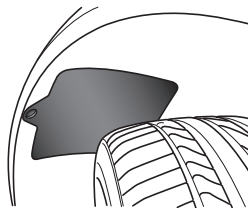

2. Adjust the headlamp aim by turning the adjusters using a T-20 torx driver.



**Horizontal aim (A)
Vertical aim (B).**

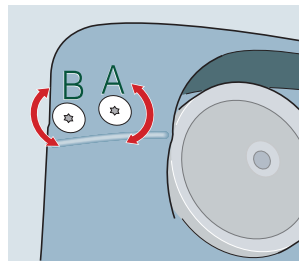

3. Replace the access panel by snapping into place and installing the retaining screw, and turning 90° clockwise.

Check the vertical beam angle by reversing the vehicle backwards 12 ft. (3.6 m) and repeating the check procedure. The beam height should have reduced by 1 in (25 mm).

Rear Lamp Clusters

Rear Lamps

The rear indicators, stop / tail, reversing lamps and rear Fog LED's are contained in a sealed lamp cluster unit, one either side of the vehicle. The lamp cluster is not repairable.

LEDs can last tens of thousands of hours and are resistant to heat, cold, shock and vibration.

If a rear lamp fails contact your Aston Martin Dealer.

Other External Bulbs

Side Marker Lamps

If a side marker lamp bulb fails to operate, contact your Aston Martin Dealer.


Licence Plate Lights

1. Taking care not to damage the vehicle trim, lever out the lens unit (A).

Always lever from the left hand side of the lens unit.

2. Twist, anticlockwise, and remove the bulb holder. Replace the defective bulb.
3. Install the bulb holder and clip the lens unit into it's housing.

Bulb specification – (Refer to 'Bulbs', page 12.7)

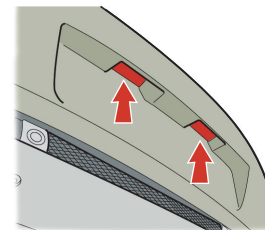

Internal Bulbs


High Level Stop Lamp

The high level mounted stop lamp unit consists of LED's and is not repairable.

LEDs can last tens of thousands of hours and are resistant to heat, cold, shock and vibration.

If a high level mounted stop lamp LED fails contact your Aston Martin Dealer.

Trunk Lamp

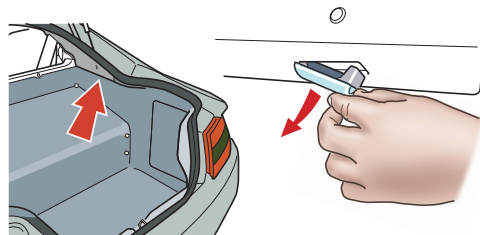

1. Taking care not to damage the vehicle trim, lever out the lens unit (A). Replace the defective bulb.
2. Clip the lens unit into it's housing.

Bulb specification – (Refer to 'Bulbs', page 12.7)

Interior Lamps


(A) Footwell

(C) Reading

(B) Door

1. Taking care not to damage the vehicle trim, lever out the lens unit.
 2. Replace the defective bulb.
- Door lamp only:** Open the access flap and replace the defective bulb
3. Press the lens unit into its housing until it clips into position.

Bulb specification – (Refer to 'Bulbs', page 12.7)

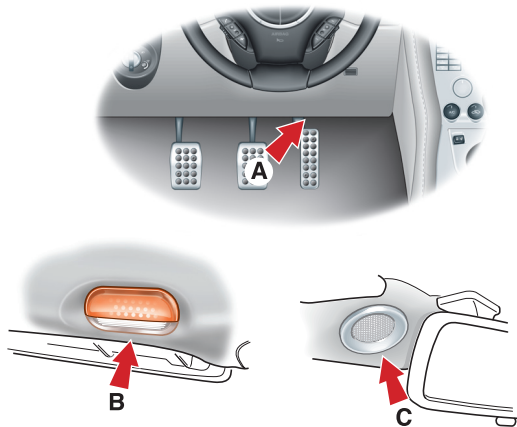

If power to the electric windows has been interrupted for any reason, they will fail to operate correctly until reset.

1. Open both doors. Sit in the driver's seat and turn the ignition to '0'.
2. Press firmly and hold the window switch until the window is at the maximum down position. Continue to hold the button for 5 seconds then release.
3. Pull back and hold the window switch until the window is in the maximum up position. Continue to hold the switch for a further 5 seconds, then release.
4. The window is now reset. Repeat for the second window.

Bodywork

Checks and Maintenance

Door drain holes

Check the drain holes in the bottom face of each door periodically and clear if necessary with, i.e. a short length of wire or a pipe cleaner.

Vehicle Cleaning

Paint Work

Modern water based paints are much safer and more environmentally friendly than solvent based paints. Water based paints are however more susceptible to contamination and marking by corrosive substances. The following list is not exhaustive but does indicate the most common contaminants which may adversely affect your paint work:

Other groups of contaminants may be added to this list as experience of water based paints and finishes increases.

- Bird Droppings
- Antifreeze
- Tree Sap
- Oils and Greases
- Insect Remains

Wash such substances from the car using clean water at the earliest opportunity, especially in sunny weather which can accelerate contamination.

Washing



Warning

Washing and polishing agents containing silicone should not be applied to glass. This will reduce the efficiency of the windshield wipers, causing smears which will reduce visibility, particularly during darkness and in the rain.

Using automatic car washes and power-operated mops are not recommended, since prolonged use will cause fine scratches in the paint surface.

For best results, do not wash the vehicle in strong sunlight. Allow the vehicle to cool before washing. Do not use household soaps or detergents. Do not direct hoses at full force around the door and tailgate seals.

When washing the vehicle use plenty of clean, cold or luke warm water. Remove dust or mud from the paint work by brushing in a gentle flow of water from a hose.

To delay the onset of corrosion developing on the brake rotors Aston Martin recommend that after washing this vehicle, the vehicle should be driven a short distance to ensure that all water / washing product has dried off.

Aston Martin recommends the use of 'AUTOGLYM' car care products or preparations of similar reputable manufacture for adding to the washing water. The use of mild 'detergents' as directed by the manufacturers will also help. When dust and mud have been removed with a hose brush and water, finally dry with a chamois leather, which should be rinsed regularly in clean water.

During the winter months, it is advisable to wash the car more frequently, paying particular attention to the underside to combat the detrimental effects of any salt and sand contamination picked up from treated roads.

Polishing

Approximately twice a year, a good quality polish should be applied and then buffed, using a soft lint-free cloth.

Alloy wheel rims should be treated with a cleaner which is specifically manufactured for this purpose.

Upholstery, Carpets and Seats

The seats and soft trimmed components of this vehicle are covered in hand crafted leather.

In order to maintain the beauty of leather it will require regular cleaning, which, if neglected, may cause deterioration. Where dust and dirt are allowed to accumulate and become engrained in the surface the leather may become permanently damaged.

Certain types of clothing, such as denim and vegetable tanned leather, are prone to 'dye transfer'. This can cause discolouration in the leather. Ensure that affected areas are cleaned and re-protected as soon as possible.

Cleaning

Leather faced features should be cleaned with a with a damp cloth moistened with an undiluted leather cleaner.

Aston Martin recommend that at least every six months, a leather conditioner or preservative should be used.

Appropriate leather care materials are obtainable from your Aston Martin Dealer.

⚠ Warning ⚠

Always follow the cleaning product manufacturer's printed warnings and instructions. Fumes from cleaning products may be dangerous in confined spaces. Make sure that the vehicle is well ventilated.

Do not use chemical or abrasive materials to clean the leather. Petrol, white spirit, alcohol, detergents, washing-up liquid, household cleaners, furniture polishes / creams or solvents should never be used on the leather. These products may give an initially impressive result, but their use will lead to rapid deterioration of the leather and will invalidate the warranty.

Alcantara roof linings and other soft trimmed areas may be brushed with a soft brush. Stains from water based substances such as coffee, tea or soft drinks should be cleaned as soon as possible with mild soap and water. Please consult your Aston Martin Dealer for instructions on the removal of more difficult stains such as oil, grease or ballpoint ink.

Carpets should be cleaned regularly with a vacuum cleaner. Any stains or grease marks should be removed with a good quality solvent suitable for use on carpets.

Care and Maintenance of Seat Belts

To ensure that restraint webbings are in proper working order, regularly check the seat belts. Look for fraying, cuts, burns and similar problems. Ensure that the latches and buckles function correctly. If a seat belt is not in good condition or is not working properly, consult your Aston Martin Dealer.

Any seat belt that has been worn during a serious collision should be replaced by an Aston Martin Dealer.

Do not allow seat belts to be retracted until they are completely dry.

To clean the seat belts, use mild soap and water; do not use bleach, solvents or dyes as they can weaken the material. Allow the seat belts to dry thoroughly before use.

Under Hood Cleaning

Under hood cleaning using high pressure hoses or steam cleaners should not be carried out. The electronic control module connections and fuse boxes can be damaged by indiscriminate use of high pressure cleaning equipment.

Vehicle Storage

Recommendations

These recommendations apply to new and pre-owned cars either in Dealer or Customer ownership.

If your vehicle is not to be used for periods in excess of three months it should be stored in a dry, well ventilated building.

1. Drive your vehicle for a sufficient distance to warm the oil in the engine and the transaxle; this ensures complete lubrication of the internal components.
2. Check the engine coolant level. Top up if necessary with the correct antifreeze / water solution.
3. In order to take the weight off the tires, raise the vehicle with a jack and place supports under the front and rear suspension.

If the vehicle is not raised from the ground, increase the tire pressures to 50 psi (3.4 bar / 340 kpa). Cover the tires to exclude any light. Rotate the wheels 1/4 turn every month to avoid tire flat spots.

4. If mains power is available, connect and switch on the battery conditioner to maintain the battery in a fully charged state. If mains power is not available, press the battery disconnect switch to reduce quiescent drain to a minimum.

5. Once a month:
 - 1 Disconnect the battery conditioner or connect the battery by pressing the battery reconnect switch.
 - 2 Start and run the engine until it is fully warmed up.
 - 3 Check there are no fluid leaks.
 - 4 Switch off the engine.
 - 5 Connect the battery conditioner or press the battery disconnect switch.
 - 6 Check and correct tire pressures if necessary.

When returning the vehicle to normal service, set the tire pressures to normal specification before driving on the road.

Extended Storage

For storage periods exceeding six months the following measures are recommended;

Do Not Drain Fuel System.

1. Run your vehicle until there is as small a quantity of fuel in the tank as is practical for storage purposes.
2. Inspect rubber connections of coolant system and have them renewed if necessary.
3. Wash the bodywork thoroughly and repair any paint blisters or patches of corrosion in order to prevent any further deterioration.
Apply a suitable polish.

4. Clean the carpets and upholstery thoroughly. Treat all leather upholstery with an application of a leather conditioner or preservative.
5. If the storage building is dry leave vehicle windows slightly open. If there is any tendency towards dampness close vehicle doors and windows and place an anti-moisture compound such as Silica desiccant bags in an open metal container inside vehicle.
6. Cover vehicle with a cotton or fabric cover.

Re-commissioning after Storage

Provided that the vehicle has been stored in accordance with the recommended procedure, the following points only should require attention before using your vehicle on the road.

1. Check the tire pressures, inflate if necessary, lower the vehicle to ground.
2. Drain the engine oil reservoir and the final drive unit, install a new engine oil filter element, then fill the engine and the final drive unit with approved oils. Check the coolant level and, if necessary, top-up with the correct antifreeze to water solution.
3. Check all fluid levels and top-up as necessary. Fill the fuel tank.

Starting the engine without sufficient lubrication can cause serious engine damage. Ensure engine oil pressure is established before allowing the engine to start.

4. Obtain engine oil pressure:
 - 4.1 Press and hold the accelerator **hard to the floor**. This will temporarily inhibit the fuel injection during cranking.
 - 4.2 Turn on the ignition.
 - 4.3 Press and hold the starter button until the oil pressure lamp  goes out (indicating normal engine oil pressure).
 - 4.4 Release the starter button and accelerator pedal.

5. Start the engine normally and check that the oil pressure and ignition warning lamps go out as the engine starts, indicating correct oil pressure and battery charging.
6. Raise the hood and check for leaks of fuel, oil and coolant.
7. Carefully test drive your vehicle and check the operation of all functions.

Braking performance can be impaired, initially, due to a fine film of corrosion on the brake rotor surface. Drive conservatively and, when **safe to do so**, frequently apply the brakes until rotor surfaces have been cleaned. Full braking performance should then be restored.

If in any doubt about the condition of your vehicle, have it checked by your Aston Martin Dealer.



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN

Specifications


Contents

Engine.....	12.2	Interior Dimensions.....	12.8
Performance	12.2	Exterior Dimensions	12.9
Power and Torque Graph.....	12.3	Interior Features.....	12.10
Electrics	12.3	Exterior Features	12.10
Transmission	12.4	Infotainment Centre	12.10
Steering	12.4	Fluids and Capacities.....	12.11
Suspension.....	12.4	Engine Oil Specification	12.11
Brakes.....	12.5	Engine Oil.....	12.12
Wheels	12.5		
Tires.....	12.6		
Bulbs	12.7		
Vehicle Specification.....	12.8		
Vehicle Weights.....	12.8		

Engine			Performance	
Specifications	All alloy, quad overhead cam 32 valve V8.			Manual Transmission
	Four knock sensors - two per cylinder head.		Max Power	380 b.h.p. (283 kw) @ 7000 r.p.m.
	Cylinder block heater (Option)		Max Torque	302 lb./ft. (410 Nm) @ 5000 r.p.m.
	Variable inlet camshaft timing		Max Speed	174 m.p.h. (280 km/h) (where permitted)
	Fuel	Recommended Premium Unleaded 93 RdON / AKI for optimum performance. 91 RdON / AKI minimum.	0-60 m.p.h.	4.8 seconds
	Fuel Delivery System	Multi-point sequential fuel injection	0-100 km/h	5.0 seconds
	Capacity	4280 cc	Max Engine Speed	7300 r.p.m.
	Firing Order	1 - 5 - 4 - 2 - 6 - 3 - 7 - 8		
	Idle Speed	750 r.p.m.		
		Bore	3.504 in (89.0 mm)	
		Stroke	3.85 in (86.0 mm)	
		Spark Plugs	NGK – IFR7N-10	
		Spark Plug Gap	0.35 - 0.040 in (0.9 - 1.0 mm)	
		Compression Ratio	11.3:1	
		Ignition	'Coil on Plug' ignition system	
		Emission control	4 Oxygen sensors / three-way catalytic convertors. Evaporative loss purge	
		Lubrication	Dry sump pressurized lubrication Oil reservoir	

Power and Torque Graph

81% of maximum torque is produced at only 1500 r.p.m.

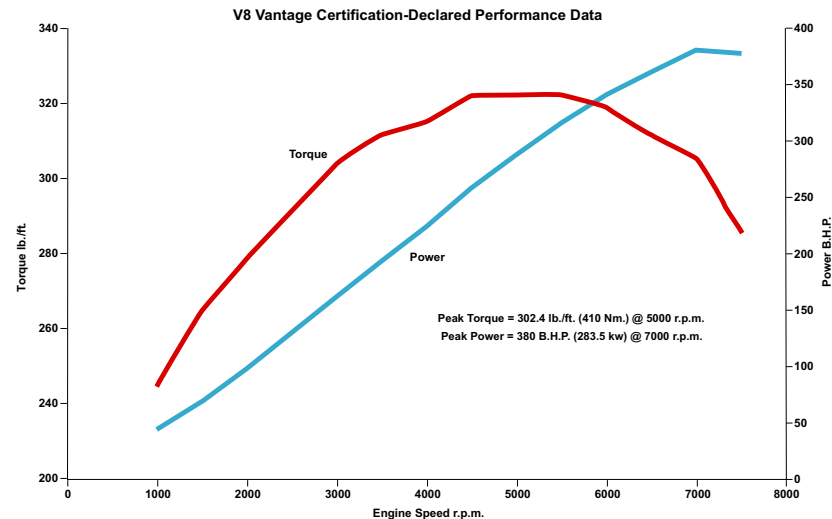

Electrics

Alternator

Voltage Regulation

Battery

Denso SC1 120 Amps

14.4V $\pm$ 0.5V @ 68°F (20°C)

Varta 90AH.

Transmission							Steering		Suspension		
Manual Transaxle							Rack and pinion power-assisted steering. Column tilt and reach adjustments.		Front	Aluminum independent double wishbone. Coil over aluminum monotube dampers and anti-roll bar.	
Graziano six speed transaxle with integrated shifter bellcrank system (Cable Operated)											
Gear Ratios	1st	2nd	3rd	4th	5th	6th	Turns lock to lock	3.0	Rear	Aluminum independent double wishbone. Coil over aluminum monotube dampers and anti-roll bar.	
	Reverse						Turning Circle	36.4 ft. (11.1 m) (Curb to Curb)			
	2.38:1						Toe				
Final Drive							Front	3' (±2') - Individual			
								6' (±4') - Total			
Ratio							Rear	10' (+5' / – 0') - Individual			
Multi plate Limited slip differential.								20' (±10') - Total			
Clutch							Measured at Aston Martin design weight:				
							Curb weight + full options (55 lb. (25 kgs)) + one occupant (55 lb. (165 kgs)) evenly distributed between the front seats.				
Single plate	267 mm diameter										

Brakes

Ventilated and grooved steel rotors all round.

Front Rotors 14 in (355 mm) diameter

Rear Rotors 13 in (330 mm) diameter

Calipers Radial-mounted four-piston monobloc.

Parking Brake Lever and cable operated independent parking brake calipers on each rear brake rotor.

Anti Lock Braking System (ABS), Electronic Brakeforce Distribution (EBD), Emergency Brake Assist (EBA), Dynamic Stability Control (DSC), Traction Control (TCS) and Positive Torque control (PTC).

Wheels



Warning

Install winter wheels and tires to both axles before the onset of severe winter weather conditions.

Factory Install

Front Aston Martin aluminum alloy wheels, 8.5J x 18

Rear Aston Martin aluminum alloy wheels, 9.5J x 18

Option

Front Aston Martin aluminum alloy wheels, 8.5J x 19

Rear Aston Martin aluminum alloy wheels, 9.5J x 19

Winter Wheels

Front Aston Martin aluminum alloy wheels, 8 x 18

Rear Aston Martin aluminum alloy wheels, 9 x 18

Wheel Nut Torque

Tighten every second nut until all five nuts are tightened.

Tighten all wheel nuts in two stages.



Vehicles with 22 mm Roadwheel Nuts

1. To 80 Nm. (60 lb. / ft) in one continuous movement.
2. To 135 Nm. (100 lb. / ft.) in one continuous movement.

Vehicles with 21 mm Roadwheel Nuts

1. To 60 lb. / ft (80 Nm) in one continuous movement.
2. To 100 lb. / ft. (135 Nm) in one continuous movement.

Tires**Warning**

Install winter wheels and tires to both axles before the onset of severe winter weather conditions.

Tire Loading

Tires installed to this vehicle shall have a maximum load rating not less than 1389 lb. (630 kg) (front) and 1565 lb. (710 kg) (rear), or a load index of 92 (front) and 96 (rear) and a speed category of ZR.

Factory Install

Front	Bridgestone 235/45 ZR 18
Rear	Bridgestone 275/40 ZR 18

Option

Front	Bridgestone 235/40 ZR 19
Rear	Bridgestone 275/35 ZR 19

Pressures (Cold Inflation)

(Factory install and option tires)

Front	33 psi (2.3 bar / 230 kPa)
Rear	36 psi (2.5 bar / 250 kPa)

Tire Ratings

Treadwear	180
Traction	Traction AA
Temperature	A

Winter Tires

⚠ Warning ⚠
**Maximum speed with winter tires is 149 m.p.h.
(240 km/h).**

Front Pirelli W240SN 225/45 R18

Rear Pirelli W240SN 255/40 R18

Pressures (Cold Inflation)

Front 36psi (2.5 bar / 250 kPa)

Rear 36psi (2.5 bar / 250 kPa)

Snow chains may only be installed to the driven (rear) road wheels. Consult your Aston Martin Dealer.

Bulbs

Headlamp dipped beam (HID)

Headlamp dipped beam (Hal)

Headlamp main beam

Front Indicator lamps

Parking lamp

Footwell lamps

Door lamps (Festoon)

Side Repeater

Rating Type

35W D1S HID

55W H11

65W H9

LED

LED

5W W5W

5W C5W

5W WY5W

Side marker (front and rear) / Rear
quarter lamps / Reading lamps

Trunk lamps

High Mounted Stop Lamp

Registration plate lamps

The rear lamp cluster is a sealed unit. If any rear cluster lamp fails to operate contact your Aston Martin Dealer.

Rating Type

3W W3W

10W C10W


LED

5W C5W



Vehicle Specification	Vehicle Weights	Interior Dimensions	
Body Two door Coupe with tailgate / 2+0 seating. Extruded aluminum bonded body structure with aluminum and composite body panels. Extruded aluminum door side impact beams.	Curb weight Manual 3593 lb. (1630 kg) Gross Vehicle Weight (GVW) Manual 4167 lb. (1890 kg)	Effective Headroom	36.7 in. (933 mm)
		Shoulder Room	59.5 in. (1506 mm)
		Hip Room	55.5 in. (1405 mm)
		Effective Legroom	43 in. (1086 mm)
		Trunk Volume (VDA)	8.4 cu. ft. (239 ltr)
Towing This vehicle is not engineered to tow any form of caravan, boat or trailer. No towing devices are approved for installing to this vehicle, other than a front and rear towing eye to aid recovery or loading of this vehicle onto a transporter.			

Exterior Dimensions

Inch. (mm)

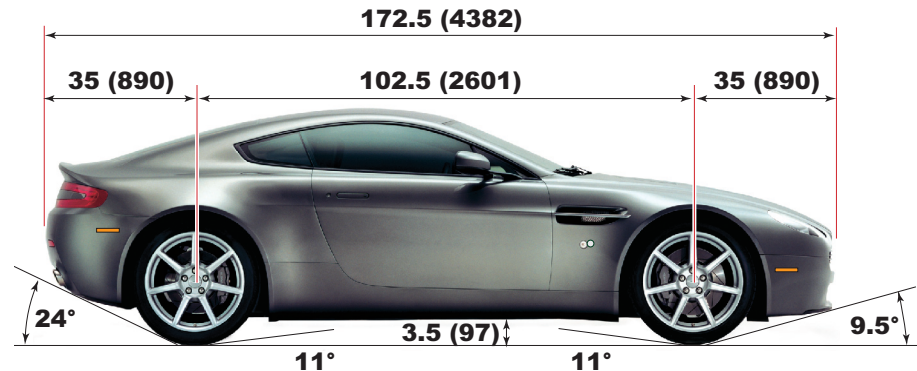

Ride height (3.5 inch. (97 mm)) is measured at Aston Martin design weight - Kerb weight + full options (55 lbs. (25 kgs)) + one occupant (165 lbs. (75 kgs)) evenly distributed between the front seats.

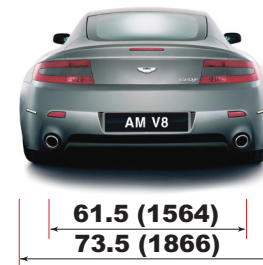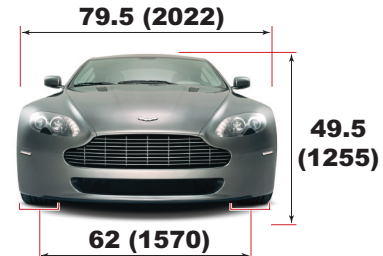

Interior Features	Exterior Features	Infotainment Centre
• Hand-crafted leather / fabric trim • Formed aluminum fascia (alternative options) • Polished aluminum and painted alloy details • Automatic Air-conditioning • Alarm system interacting with the central locking system and PATS immobilizer system • Driver and passenger dual-stage airbags and occupant side airbags • Passenger airbag deactivation • Ten-direction electrically adjusted drivers seat (including height adjustment) with optional seat heater • Organic electroluminescent (OEL) displays	• Heated, electrically adjusted, door mirrors • Powerfold Mirrors (option) • Electrically operated door windows • Heated rear windshield • Heated front windshield (option) • Reversing Sensors	• Two levels of audio system with radio and 6 CD autochanger • 160W Audio System (Standard) • 700W Audio System with Dolby Pro Logic II (Premium) (option) • Satellite Navigation system (option) • In-vehicle telephone (option) Menus for Audio, Telephone (option), Satellite Navigation (option), Vehicle Security.

Fluids and Capacities

Engine oil Castrol Formula RS 10W-60

To achieve the required high performance of synthetic lubricants, do not mix with mineral oils.

Engine coolant 50% water, 50% Havoline OAT

Do not mix OAT anti-freeze with glycol based antifreeze.

Gearbox oil / Final drive Shell 'Transaxle' oil 75W/90

Brake / Clutch fluid Castrol Super Response Dot 4

Power steering fluid Texaco Cold Climate

A/C refrigerant HFC134A.

Capacities

Engine sump (encl. filter)

Engine cooling system

Screen washer reservoir

Power steering system

Transaxle & Cooler

Fuel Tank

Approx. 20.5 Gall (78 ltr) usable.

Quarts (Litres)

11 (10.4)

15.8 (15)

7.3 (6.9)

TBA

5.3 (5.0)

Gallons (Litres)

21 (80)

Engine Oil Specification

The engine in this vehicle has been engineered and fully tested to run on Castrol Formula RS 10W-60 and was filled at the factory with this oil. In order to maintain the optimum performance and protection of your vehicle, Aston Martin recommends that Castrol Formula RS 10W-60 should be used when topping up the engine oil and for service fill.

However, if this oil is unavailable, alternatively a fully synthetic 5W-50 or 10W-60 oil meeting the specification ACEA A3/B3 can be used. No other viscosity grades or specifications are acceptable.

Engine Oil

Only use oils 'Certified For Gasoline Engines' by the American Petroleum Institute (API).


An oil with this trademark symbol conforms to the current engine and emission system protection standards and fuel economy requirements of the International Lubricant Standardization and Approval Committee (ISLAC), comprised of U.S. and Japanese automobile manufacturers.



ASTON MARTIN



ASTON MARTIN

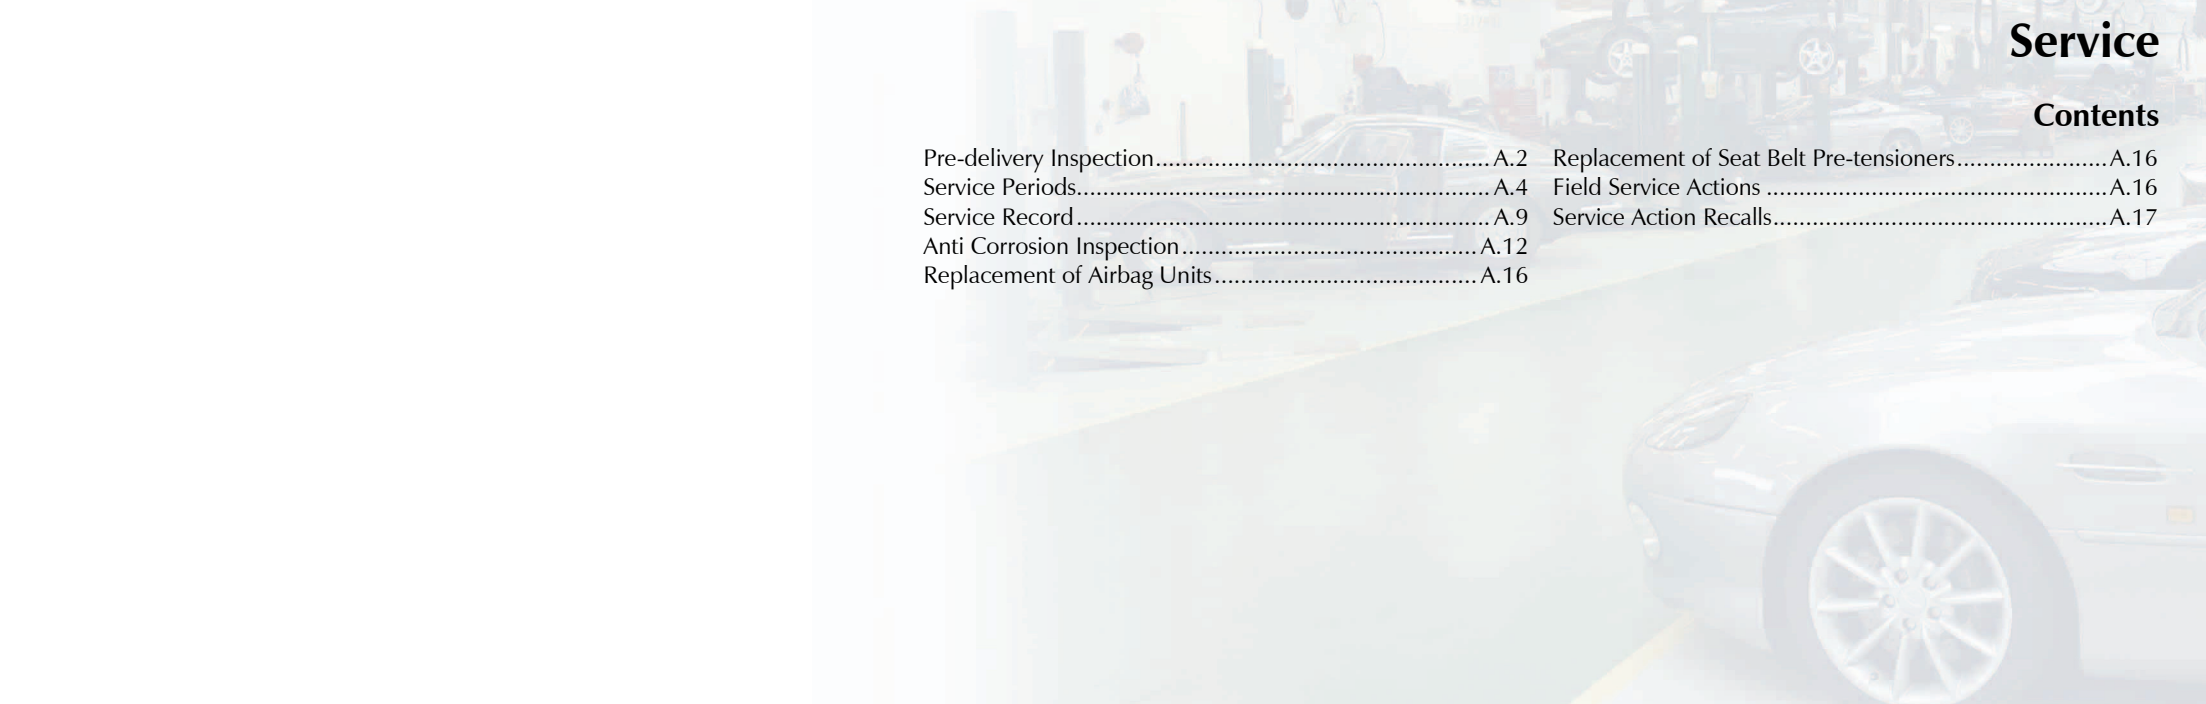

Service

Contents

Pre-delivery Inspection.....	A.2	Replacement of Seat Belt Pre-tensioners.....	A.16
Service Periods.....	A.4	Field Service Actions	A.16
Service Record.....	A.9	Service Action Recalls.....	A.17
Anti Corrosion Inspection.....	A.12		
Replacement of Airbag Units.....	A.16		

Pre-delivery Inspection

This free series of checks is carried out on the car by the Selling Dealer before delivery. The checks ensure that you receive a vehicle which matches the high quality standards set by Aston Martin Limited.

The following checks will be made:

(1) Levels and Leaks	
Engine oil.	Engine coolant specific gravity.
Power steering oil.	Windshield washer fluid.
Brake / Clutch fluid.	Fuel system.
Engine coolant level.	Transaxle - check level.
	Battery.

(2) Mechanical Functions	
Gear selection.	Seat adjuster rails.
Clutch operation.	Hood release and catch.
Throttle pedal operation.	Door operation and locks.
Parking brake operation.	Storage compartments.
Steering column adjustment.	Rear view mirror.
Steering lock operation.	Trunk release and catch.

(3) Electrical Checks	
Battery condition.	Rear fog lamps.
Heated front (option) & rear shield(s).	Hazard warning lamps.
Windshield / headlamp washers.	Instrument illumination and dimmer.
Windshield wipers.	Horns.
A/C controls.	Interior lamps.
Gauges / warning lamps.	Cigar lighter (option).
All speakers.	All seat functions.
Windows operation.	Door mirror adjustments.
Side and headlamps (main and dip beam)	Reset clock (if necessary).
	Door / Trunk courtesy lamps.
	Central locking system.

(3) Electrical Checks		(5) Road Test		(7) Hand-over Preparation	
Filler flap lock operation.	Tire pressure sensing (option)	Exhaust by-pass system.	Noise, vibration or harshness.	Check function of all keys, locks and remote transmitter.	Remove interior protection.
Seat belt operation	Centre stack controls.	Transmission oil cooler	Instruments operation.	Clean bodywork / road wheel arch liners.	Check Owner's Guide.
Seat belt warning system.	Centre console controls.	Engine.	Seat belt and buckle operation.	Clean off all transit labels.	Check tools.
Security system / Remote transmitter.	Infotainment centre operation (Audio, Sat Nav (option) and Phone (option)).	Clutch.	Steering wheel alignment.	Valet Vehicle.	Install License plates.
Interrogate DTC codes.	Reversing, License plate and Brake lamps	Transaxle.	Traction control / DSC.	De-grease windshield.	Tire sealant system.
Check battery connect / disconnect switches		Steering.	ABS operation.	Install carpets.	Check towing eye (front / rear) installation.
(4) Wheels and Tires		Brakes.	Gear shift operation in all modes.		Battery conditioner (option).
Check Road wheel nuts torque.	Check color coded valve collars (Tire pressure monitoring)	Wheel balance.			Field Service Actions / Recall status
Tire pressures.		Dampers.			
Tire orientation.		A/C performance.			
Install locking road wheel nuts (option).					
		(6) Final Checks			
		Drive belt tensioner operation.	Fuel / fluid leaks.		
		Fuel / brake pipe security.	Security of cooling hoses.		
			Exhaust catalyst security.		

Service Periods

Apart from the initial 1,000 mile (1,500 km) / 3 month service, which ever occurs first, vehicle servicing is every 10,000 mile (16,000 km) / 12 months, which ever occurs first.

1,000 mile (1,500 km) / 3 month (Free)	Which ever occurs first.
10,000 mile (16,000 km) / 12 month	
20,000 mile (32,000 km) / 24 month	
30,000 mile (48,000 km) / 36 month	

12 Month To maintain the hydraulic brake system performance, the brake fluid is renewed every 12 months to clear the system of absorbed water vapor.

Initial 1,000 mile (1,500 km) / 3 Month Service (Free)

The selling dealer is responsible for the costs and work involved in performing this free service. The initial service consists of an inspection and oil change service after completion of the first 1,000 mile (1,500 km) / 3 month and includes fine adjustments to compensate for initial 'bedding-in' e.g. parking brake adjustment.

Also, engine oil and filter will be changed to clear any contaminants picked up during the initial running.

The following service schedules are recommended for this vehicle. The schedules may be modified if necessary. Please consult your Aston Martin Dealer for details of any service schedule updates.

1000mls	10000mls	20000mls
1500km	16000km	32000km
3 months	12 months	24 months

Pre-Maintenance

x	x	x	Pre-Maintenance Road Test Evaluation
x	x	x	Install vehicle protection kit and fender covers
x	x	x	Check Bulletins / Field Service Actions / Recall Status

1000mls	10000mls	20000mls
1500km	16000km	32000km
3 months	12 months	24 months

Fluids, Filters and Leaks Checks

x	-	-	Check / Top up engine oil level
-	x	x	Renew engine oil and filter. Clean pan filters
x	x	x	Check for engine oil leaks
30,000 mile (48,000 km) Every / 3 Years			Renew air cleaner elements
20,000 mile (32,000 km) / 2 Years			Renew air cleaner elements - (extreme environments)
x	x	-	Check transaxle for leaks
20,000 mile (32,000 km)/ Every 3 Years	60,000 mile (96,000 km)/ Every 6 Years	100,000 mile (160,000 km)/ Every 10 Years	Check / Top-up transaxle oil levels.
Every 40,000 mile (64,000 km) / 4 Years			Renew transaxle oil and clean filter

1000mls	10000mls	20000mls
1500km	16000km	32000km
3 months	12 months	24 months

Every 100,000 mile (160,000 km) / 5 Years			Renew engine coolant - check S.Gravity
x	x	x	Check / top-up engine coolant
x	x	x	Check for fuel leaks
Every 2 Years10,000 mile (16,000 km)			Renew brake / clutch fluid
-	x	x	Check / top-up brake / clutch fluid reservoir
x	x	x	Check power steering system for leaks
x	x	x	Check brake hoses, pipes and unions for leaks
x	x	x	Check suspension dampers for leaks
x	x	x	Top-up windshield / headlamp washer reservoir
x	x	x	Check exhaust system for leaks
x	x	x	Check A/C system for leaks
-	-	x	Renew pollen filter
x	x	x	Check / Top up Power Steering Fluid

1000mls 1500km 3 months	10000mls 16000km 12 months	20000mls 32000km 24 months
-------------------------------	----------------------------------	----------------------------------

Mechanical Function Checks

-	x	x	Lubricate the hood secondary catch
-	x	x	Check security of the hood catch. Check that the hood secondary catch moves freely over its whole travel and returns smartly under spring pressure.
-	x	x	Lubricate the upper portion of the door seals.
x	x	x	Check / adjust accessory drive belt tension, renew if necessary
150,000 mile (240,000 km) / Every 15 years			Replace the accessory drive belt
x	-	-	Adjust parking brake cables, if required
-	-	x	Check condition of parking brake pads
-	x	x	Inspect service brake pads and warning leads for wear. Replace if 60% worn
-	x	-	Check wiper blade inserts. Renew if necessary
-	-	x	Renew wiper blades

1000mls 1500km 3 months	10000mls 16000km 12 months	20000mls 32000km 24 months	
-	x	x	Inspect / Clean out coolant radiator and A/C condenser
x	x	x	Check security of exhaust system mountings and heat shields. Check by-pass valve operation.
x	x	x	Check brake hoses, pipes and unions
-	-	x	Check power steering pipes and unions for corrosion and mechanical defects
x	x	x	Check cooling system hoses security and condition
x	x	x	Check A/C hoses security and condition
x	-	x	Check condition and security of steering unit joints and gaiters (Column and rack)
x	x	-	Check security and condition of suspension fixings
x	x	-	Check security and condition of suspension ball joints, gaiters and bushes
-	-	x	Check tightness of driveshaft bolts
-	-	x	Check condition of underbody protection / wheel arch liners

1000mls	10000mls	20000mls
1500km	16000km	32000km
3 months	12 months	24 months

Electrical Function Checks

Every 70,000 mile (112,000 km)			Renew spark plugs
x	x	x	Check / record battery voltage and quiescent drain
x	x	x	Clean and grease battery connections if required.
x	x	x	Check the battery disconnect / connect switches
x	-	x	Check and if necessary adjust headlamp alignment
x	x	x	Check operation of all lamps
x	x	x	Check operation of all warning indicators
x	x	x	Check audible warnings including security system
x	x	x	Check operation of the horns
x	x	x	Check operation of the windshield / headlamp washers / jets

1000mls	10000mls	20000mls
1500km	16000km	32000km
3 months	12 months	24 months

x	x	x	Check operation of the windshield wipers
x	x	x	Check rear view mirrors for security and function
x	x	x	Check / operate powerfold mirrors (option)
x	x	x	Check / operate electric windows
x	x	x	Interrogate DTC P codes and rectify if required
x	x	x	Check service interval indicator. Reset

1000mls	10000mls	20000mls
1500km	16000km	32000km
3 months	12 months	24 months

Wheels and Tire Checks

x	x	x	Check for correct tire size, type and orientation
x	x	x	Check and report tire tread depth
x	x	x	Check tires for uneven / excessive wear or damage
x	x	x	Check / adjust tire pressures
x	x	x	Check torque of road wheel nuts
x	x	x	Check road wheel rims for inner and outer damage.
x	x	x	Check color coded valve collars for correct location (Tire pressure monitoring)
x	x	x	Check ‘use by’ date of tire repair kit. Replace if expiry date is within 12 months

1000mls	10000mls	20000mls
1500km	16000km	32000km
3 months	12 months	24 months

Anti Corrosion Check

-	x	x	Check body panels and underbody for corrosion starting from the inside - out (excluding stone chips).
---	---	---	---

Final Checks

x	x	x	Degrease windshield
x	x	x	Check clutch functionality
x	x	x	Check operation / condition of all seat belts and buckles
x	x	x	Check that fuel filler bowl rain drain is clear
x	x	x	Carry out road test

Service Record

The following service records cover the Pre-Delivery Inspection, the Initial 1000 mile (1500 km) / 3 month service and then the regular services at 10,000 mile (16,000 km) or 12 months, which ever occurs first, intervals.

Vehicle

Identification

Number:

Date of Delivery:

Pre-delivery Inspection

Odometer:

Applicable Service Actions checked YES ☐ NO ☐

Open Service Actions completed YES ☐ NO ☐

Dealer Stamp

Free

Signature..... Date.....

Initial 1,000 mile (1,500 km) / 3 Month Service

Odometer:

Applicable Service Actions checked YES ☐ NO ☐

Open Service Actions completed YES ☐ NO ☐

Dealer Stamp

Free

Signature..... Date.....

Service

VB Vantage

10,000 mile (16,000 km) / 12 month

Odometer:

Applicable Service Actions checked YES ☐ NO ☐

Open Service Actions completed YES ☐ NO ☐

Dealer Stamp

Signature..... Date.....

20,000 mile (32,000 km) / 24 month

Odometer:

Applicable Service Actions checked YES ☐ NO ☐

Open Service Actions completed YES ☐ NO ☐

Dealer Stamp

Signature..... Date.....

30,000 mile (48,000 km) / 3 year

Odometer:

Applicable Service Actions checked YES ☐ NO ☐

Open Service Actions completed YES ☐ NO ☐

Dealer Stamp

Signature..... Date.....

40,000 mile (64,000 km) / 4 year

Odometer:

Applicable Service Actions checked YES ☐ NO ☐Open Service Actions completed YES ☐ NO ☐

Dealer Stamp

Signature..... Date.....

50,000 mile (80,000 km) / 5 year

Odometer:

Applicable Service Actions checked YES ☐ NO ☐Open Service Actions completed YES ☐ NO ☐

Dealer Stamp

Signature..... Date.....

60,000 mile (97,000 km) / 6 year

Odometer:

Applicable Service Actions checked YES ☐ NO ☐Open Service Actions completed YES ☐ NO ☐

Dealer Stamp

Signature..... Date.....

Service

V8 Vantage

70,000 mile (113,000 km) / 7 yearOdometer: Applicable Service Actions checked YES ☐ NO ☐Open Service Actions completed YES ☐ NO ☐

Dealer Stamp

Signature..... Date.....

80,000 mile (129,000 km) / 8 yearOdometer: Applicable Service Actions checked YES ☐ NO ☐Open Service Actions completed YES ☐ NO ☐

Dealer Stamp

Signature..... Date.....

Anti Corrosion Inspection**12 Month**Date: Odometer:

Dealer Stamp

Signature..... Date.....

2nd Year

Date:

Odometer:

Dealer Stamp

Signature..... Date.....

3rd Year

Date:

Odometer:

Dealer Stamp

Signature..... Date.....

4th Year

Date:

Odometer:

Dealer Stamp

Signature..... Date.....

Service

V8 Vantage

5th Year

Date:

Odometer:

Dealer Stamp

Signature..... Date.....

6th Year

Date:

Odometer:

Dealer Stamp

Signature..... Date.....

7th Year

Date:

Odometer:

Dealer Stamp

Signature..... Date.....

8th Year

Date:

Odometer:

Dealer Stamp

Signature..... Date.....

9th Year

Date:

Odometer:

Dealer Stamp

Signature..... Date.....

10th Year

Date:

Odometer:

Dealer Stamp

Signature..... Date.....

Service*V8 Vantage*

Replacement of Airbag Units

After 10 years from the date of vehicle registration, all airbag units must be replaced. To ensure this is completed correctly and safely, this work should be carried out by your Aston Martin Dealership.

Date:

Odometer:

Dealer Stamp

Signature..... Date.....

Replacement of Seat Belt Pre-tensioners

After 10 years from the date of vehicle registration, all seat belt pre-tensioners must be replaced. To ensure this is completed correctly and safely, this work should be carried out by your Aston Martin Dealership.

Date:

Odometer:

Dealer Stamp

Signature..... Date.....

Field Service Actions

Action No.	Date	Dealer

Action No.	Date	Dealer

Action No.	Date	Dealer

Service Action Recalls		
Recall No.	Date	Dealer

Service

V8 Vantage



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN

Assistance

Contents

Aston Martin Roadside Assistance.....	B.2
---------------------------------------	-----



Aston Martin Roadside Assistance

In the event of a breakdown caused by a defect covered under the New Vehicle Limited Warranty, the Aston Martin Roadside Assistance scheme will provide the Aston Martin owner with emergency roadside assistance at no cost. The scheme also provides the following benefits:

- Exclusive 24-Hour Toll-Free Assistance Line
- 24-Hour Emergency Towing
- 24-Hour Roadside Assistance
- 24-Hour Emergency Lockout Service (up to US \$100 per callout)
- Sign and Drive Service
- 24-Hour Emergency Trip Interruption Benefits
- 24-Hour Aston Martin Dealer Locator Service
- Repaired Vehicle Reunite Service
- Assistance Experience Survey Card

The Aston Martin Roadside Assistance scheme benefits provide for towing to the nearest approved dealer. Should the vehicle breakdown occur 150 or more miles (241 or more km) from the nearest approved dealer and 150 or more miles (241 or more km) from the primary residence of the owner or operator, the owner or operator is entitled to trip interruption benefits. Trip interruption benefits include lodging and meals for up to 2 nights, and alternative transportation. Trip interruption benefits are limited to a maximum of US \$500 per interruption.

The term of the Aston Martin Roadside Assistance scheme runs concurrent with the Aston Martin New Vehicle Limited Warranty. The plan does not cover the following:

- Rental fleet vehicles
- Breakdowns caused by accident, vandalism, racing or abuse.
- Additional towing costs for towing to other than the nearest approved dealer to the breakdown site.

Expenses for such items as entertainment, recreation, and non-essential goods and services are excluded from trip interruption benefits.

How Does the Plan Work?

The national toll-free assistance telephone number is shown on your Roadside Assistance Membership Card and on the label on the drivers side door pillar.

If your Aston Martin vehicle suffers a breakdown whilst driving, proceed as follows:

Have your Aston Martin Roadside Assistance Membership Card ready.

Call the toll-free number: **1- 888 - 59ASTON.**

It is available 24 hours a day.

Provide the Roadside Assistance Service Representative with:

- Your name
- The Vehicle Identification Number (VIN), which is printed on your Roadside Assistance Membership Card. The VIN is also printed on a decal on the drivers side dashboard. This decal may be viewed from outside the car by looking in through the front windshield.
- The vehicle location
- Where you are calling from, including a telephone number on which you may be contacted

The Roadside Assistance Service Representative will work with you to find the best solution to your concern.

Please remain with the vehicle until assistance arrives.

Further Information

See the separate brochure provided for full details of the Aston Martin Roadside Assistance scheme. The terms of the scheme may be changed without notice.




ASTON MARTIN



ASTON MARTIN



ASTON MARTIN

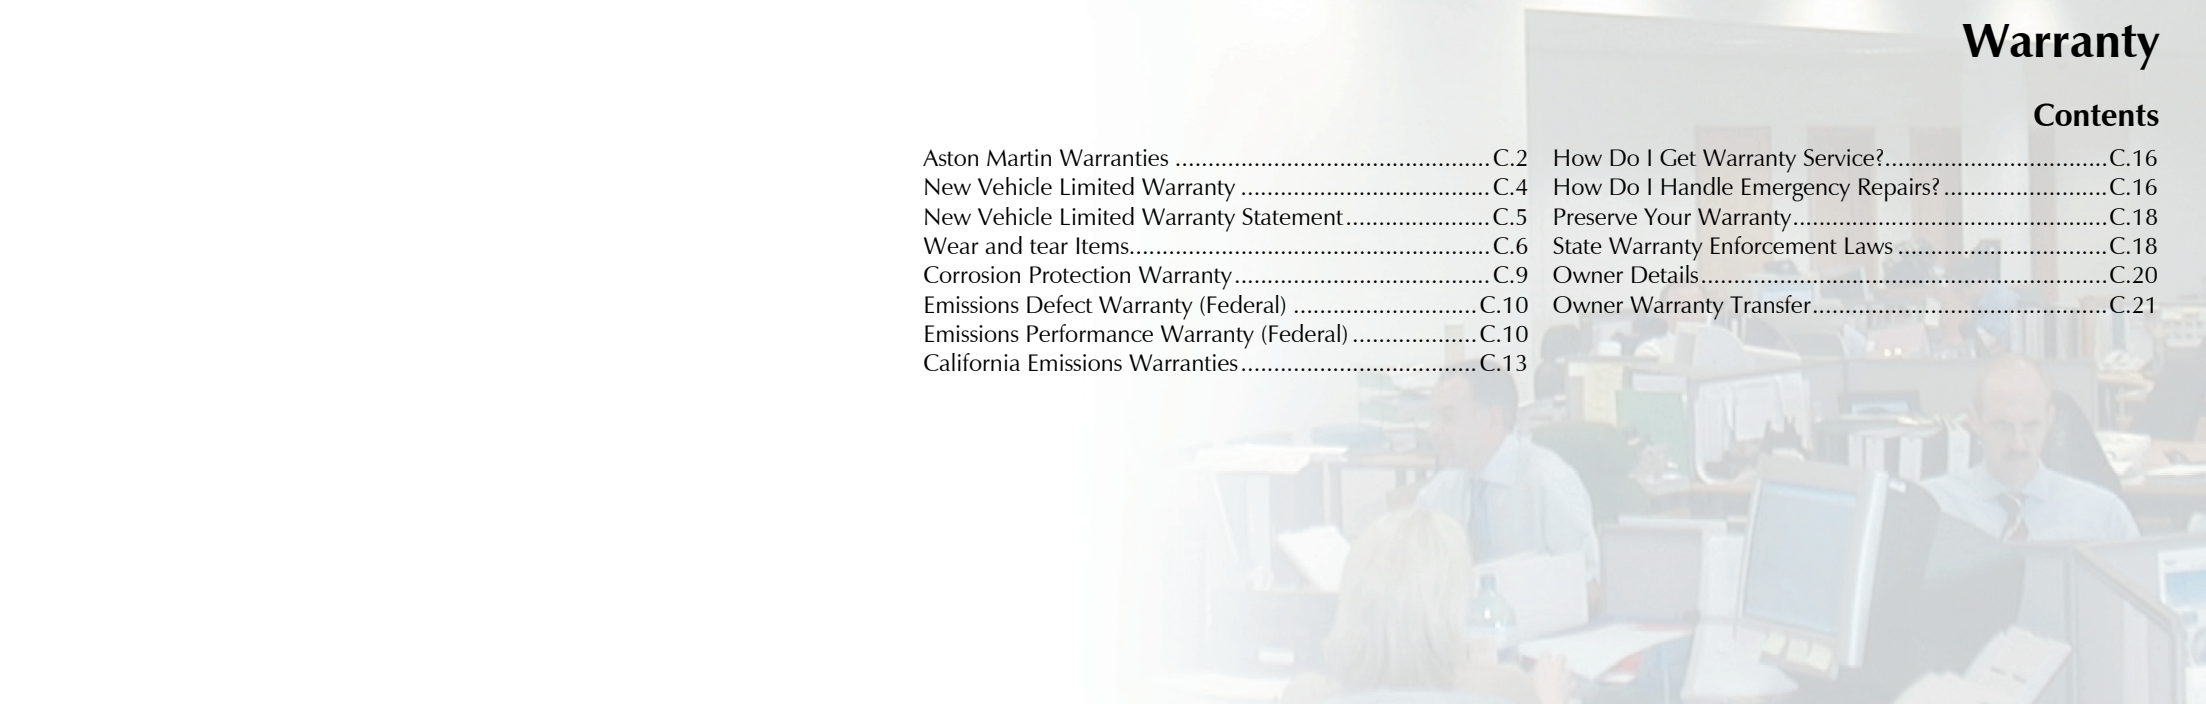

Warranty

Contents

Aston Martin Warranties	C.2	How Do I Get Warranty Service?.....	C.16
New Vehicle Limited Warranty	C.4	How Do I Handle Emergency Repairs?	C.16
New Vehicle Limited Warranty Statement.....	C.5	Preserve Your Warranty.....	C.18
Wear and tear Items.....	C.6	State Warranty Enforcement Laws	C.18
Corrosion Protection Warranty	C.9	Owner Details.....	C.20
Emissions Defect Warranty (Federal)	C.10	Owner Warranty Transfer.....	C.21
Emissions Performance Warranty (Federal)	C.10		
California Emissions Warranties.....	C.13		

Aston Martin Warranties

This section contains information essential for the understanding of the Aston Martin warranties and for the implementation of any necessary Warranty rectification. It is recommended that you read this section with care to familiarize yourself with the benefits available under the various warranties.

Warranty Communications

Any Warranty communications should initially be addressed to your Aston Martin Dealer. If necessary, you may communicate with Aston Martin at the appropriate address listed.

Aston Martin Lagonda North America Inc.
533 MacArthur Boulevard
Mahwah
New Jersey 07430-2326
USA

Aston Martin Warranty Department
Aston Martin Lagonda Limited
Banbury Road,
Gaydon,
WARWICK
Warwickshire,
CV35 0DB,
England

Warranties

All Aston Martin warranties are issued by Aston Martin North America Inc., the sole authorized United States agent of Aston Martin vehicles, and cover only vehicles originally specified and built by Aston Martin for the United States and Canadian markets.

Aston Martin warranties are in favour of the original purchasers and each subsequent owner during the respective Warranty period.

Aston Martin warranties are effective and will be honoured only in the United States and Canada. Outside the United States and Canada, all Aston Martin Warranty service and repair will be performed in accordance with the terms and conditions of the Aston Martin United Kingdom Warranty issued by the vehicle manufacturer.

The United Kingdom Warranty covers the vehicle (with some restrictions) for a period of three (3) years, unlimited mileage from the date of first retail delivery. Details of the U.K. Warranty will be provided upon request.

A summary of Aston Martin warranties applicable to this vehicle follows:

New Vehicle Limited Warranty

Bumper to bumper 3 years / Unlimited mileage

Vehicle Corrosion Protection Warranty

Period of cover 10 years / Unlimited mileage

Vehicle Emission Warranties (Federal)

Emissions Defects Warranty 2 years / 24,000 mile
(38,500 km)

Certain emission parts* 8 years / 80,000 mile
(129,000km)

Emissions Performance Warranty 2 years / 24,000 mile

* Catalytic convertor and electronic emissions control unit (required 8 years / 80,000 mile (129,000 km) coverage per Clean Air Act).

Vehicle Emission Warranties (Californian Vehicles)**Emissions Defect Warranty**

Short Term	3 years / 50,000 mile (80,000 km)
Long Term**	7 years / 70,000 mile (113,000 km)

Emissions Performance Warranty	3 years / 50,000 mile (80,000 km)
---------------------------------------	--------------------------------------

** These specific parts were selected on the basis of their estimated replacement cost at the time your vehicle was certified by the California Air Resources Board (CARB) for sale in California.

New Vehicle Limited Warranty**Warranty Limitations**

This New Vehicle Limited Warranty is the only express Warranty applicable to your vehicle. Aston Martin neither assumes, nor authorizes anyone to assume for it, any other obligation or liability in connection with this Warranty.

Limitation of Remedies

Under the Warranty, it is agreed that the sole exclusive remedy against Aston Martin and its authorized Dealers shall be for the repair or replacement of defective parts as provided herein. The sole purpose of this exclusive remedy shall be to provide for the free repair and replacement of defective parts in the manner prescribed in this Warranty.

This exclusive remedy shall not be deemed to have failed its essential purpose so long as Aston Martin, through its authorized Dealers, is willing and able to repair or replace defective parts in the prescribed manner.

Implied Warranties; Consequential Damages

Under the law of some states, the owner may be entitled to the benefit of the implied warranties of merchant ability or fitness for intended purpose. These implied warranties are limited to the extent allowed by law to the time period covered by the written warranties, or the applicable time period provided by state law, whichever period is shorter.

Aston Martin does not accept responsibility under any of the warranties for any consequential damage or commercial loss to the owner, or any incidental expenses, loss of time, or inconvenience.

New Vehicle Limited Warranty Statement

Some states do not permit a limitation on how long an implied Warranty will last, or on the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to the owner. This Warranty gives owners specific legal rights, and they may also have other rights that vary from state to state.

Aston Martin warrants that during the Warranty period, if an Aston Martin vehicle is properly operated and maintained, repairs required to correct defects in materials or workmanship will be performed without charge; any component covered by this Warranty found to be defective in materials or workmanship, will be repaired, or replaced, without charge. Your Aston Martin Dealer will repair the vehicle with genuine approved Aston Martin parts.

Aston Martin and your Aston Martin Dealer are not responsible for any time that you lose, for any inconvenience you might be caused, for the loss of your transportation, or for any other incidental or consequential damages you may have.

The Warranty period for the vehicle begins on the date of first retail sale, or on the date of entry into demonstrator service whichever comes first.

Warranty Coverage

The New Vehicle Limited Warranty covers any original or OEM component of the Aston Martin vehicle that is defective during the basic Warranty period, with the exception of tires and items such as lubricants, normal maintenance items, regularly scheduled maintenance parts and labour.

The Warranty includes any part scheduled for routine replacement during the Warranty period only if it is defective. If a part fails at the same time it is due for replacement it is not covered by the Warranty.

Wear and tear Items

Items that are subject to wear and tear are generally divided into two categories, namely those specified for replacement or adjustment during scheduled maintenance and those that require replacement or adjustment dependent upon conditions of use.

Scheduled Maintenance Items

The items listed below are covered by the Vehicle Warranty up to the first scheduled change point that replacement or adjustment is required during scheduled maintenance operations.

- Drive Belts
- Spark Plugs
- Oil, air, pollen and fuel filters

The period of warranty cover for any item may not exceed the time and distance limitation of the vehicle warranty.

Wear and Tear Items

The items listed below are recognized as having a limited service life or are subject to wear or damage. However, these items are covered by the vehicle warranty for up to one year or the first service, which ever occurs first.

- Wiper Blades
- All Light bulbs

Xenon headlamp bulbs and instrumentation illumination bulbs are covered by the full vehicle warranty.

- Wheel alignment / balancing
- Adjustments, including but not limited to: headlamp and hinged panel adjustments, suspension tightening, steering geometry adjustments, emission / fuel systems checks and parking brake cable adjustments
- Remote transmitter batteries

Brake pads, brake rotors and other friction related components are not covered when replacement is due to wear and tear, but they are covered against manufacturing defects for the duration of the Vehicle Warranty.

Consumables

Replacement or 'top-up' of consumable fluids, e.g. oils, anti-freeze, brake fluid, windshield wash solution and refrigerant, is only covered when they are used as part of a warranty repair.

What is Not Covered

Excluded Categories of Vehicle

The following categories of vehicle are excluded from the provisions of the Aston Martin warranties:

- Vehicles sold for hire
- Vehicles used for motor sport and track events.

Damage Caused by Accident, Alteration or Misuse.

Examples include, but not limited to:

- Damage caused by collision, fire, flood, theft, freezing, vandalism, riot, explosion, or objects striking the vehicle
- Misuse of the vehicle, such as driving over curbs, overloading, racing, or using the vehicle as a stationary power source

- Alteration or modification of the vehicle, including changes to the body, chassis, or components after the vehicle leaves the control of Aston Martin, tampering with the vehicle, tampering with the emission systems or with other parts that affect these systems
- Disconnection or alteration of the odometer, or where the actual mileage cannot be determined due to the odometer being inoperative for an extended period of time
- Use of contaminated or improper fuel or fluids or application of unauthorized chemicals by the customer

Damage Caused by Use and / or the Environment

Surface rust and deterioration of paint, trim, and appearance items that result from use and / or exposure to the elements are not covered.

Examples:

- Stone chips, scratches
- Lightning, hail damage
- Dints or dents
- Windstorm damage
- Road salt, tree sap
- Earthquake damage
- Bird droppings
- Water or flood damage

Damage Caused by Failure to Maintain or Improper Maintenance

Damage caused by failure to maintain the vehicle, improper maintenance of the vehicle, or using the wrong fuel, oil, lubricants, or fluids is not covered.

Refer to the Owner Maintenance section for correct fluid levels, and for proper ways to maintain your vehicle.

Examples of important maintenance procedures that need to be done correctly are:

- Oil changes
- Cleaning and polishing
- Oils, lubricants and other fluids
- Engine tune-up
- Oil & air filters
- Wiper blades, brake pads / linings

Other Items and Conditions Not Covered by This Warranty

- Non-Aston Martin parts of your vehicle that are installed by retailers, body shops or manufacturers other than an Aston Martin Dealer
- Damage to, or caused by, non-approved accessories such as alarms, telephones, etc.
- Damage to, or caused by, non-approved snow chains or towing devices
- Vehicles titled as follows: dismantled, fired, flooded, junked, rebuilt, reconstructed, or salvaged
- Service adjustments, wear items and alignments after one (1) year or 10,000 mile (16,000 km), whichever occurs first

- Alternative fuels: Aston Martin does not recommend or approve of the use of Liquid Petroleum gas or Compressed Natural gas. Damage caused by the use of alternative fuels or fuel additives is not covered by the vehicle warranty

Extra-Warranty Adjustment

In order to maintain a high level of customer confidence and satisfaction with Aston Martin products, Aston Martin may periodically determine that certain service procedures are necessary, and will assume costs for same, in whole or in part, independent of the New Vehicle Limited Warranty. When repairs to your vehicle are covered by the terms of one of these policy adjustments, your Aston Martin Dealer will advise you of the extent to which Aston Martin will pay either for parts, or for labour, or both.

If you have a question regarding a possible extra-Warranty adjustment, an authorized Aston Martin Dealer or Aston Martin can provide the details when the year, model and vehicle identification number (VIN) are supplied.

Aston Martin reserves the right to make modifications in vehicles manufactured and / or sold by them at any time without incurring any obligation to make the same or similar modifications in vehicles previously manufactured and / or sold by them.

Corrosion Protection Warranty

The vehicles bodywork is protected by an Anti-Perforation Corrosion Warranty. Should any part of the bodywork of the Aston Martin motorcar be perforated by rust corrosion during the applicable warranty period, the panel(s) affected by the perforation will be repaired or replaced.

The term 'perforation' means a hole that is caused by corrosion that penetrates through a body panel from the inside.



ASTON MARTIN

Emissions Defect Warranty (Federal)

Under the Emissions Defect Warranty, Aston Martin provides coverage for 2 years or 24,000 mile (whichever occurs first).

During this coverage period, Aston Martin warrants that:

- Your vehicle or engine is designed, built, and equipped to meet - at the time it is sold - the emissions regulations of the U.S. EPA
- Your vehicle or engine is free from defects in factory-supplied materials or workmanship that could prevent it from conforming with applicable EPA regulations
- You will not be charged for repair, replacement, or adjustment of defective emissions-related parts (Refer to "", page C.11)

Under the Emissions Defect Warranty Aston Martin also provides coverage, including labor and diagnosis, for 8 years or 80,000 mile (whichever occurs first) for these emissions parts:

- Catalytic converter
- Electronic emissions control unit (PCM)
- Onboard emissions diagnostic device

Emissions Performance Warranty (Federal)

If your vehicle is registered in a state where the state or local government has an EPA-approved inspection and maintenance program, you may also be eligible for Emissions Performance Warranty Coverage for 2 years or 24,000 mile (whichever occurs first), if you meet certain conditions.

Under Emissions Performance Warranty Coverage, Aston Martin will repair, replace, or adjust - with no charge for labor, diagnosis, or parts - any emissions control device or system, if you meet all these conditions:

- You have maintained and operated your vehicle according to the instructions on proper care and scheduled maintenance in the Owner's Guide
- Your vehicle fails to conform, during the warranty coverage period of 2 years or 24,000 mile (whichever occurs first), to the applicable national EPA standards

- You are subject to a penalty or sanction under local, state or federal law because your vehicle has failed to conform to the emissions standards (A penalty or sanction can include being denied the right to use your vehicle.)
- Your vehicle has not been tampered with, misused, or abused

The Emissions Performance Warranty will not apply to your vehicle if:

- The diagnosis shows your vehicle will pass the applicable state or local government test using test procedures and standards set by the EPA

What is Covered

These parts are covered by both the Emissions Defect Warranty and the Emissions Performance Warranty.

Some items / equipment in this list may not be installed to this vehicle and therefore may not be applicable.

- Air / Fuel Feedback Control System and Sensor
- Altitude Compensation System
- Catalytic Converter
- Cold Start Enrichment System
- Controls for Deceleration
- Distributor Assembly
- Electronic Ignition System
- Electronic Engine Control Sensors and Switches

- Exhaust Gas Recirculation (EGR) Valve, Spacer, Plate and Associated Parts
- Exhaust Heat Control Valve
- Exhaust Manifold and gasket
- Fuel Filler Cap and Neck Restrictor
- Fuel Injection System
- Fuel Injector Supply Manifold
- Fuel Tank
- Fuel Vapor Storage Canister, Liquid Separator and Associated controls
- Ignition Coil and / or Control Module
- Intake Manifold

- Malfunction Indicator Lamp (MIL) System
- PCV System and Oil Filler Cap
- Engine Control Module
- Pulsed Secondary Air Injection Valve / Secondary Air Injection pump and Associated Parts
- Spark Control Components
- Spark Plugs and Ignition Wires
- Throttle Air Control By-pass Valve
- Throttle Body Assembly
- TWC Air Control Valve
- Volume Air Flow Sensor

Also covered by the two emissions warranties are all emissions-related bulbs, hoses, clamps, brackets, tubes, gaskets, seals, belts, connectors, and wiring harnesses that are used with components on the list of parts, above.

Parts replaced on regular maintenance schedules

These parts remain under warranty until, (a) the first replacement time that is specified under 'Service' in your Owner's Guide or, (b) the time or mileage limits of the Federal Defect and Performance warranties (whichever occurs first).

Aston Martin maintains a complete list of parts covered by emissions warranties. For more details about the specific parts covered by the Emissions Defect Warranty, contact Aston Martin / Aston Martin Lagonda (North America) Inc. (Refer to 'Warranty Communications', page C.2)

What is Not Covered?

Aston Martin may deny you warranty coverage if your vehicle or a part has failed because of abuse, neglect, improper maintenance, unapproved modifications, or any items included in 'What Is Not Covered' (Refer to 'What is Not Covered', page C.7).

Your Warranty Rights and Obligations

(Applicable if your vehicle is certified for sale in California and registered in California, Massachusetts, or New York).

The California Air Resources Board and Aston Martin are pleased to explain the emission control system warranty on your Aston Martin vehicle. In California, new motor vehicles must be designed, built, and equipped to meet the State's stringent anti-smog standards. Aston Martin must warrant the emission control system on your vehicle for the periods of time listed under 'Manufactures' Warranty Coverage', provided there has been no abuse, neglect, or improper maintenance of your vehicle.

Your emission control system may include parts such as the fuel injection system, the ignition system, catalytic converter, and the engine computer. Also included may be hoses, belts, connectors, and other emissions-related assemblies.

Where a warrantable condition exists, Aston Martin will repair your vehicle at no cost to you including diagnosis, parts, and labor.

Manufacturer's Warranty Coverage

For 3 years or 50,000 mile (80,000 km) (whichever first occurs):

- If your vehicle fails a Smog Check inspection, all necessary repairs and adjustments will be made by Aston Martin to ensure that your vehicle passes the inspection. This is your emission control system Performance Warranty

- If any emissions-related part on your vehicle is defective, the part will be repaired or replaced by Aston Martin. This is your short-term emission control system Defects Warranty

For 7 years or 70,000 mile (113,000 km) (whichever first occurs):

- If an emission-related part (Refer to "", page C.14) with coverage for 7 years or 70,000 mile (113,00 km) is defective, the part will be repaired or replaced by Aston Martin. This is your long-term emission control system Defects Warranty

Owner's Warranty Responsibilities

As the vehicle owner or lessee, you are responsible for the performance of the required maintenance listed in your Owner's Guide. Aston Martin recommends that you retain all receipts covering maintenance on your vehicle, but Aston Martin cannot deny warranty coverage solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

You are responsible for presenting your vehicle to an Aston Martin Dealer as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

Aston Martin may deny warranty coverage if the vehicle or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications.

If you have any questions regarding your warranty rights and responsibilities, or if you want to report what you believe to be violations of the terms of this warranty, you may contact Aston Martin Lagonda North America Inc. (Refer to 'Warranty Communications', page C.2) or the California Air Resources Board at:

State of California Air Resources Board
Mobile Source Operations Division
P.O. Box 8001
El Monte, California 91731-2990

What is Covered?

The parts on the following list are covered by the Defects warranties that apply to every California model vehicle from, and including, 2004.

Some items / equipment in this list may not be installed to this vehicle and therefore may not be applicable.

- Air / Fuel Feedback Control System and Sensor
- Altitude Compensation System
- Catalytic Converter
- Cold Start Enrichment System
- Controls for Deceleration
- Distributor Assembly
- Electronic Ignition System
- Electronic Engine Control Sensors and Switches

- Exhaust Gas Recirculation (EGR) Valve, Spacer, Plate and Associated Parts
- Exhaust Heat Control Valve
- Exhaust Manifold and gasket
- Fuel Filler Cap and Neck Restrictor
- Fuel Injection System
- Fuel Injector Supply Manifold
- Fuel Tank
- Fuel Vapor Storage Canister, Liquid Separator and Associated controls
- Ignition Coil and / or Control Module
- Intake Manifold
- Malfunction Indicator Lamp (MIL) System
- PCV System and Oil Filler Cap
- Engine Control Module

- Pulsed Secondary Air Injection Valve / Secondary Air Injection pump and Associated Parts
- Spark Control Components
- Spark Plugs and Ignition Wires
- Throttle Air Control By-pass Valve
- Throttle Body Assembly
- TWC Air Control Valve
- Volume Air Flow Sensor



ASTON MARTIN

How Do I Get Warranty Service?

To get service under your emissions warranties, take your vehicle to any Aston Martin Dealer as soon as possible after it has failed an EPA-approved test or a California Smog Check inspection. Be sure to show the dealer the document that says your vehicle has failed the test.

The Aston Martin will decide whether the repair is covered by the warranty. If there is a question about coverage, the final decision must be made by Aston Martin within 30 days after you bring in your vehicle for repair (The decision will be made within a shorter time if the law requires you to have the vehicle repaired more quickly in order to avoid additional penalties). However, your Aston Martin Dealer does not have to meet the deadline if you request a delay or agree to a delay, or if the delay is caused by an event for which neither Aston Martin nor your Aston Martin Dealer is responsible.

You will be notified by Aston Martin in writing if your claim for warranty coverage is denied. The notice will explain the basis for denying your claim. If you fail to receive this notice, Aston Martin will perform the warranty repair for you free of charge.

How Do I Handle Emergency Repairs?

If your vehicle needs an emergency repair on emission related parts, and an Aston Martin Dealer is not available (so that you must have covered repairs made by someone other than a Aston Martin Dealer), Aston Martin will reimburse you for the cost of repairs, including diagnosis. Be sure to obtain, (a) the parts that are replaced and, (b) a receipt for the work. Take the parts and receipt to your Aston Martin Dealer, who will determine if the repair is covered under warranty.

You should follow the same procedure if a warranted part is not available at your Aston Martin Dealer within 30 days from the time you first bring your vehicle to your service point for repairs and you must go elsewhere for repairs.

Any repair not completed within 30 days also constitutes an emergency, and any equivalent replacement part may be used in an emergency situation. Aston Martin will reimburse you for the repair expenses, not to exceed: (a) the Aston Martin's suggested retail price for all warranted parts that are replaced and, (b) the labor charges (based on the Aston Martin's recommended time allowance for the warranty repair and the geographically appropriate hourly labor rate).

What Replacement Parts Should I Use?

Aston Martin recommends that you use genuine Aston Martin replacement parts. However, when you are having non-warranty work done on your vehicle, you may choose to use any parts.

If you decide to use non-Aston Martin parts, be sure that they are equivalent to Aston Martin parts in performance, quality and durability. If you use replacement parts that are not equivalent to Aston Martin parts, your vehicle's emissions control systems may not work as effectively, and you may jeopardize your emissions warranty coverage.

Federal Warranty Only

The maintenance, replacement, or repair of emissions control devices or systems, the cost of which is not covered by the warranties, can be performed by any automotive repair establishment or individual using non-Aston Martin parts.

For vehicles within the warranty period, Aston Martin will repair at no cost to the owner, under the Federal Emissions Warranty, covered emission failures caused by properly installed Aston Martin parts or non-Aston Martin parts that have been 'certified' by the U.S. Environmental Protection Agency (EPA). Aston Martin is not responsible for the cost of repairing any emission failures caused by non-Aston Martin parts that have not been 'certified' by the EPA.

Preserve Your Warranty

If you do not maintain your vehicle properly, Aston Martin may have the right to deny you warranty coverage.

To have repairs made under this warranty, you may have to show that you have followed Aston Martin's instructions on properly maintaining and using your vehicle. You will find these instructions in your Owner's Guide. Be sure to save your service receipts and to keep accurate records of all maintenance work.

If you are not satisfied with the handling of a warranty matter, you may contact Aston Martin Lagonda North America Inc. (Refer to 'Warranty Communications', page C.2).

If you need more information about getting service under the Federal Emissions Performance Warranty, or if you want to report what you believe to be violations of the terms of this warranty, you may contact:

Director
Vehicle Program and Compliance Division (6505J)
Environmental Protection Agency
401 M Street, S.W.
Washington, D.C. 20460

State Warranty Enforcement Laws

These state laws - sometimes called 'lemon laws' - allow owners to receive a replacement vehicle or a refund of the purchase price, under certain circumstances. The laws vary from state to state.

To the extent your state allows, Aston Martin requires that you first send us a written notification of any defects or non-conformities that you have experienced with your vehicle. (This will give us the opportunity to make any needed repairs before you pursue the remedies provided by your state's law).

In all other states where not specifically required by state law, Aston Martin requests that you give us the written notice.

Send your written notification to:

Aston Martin Lagonda North America Inc.

533 MacArthur Boulevard

Mahwah

New Jersey

Tel.: 201-818-8351

Fax: 201-818-8328



ASTON MARTIN



ASTON MARTIN

Owner Details**Name****Address****Vehicle Details****Warranty Start Date****VIN No.****Registration No.****Engine no.**

Dealer Stamp

Signature..... Date.....

If the vehicle is sold, the benefits of any unexpired portion of the warranties can be transferred to the new owner.

The new owner should complete a 'tear off' sheet (next page) and send the new details to:

Aston Martin Warranty Department

Aston Martin Lagonda Limited

Banbury Road,

Gaydon,

WARWICK

Warwickshire,

CV35 0DB,

England



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN

Dealer Directory

Contents

Australia.....	D.3	Malaysia.....	D.13
Austria	D.4	Middle East	D.13
Belgium	D.4	Monaco	D.14
Canada	D.5	Northern Ireland	D.14
Channel Islands.....	D.5	Norway.....	D.15
Denmark.....	D.6	New Zealand	D.15
England.....	D.6	Portugal	D.15
France.....	D.9	Spain	D.16
Germany.....	D.9	Switzerland	D.16
Holland.....	D.11	Singapore.....	D.17
Hong Kong.....	D.11	Scotland.....	D.17
Italy	D.12	United States of America.....	D.17
Japan	D.12	Wales.....	D.23

This section lists all Aston Martin Dealers worldwide, where Sales and Service are provided by companies with the facilities, knowledge and factory trained personnel.

The information contained was compiled in August 2005. Whilst every effort is made to ensure accuracy, changes amongst holders of the Aston Martin franchise may occur. Neither Aston Martin nor any listed Importer or Dealer shall in any circumstances be held liable for any inaccuracy, or the consequences thereof.

Dealers listed here all aim to conform to Aston Martin standards of excellence in both Sales and Service. However, all cars sold as Aston Martins are required to meet local legislation requirements.

Should service be required in a country other than that in which this vehicle was originally purchased, every effort will be made to meet the owner's requirements, but the availability of certain parts may be affected by differences in vehicle and component specifications. If the nearest Aston Martin Dealer is unable to help, contact Aston Martin directly:

Aston Martin Lagonda Limited

Banbury Road, Gaydon, WARWICK, CV35 0DB

Telephone: (+44) (0)1926 644300

Facsimile: (+44) (0)1926 644733

Web Site: www.astonmartin.com

E-Mail: enquiries@astonmartin.com

Aston Martin Dealers are independent traders, they are not the Company's Agents, and therefore have no authority to bind the Company or to enter into any financial or other commitments on the Company's behalf.

Only Aston Martin Dealers are authorised to carry out warranty work.

Australia

Adelaide

Solitaire Aston Martin

32 Belair Rd., Hawthorn, Adelaide, SA 5062

Telephone: (+61) 8 8272 8155

Facsimile: (+61) 8 8373 0703

Web Site: www.solitaireauto.com.au

E-Mail:

Perth

Barbagallo Aston Martin

354 Scarborough Beach Rd., Osborne Park, Perth, WA 6017

Telephone: (+61) 8 9231 5999

Facsimile: (+61) 8 9242 3717

Web Site:

E-Mail:

Sydney

Trivett Classic Garage Pty. Ltd.

22-38 Yurong St., East Sydney, NSW 2010

Telephone: (+61) 2 9383 9313

Facsimile: (+61) 2 9383 9001

Web Site: www.trivettclassicgarage.com.au

E-Mail:

Victoria

Silverstone Aston Martin

591 Doncaster Rd., Doncaster, Victoria 3108

Telephone: (+61) 3 9840 8811

Facsimile: (+61) 3 9840 8800

Web Site: www.silverstonecars.com.au

E-Mail:

Queensland

Sunshine Aston Martin

PO Box 794, Southport, Queensland, 4215

Telephone: (+61) 7 5532 1833

Facsimile: (+61) 7 5532 3361

Web Site: www.southportmotors.com.au

E-Mail: sales@southportmotors.com.au



Austria	
Salzburg	
Aston Martin Salzburg	
Wasserfeldstrasse 17a, 5020 Salzburg.	
Telephone:	(+43) 662 887 8820
Facsimile:	(+43) 662 887 882 88
Web Site:	www.astonmartin.at
E-Mail:	salzburg@astonmartin.at

Vienna	
Aston Martin Wien	
Motorcity SCS, Autoallee 7, 2334 Vosendorf b., Wein.	
Telephone:	(+43) 1 698 1200-0
Facsimile:	(+43) 1 698 1200-88
Web Site:	www.astonmartin.at
E-Mail:	wien@astonmartin.at

Belgium	
Antwerp	
Aston Martin Antwerp	
Autolei 322, 2160 Wommelgem	
Telephone:	(+32) (0) 3 354 3856
Facsimile:	(+32) (0) 3 354 5867
Web Site:	www.astonmartin-belgium.com
E-Mail:	info@astonmartin-antwerp.com

Antwerp	
Aston Martin Belgium Sales, Service and Heritage	
Blaasveldstraat 72, 2830 Tisselt	
Telephone:	(+32) (0) 3 886 3910
Facsimile:	(+32) (0) 3 886 8102
Web Site:	www.astonmartin-belgium.com
E-Mail:	info@astonmartin-belgium.com

Brussels	
Aston Martin Brussels	
Borrestraat 23, 1932 St. Stevens-Woluwe	
Telephone:	(+32) (0) 2720 4345
Facsimile:	(+32) (0) 2720 8474
Web Site:	
E-Mail:	info@astonmartin-brussels.com



Canada

British Columbia

MCL Motor Cars (1992) Inc.

1730 Burrard St., Vancouver, British Columbia,
V6J 3G7

Telephone: (+1) 604 738 5577

Facsimile: (+1) 604 738 7677

Web Site: www.mclmotorcars.com

E-Mail: sales@mclmotorcars.com

Ontario

Aston Martin of Ontario

740 Dupont St., Toronto, Ontario, M6G 1Z6

Telephone: (+1) 416 530 1880

Facsimile: (+1) 416 530 4495

Web Site: www.grandtouringautos.com

E-Mail: sales@grandtouringautos.com

Quebec

Decarie Motors

8255 Bougainville St., Montreal, Quebec, H4P 2T3
Telephone: (+1) 514 334 9910

Telephone: (+1) 514 334 9910
Facsimile: (+1) 514 336 0548

Facsimile: (+1) 514 336 0548
Web Site: www.decarie.com

Web Site: www.decarie.com
E-Mail: astonmartin@decarie.com

E-Mail: astonmartin@decarie.com

Channel Islands

Jersey

Jacksons (CI) Limited

La Rue Fondon, St. Peter, Jersey, Channel Islands, JE3 7BF
Telephone: (+44) (0) 1534 497777

Telephone: (+44) (0) 1534 497777
Facsimile: (+44) (0) 1534 497729

Facsimile: (+44) (0) 1534 497729
Web Site: www.jacksonsci.com

Web Site: www.jacksonsci.com
E-Mail: info@jacksons.ie

E-Mail: info@jacksons.je

Denmark	England	
Copenhagen	Berkshire	Cambridgeshire
Aston Martin Denmark Bryggervangen 39, PO 2630, DK-2100, København Ø Telephone: (+45) 369 00 945 Facsimile: (+45) 3927 2250 Web Site: E-Mail: sales@aston-martin.dk	Lancaster Reading Bennet Rd., Reading, Berkshire, RG2 0QX Telephone: (+44) (0)118 9658500 Facsimile: (+44) (0)118 9658501 Web Site: www.lancasterplc.com/reading/astonmartin E-Mail: astonmartin@reading.lancasterplc.com	Lancaster Cambridge 142 High St., Harston, Cambridge, CB2 5QE Telephone: (+44) (0)1223 875600 Facsimile: (+44) (0)1223 875675 Web Site: www.lancasterplc.co.uk/aston_martin E-Mail: astonmartin@cambridge.lancasterplc.com
	Buckinghamshire	Cheshire
	Aston Martin Lagonda Limited Works Service, Tickford St., Newport Pagnell, MK16 9AN Telephone: (+44) (0)1908 619264 Facsimile: (+44) (0)1908 216439 Web Site: www.astonmartin.com E-Mail: service2@astonmartin.com	Stratstone of Wilmslow Water Lane, Wilmslow, SK9 5BQ Telephone: (+44) (0)1625 548802 Facsimile: (+44) (0)1625 526873 Web Site: www.stratstone.co.uk E-Mail: stratstoneofwilmslow.astonmartin@pendragon.uk.com



Derbyshire Stratstone Aston Martin Derby Sir Frank Whittle Rd., Derby, DE21 4LT Telephone: (+44) (0)1332 258787 Facsimile: (+44) (0)1332 258799 Web Site: www.astonsales.com E-Mail: derbyastonmartin@stratstone.com	Essex Grange Aston Martin 2 Brook St., Brentwood, CM14 5LU Telephone: (+44) (0)1277 216161 Facsimile: (+44) (0)1277 220187 Web Site: www.grange.co.uk E-Mail: info@grange.co.uk	Hertfordshire Grange of Welwyn Great North Rd., Stanborough, Welwyn Garden City AL8 7TQ Telephone: (+44) (0)1707 280868 Facsimile: (+44) (0)1707 273150 Web Site: www.summitmotors.co.uk E-Mail: welwyn@grange.co.uk
Devon Grange of Exeter Yeoford Way, Exeter, EX2 8LB Telephone: (+44) (0)1392 678044 Facsimile: (+44) (0)1392 678048 Web Site: www.summitmotors.co.uk/grange E-Mail: exeter@grange.co.uk	Glostershire Broughtons Aston Martin Rutherford Way, Cheltenham, GL51 9SQ Telephone: (+44) (0)1242 232667 Facsimile: (+44) (0)1242 232668 Web Site: www.broughtons.co.uk E-Mail: info@broughtons.co.uk	

Kent	Norfolk	Tyne and Wear
Lancaster Sevenoaks	Stratton Motor Company (Norfolk) Limited	Reg Vardy PLC
114-115 London Rd., Sevenoaks, TN13 2DN	Ipswich Rd., Long Stratton, Norwich, NR15 2XJ	Stoneygate, Houghton le Spring, DH4 4NJ
Telephone: (+44) (0)1732 456777	Telephone: (+44) (0)1508 530491	Telephone: (+44) (0)191 512 3500
Facsimile: (+44) (0)1732 456566	Facsimile: (+44) (0)1508 531670	Facsimile: (+44) (0)191 512 3509
Web Site: www.lancasterplc.com/sevenoaks/astonmartin	Web Site: www.strattonmotorcompany.com	Web Site: www.regvardy.com
E-Mail: astonmartin@sevenoaks.lancasterplc.com	E-Mail: sales@strattonmotorcompany.com	E-Mail:
London	Surrey	West Midlands
Aston Martin Sales of Mayfair	HWM Limited	Stratstone Aston Martin Birmingham
Brook House, Park Lane, London, W1K 7AJ	New Zealand Avenue, Walton on Thames, KT12 1AT	Monaco House, Bristol St., Birmingham, B5 7AU
Telephone: (+44) (0)20 7235 8888	Telephone: (+44) (0)1932 240611	Telephone: (+44) (0)121 666 6550
Facsimile: (+44) (0)20 7629 5376	Facsimile: (+44) (0)1932 225440	Facsimile: (+44) (0)121 666 6263
Web Site: www.astonsales.com	Web Site: www.hwm.co.uk	Web Site: www.astonsales.co.uk
E-Mail: mayfair@astonsales.com	E-Mail:	E-Mail: pjevas.astonmartin@pendragon.uk.com

	France	Germany
West Sussex	Cannes	Aachen
Harwoods Aston Martin	Royal Motors Cannes	L. Hauswirth Exclusive Cars GMBH
Terminus Rd., Chichester, West Sussex, PO19 8TX	1390 Avenue du Canpon, 06110 Le Cannet	Am Europaplatz, 52068 Aachen
Telephone: (+44) (0)1243 836500	Telephone: (+33) 4 93 94 84 84	Telephone: (+49) 2 41 16 60 40
Facsimile: (+44) (0)1243 836525	Facsimile: (+33) 4 92 18 16 01	Facsimile: (+49) 2 41 16 60 441
Web Site: www.harwoods.uk.com/astonmartin	Web Site:	Web Site: www.jaguar-hauswirth.de
E-Mail: info@astonmartin.harwoods.uk.com	E-Mail: commercial@royal-motor.com	E-Mail: fahrzeuge@hauswirth.jaguar.de
West Yorkshire	Paris	Berlin
JCT 600 Leodis Court	Auto Performance	Krauthahn Berlin
102 Gelderd Rd., Leeds, LS12 6BY	23-25 Avenue Franklin D Roosevelt, 75008, Paris	Nestorstrasse 27-29, 10709 Berlin
Telephone: (+44) (0)113 2440600	Telephone: (+33) 1 40 752085	Telephone: (+49) 30 89 60 000
Facsimile: (+44) (0)113 2442100	Facsimile: (+33) 1 40 752086	Facsimile: (+49) 30 8 93 16 67
Web Site: www.jct600.co.uk	Web Site: www.astonmartinparis.com	Web Site: www.krauthahn-berlin.de
E-Mail: mail06@jct600.co.uk	E-Mail: app@astonmartinparis.com	E-Mail: service@krauthahn-berlin.de

Bremen	Dortmund	Dusseldorf
Tamsen GMBH	Aston Martin Dortmund	Moll Sportwagen GMBH
Hauptstrasse 55 (B 51), 28816 Stuhr, Bremen	Hannoversche Strasse 44, 44143 Dortmund	Willstatterstr. 45, 40549 Dusseldorf
Telephone: (+49) 421 80 95 80	Telephone: (+49) 231 91 20 40 80	Telephone: (+49) 211 9446 1701
Facsimile: (+49) 421 80 95 840	Facsimile: (+49) 231 91 20 40 49	Facsimile: (+49) 211 9446 1730
Web Site: www.tamsen.de	Web Site: www.premiumcars-peters.de	Web Site: www.moll.de
E-Mail: info@tamsen.de	E-Mail:	E-Mail: info@moll.de
Cologne	Dresden	Frankfurt
Royal Motors Kempen GMBH	Thomas Exclusive Cars GMBH	Autohaus Kronberg GMBH
Raderthalgurtel 2, 50968 Cologne	Meissner Str. 34, 01445 Radebeul	Frankfurter Strasse, D-61476 Kronberg T/S, Frankfurt
Telephone: (+49) 2 21 93 47 80 - 0	Telephone: (+49) 351 404 6420	Telephone: (+49) 6173 640015
Facsimile: (+49) 2 21 93 47 80 - 45	Facsimile: (+49) 351 404 6410	Facsimile: (+49) 6173 64873
Web Site: www.astonmartin-koeln.de	Web Site: www.astonmartin-dresden.de	Web Site: www.astonmartin-kronberg.de
E-Mail: info@astonmartin.koeln.de	E-Mail: info@astonmartin-dresden.de	E-Mail:

Hamburg	Munich	Stuttgart
Tamsen GMBH Merkurring 2, 22143 Hamburg Telephone: (+49) 40 5700 3000 Facsimile: (+49) 40 5700 3040 Web Site: www.tamsen.de E-Mail: info@tamsen.de	Autohaus Avalon München GMBH Odeonsplatz 2, 80539 München Telephone: (+49) 89 2870 120 Facsimile: (+49) 89 2870 1222 Web Site: www.avalon-muenchen.de E-Mail:	Schwabengarage AG Cannstatter Strasse 46, 70190 Stuttgart Telephone: (+49) 711 2803 2100 Facsimile: (+49) 711 2803 2105 Web Site: www.premium-cars.de E-Mail: info@premium-cars.de
Mannheim	Saarbrücken	
Kroymans Autohaus Mannheim GMBH Saarburger Ring 19-21, 68229 Mannheim Telephone: (+49) 621 48380-0 Facsimile: (+49) 621 48380-99 Web Site: E-Mail:	Aston Martin House Kreuzer GMBH Am Romerkastell 10, 66121 Saarbrücken Telephone: (+49) 681 968 54450 Facsimile: (+49) 681 968 54309 Web Site: www.kreuzer-automobile.de E-Mail:	

Holland**Eindhoven****Cito Motors B.V.**

Huizingalaan 66, 5628 CM Eindhoven

Telephone: (+31) 40 29 01 110

Facsimile: (+31) 40 24 14 956

Web Site:

E-Mail:

Hilversum**Kroymans Aston Martin B.V.**

Soestdijkerstraatweg 66, 1213 XE Hilversum

Telephone: (+31) 35 646 2230

Facsimile: (+31) 35 683 5646

Web Site: www.astonmartin.nl

E-Mail: sales@astonmartin.nl

Hong Kong**Aston Martin (HK) Ltd.**

G/F, 63 Blue Pool Rd., Happy Valley, Hong Kong

Telephone: (+852) 2366 2017

Facsimile: (+852) 2191 9117

Web Site:

E-Mail:

**Italy****Bologna****EmilianAuto Spa.**

Via de Carracci 6, 40131 Bologna

Telephone: (+39) 0 51 638 2111

Facsimile: (+39) 0 51 638 2202

Web Site: www.eagroup.it

E-Mail: info@eagroup.it

Padova**Aston Martin Padova**

Via Nona Strada, 23/L, 35129 Padova

Telephone: (+39) 049 807 9516

Facsimile: (+39) 049 807 9464

Web Site: www.astonmartinpadova.it

E-Mail: info@jcars.it

	Japan	
Rome	Tokyo	Aston Martin Osaka Hakko
Aston Martin Rome	Atlantic Cars Limited	3-13-7 Sakurai, Mino City, Osaka 562-0043
Via G Antonelli 2, 00197 Rome	2-3-3 Azabudai, Minato-ku, Tokyo 106 – 0041	Telephone: (+81) 072-721-0808
Telephone: (+39) 06808 2487	Telephone: (+81) (0)3 3583 8611	Facsimile: (+81) 072-721-6222
Facsimile: (+39) 06808 2415	Facsimile: (+81) (0)3 3583 8613	Web Site: www.astonmartin-osaka.co.jp
Web Site:	Web Site: www.astonmartin.co.jp	E-Mail:
E-Mail:	E-Mail: atlantic_cars@astonmartin.co.jp	
	Aston Martin Akasaka	
	Shintoyo Akasaka Building, 4-9-25 Akasaka, Minato-ku 107-0052, Tokyo	
	Telephone: (+81) 3 5411 2332	
	Facsimile: (+81) 3 3479 0774	
	Web Site: www.astonmartin-akasaka.com	
	E-Mail: info@astonmartin-akasaka.com	



Malaysia

Top Marques SDN BHD

No. 2 Block B Lot 4900, Jalan SS 13/7,
Subang Jaya Industrial Estate, 47500, Petaling Jaya

Telephone: (+603) 737 1280

Facsimile: (+603) 734 4782

Web Site:

E-Mail:



Middle East

Middle East Aston Martin FZE

Floor 23, Emirates Towers, Dubai

Telephone: (+971) 4 330 0999

Facsimile: (+971) 4 330 0777

Web Site: www.mideastaston.com

E-Mail: management@mideastaston.com

Dubai

Al Habtoor Motors Co. (LLC)

Sharjah Rd., Port Saeed Area, Dubai

Telephone: (+971) 4 269 1110

Facsimile: (+971) 4 269 2545

Web Site: www.habtoormotors.com

E-Mail:



Beirut

Mana Automotive S.A.L.

Aston Martin & Land Rover Building, Chouran, Unesco,
Verdun, PO Box 11-5800, Beirut

Telephone: (+961) 1 800001

Facsimile: (+961) 1 785205

Web Site:

E-Mail:

Monaco	Northern Ireland	Norway
Monte Carlo British Motors SAM 15 Boulevard Princesse Charlotte, 98000 Monte Carlo Telephone: (+377) 97 978 978 Facsimile: (+377) 97 978 989 Web Site: E-Mail: aston-martin@british-motor.com	Antrim Charles Hurst Limited 62 Boucher Rd., Belfast, BT12 6LR Telephone: (+44) (0) 28 9038 1721 Facsimile: (+44) (0) 28 9066 2355 Web Site: www.charles-hurst.com E-Mail:	Oslo As Insignia Sofienberggaten 35, N-0558 Oslo Telephone: (+47) 2323 3377 Facsimile: (+47) 2323 3301 Web Site: www.insignia.no E-Mail: salg@insignia.no



New Zealand	Portugal	Spain
Auckland	Porto	Barcelona
Independant Presitige Limited	Jaguar Automoveis LDA	Aston Martin Barcelona
150 Great North Rd., PO Box 68 537, Grey Lynn, Auckland	Avenida de França, 256-366 Edificio Capitolio, 4050-272, Porto	Roger de Lluria 115, 08037 Barcelona
Telephone: (+64) (0) 9 360 3202	Telephone: (+351) 22 834 77 00 / 22 830 18 44	Telephone:
Facsimile: (+64) (0) 9 361 6403	Facsimile: (+351) 22 834 77 09	Facsimile:
Web Site: www.astonmartin.co.nz	Web Site:	Web Site:
E-Mail: sales@iprestige.co.nz	E-Mail:	E-Mail:
	Lisbon	Madrid
	Jaguar Automoveis Lisboa S.A.	C De Salamanca SA
	Rua Antonio Enes 21 A, 1050-023 Lisboa	C/Zurbano, 93-95, 28003, Madrid
	Telephone: (+351) 21 31 92 382	Telephone: (+34) 91 554 8293
	Facsimile: (+351) 21 31 92 389	Facsimile: (+34) 91 553 5206
	Web Site:	Web Site: www.cdesalamanca.com
	E-Mail:	E-Mail: serradilla@cdesalamanca.com



	South Africa	Switzerland
Marbella	Johannesburg	Geneva
C De Salamanca SA	Aston Martin Sandton	Garage P Keller SA
Carretera de Cádiz Km 171, 29670 San Pedro de Alcántara, Marbella	Sandton Isle, Corner Rivonia Rd.	2 Rue du Grand Pré 2, 1202 Genève, Suisse
Telephone: (+34) 952 78 52 50	Telephone:	Telephone: (+41) 22 919 0500
Facsimile: (+34) 952 78 03 66	Facsimile:	Facsimile: (+41) 22 919 0509
Web Site: www.cdesalamanca.com	Web Site:	Web Site: www.garage-keller.ch
E-Mail:	E-Mail:	E-Mail: geneve@garage-keller.ch
		Safenwil
		Emil Frey AG
		Autocenter Safenwil, Industrie Nord, 5745 Safenwil
		Telephone: (+41) 62 788 8888
		Facsimile: (+41) 62 788 8260
		Web Site: www.emilfrey.ch
		E-Mail: autocenter@emilfrey.ch



Lugano**Garage Tarcisio Pasta SA**

Via Monteceneri 1, 6593 Cadenazzo

Telephone: (+41) (0) 91 850 2020

Facsimile: (+41) (0) 91 850 2021

Web Site: www.tpastach.chE-Mail: astonmartin@tpastach.ch**Zurich****Emil Frey A.G.**

Badenerstrasse 6001, 8048 Zurich

Telephone: (+41) (0) 1 495 2311

Facsimile: (+41) (0) 1 495 2305

Web Site: www.emilfrey.ch

E-Mail:

Singapore**Aston Martin Lagonda (SEA) PTE Ltd.**

Number 1 Tuas Basin Link, Singapore 638755

Telephone: (+65) 6862 5868

Facsimile: (+65) 6862 5388

Web Site: www.astonmartin.com.sgE-Mail: topmarques@pacific.net.sg**Scotland****Lothian****Murray Motor Company**

6 Bankhead Drive, Sighthill, Edinburgh, EH11 4DJ

Telephone: (+44) (0) 131 442 2800

Facsimile: (+44) (0) 131 458 3296

Web Site: www.jmgroup.co.ukE-Mail: murraymotorco@jmgroup.co.uk

United States of America

Aston Martin Lagonda of North America Inc.

533 MacArthur Boulevard, Mahwah, NJ 07430

Telephone: (+1) 201 818 8352

Facsimile: (+1) 201 818 8328

Web Site: www.astonmartin.com

E-Mail:

Arizona

Aston Martin Scottsdale

6825 East McDowell Rd., Scottsdale, AZ 85257

Telephone: (+1) 480 421 7240

Facsimile: (+1) 480 421 3805

Web Site: www.sunauto.com

E-Mail:

California

Aston Martin of Beverly Hills

8833 West Olympic Boulevard, Beverly Hills, CA 90211

Telephone: (+1) 310 659 4050

Facsimile: (+1) 310 652 9656

Web Site: www.rollsroycebeverlyhills.com

E-Mail:

Aston Martin Marin

195 Casa Buena Drive, Corte Madera, CA 94925

Telephone: (+1) 415 496 2100

Facsimile: (+1) 415 496 2171

Web Site:

E-Mail:

Aston Martin Silicon Valley

66 East Main St., Los Gatos, CA 95030

Telephone: (+1) 408 354 4000

Facsimile: (+1) 408 354 6285

Web Site: www.siliconvalleyautogroup.com

E-Mail:

Bauer Aston Martin

1455 South Auto Mall Drive, Santa Ana, CA 92705

Telephone: (+1) 714 953 4800

Facsimile: (+1) 714 953 4891

Web Site: www.bauerastonmartin.com

E-Mail:

Cole European

2103 North Main St., Walnut Creek, CA 94596

Telephone: (+1) 925 935 2653

Facsimile: (+1) 925 935 0743

Web Site: www.coleeuropean.com

E-Mail:

Cush Aston Martin of San Diego

5202 Kearney Mesa Rd., San Diego, CA 92111

Telephone: (+1) 858 541 0200

Facsimile: (+1) 858 541 7696

Web Site: www.cushauto.com

E-Mail:

Desert European

71-387 Highway 111, Rancho Mirage, CA 92270

Telephone: (+1) 760 773 5000

Facsimile: (+1) 760 773 4406

Web Site: www.deserteuropean.com

E-Mail:

Galpin Aston Martin

15500 Roscoe Boulevard, Van Nuys, California, 91406

Telephone: (+1) 818 894 3800

Facsimile: (+1) 818 922 3668

Web Site: www.galpinastonmartin.com

E-Mail:

Colorado

Sill-Terhar Aston Martin

PO Box 344, Broomfield, Denver, CO 80038

Telephone: (+1) 303 469 1801

Facsimile: (+1) 720 284 0792

Web Site: www.peopleastonmartin.com

E-Mail:

Connecticut

Miller Motor Cars Inc.

275 West Putnam Avenue, Greenwich, CT 06830

Telephone: (+1) 203 629 4726

Facsimile: (+1) 203 629 3418

Web Site: www.millermotorcars.com

E-Mail:

Florida	Aston Martin Naples	Georgia
Aston Martin of Tampa Bay		Aston Martin of Atlanta
320 East Fletcher Avenue, Tampa, Florida 33612	850 Tamiami Trail North, Naples, Florida 34102	11875 Alpharetta Highway, Roswell, GA 30076
Telephone: (+1) 813 371 8200	Telephone: (+1) 239 263 6070	Telephone: (+1) 678 802 5007
Facsimile: (+1) 813 371 8199	Facsimile: (+1) 239 263 8058	Facsimile: (+1) 678 802 5019
Web Site: www.astonmartinoftampa.com	Web Site: www.astonmartinnaples.com	Web Site: www.astonmartinus.com
E-Mail:	E-Mail:	E-Mail: 007@astonmartinus.com
	The Collection	Illinois
Aston Martin Palm Beach	200 Bird Rd., Coral Gables, FL 33146	Lake Forest Sports Cars Limited
915 South Dixie Highway, West Palm Beach, FL 33401	Telephone: (+1) 305 444 5555	990 North Shore Drive, Lake Bluff, IL 60045
Telephone: (+1) 561 659 6206	Facsimile: (+1) 305 446 4046	Telephone: (+1) 847 295 6560
Facsimile: (+1) 561 832 7176	Web Site: www.thecollection.com	Facsimile: (+1) 847 295 8849
Web Site: www.palmbeachmotorcars.com	E-Mail:	Web Site: www.ifsc.com
E-Mail:		E-Mail: sales@ifsc.com

Massachusetts	Missouri	Nevada
Aston Martin of New England	Moore Aston Martin	Gaudin Aston Martin of Las Vegas
85 Linden St., Waltham, MA 02452	14116 Manchester Rd., St. Louis, MO 63011	7200 West Sahara Avenue, Las Vegas, Nevada 89117
Telephone: (+1) 781 547 5959	Telephone: (+1) 800 524 7278	Telephone: (+1) 702 284 7000
Facsimile: (+1) 781 547 5957	Facsimile: (+1) 636 779 2024	Facsimile: (+1) 702 221 4422
Web Site: www.astonmartin-lotus.com	Web Site: www.moorejaguarastonmartin.com	Web Site: www.jplv.net
E-Mail: lotusmotor@aol.com	E-Mail:	E-Mail:
Michigan	New York	New Jersey
Aston Martin of Troy	Millar Motor Cars	F.C. Kerbeck Aston Martin
1815 Maplelawn, Troy, MI 48084	Aston Martin Long Island Sales, 1060 North Blvd., Roslyn, NY11576	100 Route 73 North, Palmyra, NJ 08065
Telephone: (+1) 248 643 6900	Telephone: (+1) 516 478 4326	Telephone: (+1) 856 829 8200
Facsimile: (+1) 248 643 9261	Facsimile: (+1) 516 478 4327	Facsimile: (+1) 856 829 7009
Web Site: www.astonmartinoftroy.com	Web Site:	Web Site: www.exotics@fckerbeck.net
E-Mail: info@astonmartinoftroy.com	E-Mail:	E-Mail: exotics@fckerbeck.net

Ray Catena Aston Martin

910 US Route 1, Edison, NJ 08817

Telephone: (+1) 732 205 9000

Facsimile: (+1) 732 205 9101

Web Site: www.raycatena.com

E-Mail:

North Carolina**Foreign Cars Aston Martin**

5603 Roanne Way, Greensboro, NC 27409

Telephone: (+1) 336 294 0200

Facsimile: (+1) 336 294 9109

Web Site:

E-Mail:

Ohio**Midwestern Auto Group**

6335 Perimeter Loop Rd., Dublin, OH 43017

Telephone: (+1) 614 889 2571

Facsimile: (+1) 614 793 7971

Web Site: www.magcars.com

E-Mail:

Aston Martin of Cleveland

99 Broadway, Bedford, OH 44146

Telephone: (+1) 440 439 0100

Facsimile: (+1) 440 232 0500

Web Site:

E-Mail:

Pennsylvania**Bobby Rahal Aston Martin**

15035 Perry Highway, Wexford, PA 15090

Telephone: (+1) 724 940 3530

Facsimile: (+1) 724 940 3430

Web Site: www.bobbyrahal.com

E-Mail:

Texas**Aston Martin Dallas**

5333 Lemmon Ave., Dallas, TX 75209

Telephone: (+1) 214 522 1007

Facsimile: (+1) 214 353 3550

Web Site: www.astonmartindallas.com

E-Mail:

Star Motor Cars

7000 Katy Rd., Houston, TX 77024
 Telephone: (+1) 713 868 6800
 Facsimile: (+1) 713 868 1365
 Web Site: www.starmotorcars.com
 E-Mail: starhoutx@aol.com

Virginia

Aston Martin Tysons

8545 Leesbueg Pike, Vienna, VA 22182
 Telephone: (+1) 703 442 8200
 Facsimile: (+1) 703 448 0232
 Web Site: www.hbloftysons.com
 E-Mail:

Washington

Aston Martin Seattle

311 Baker Boulevard, Seattle, Washington 98188
 Telephone: (+1) 206 838 4646
 Facsimile: (+1) 206 433 0216
 Web Site: www.astonmartinseattle.com
 E-Mail:



Wales

South Glamorgan

Stratstone Aston Martin Cardiff

Pentwyn House, Avenue Park, Pentwyn, Cardiff, CF23 8HE
 Telephone: (+44) (0) 2920 546700
 Facsimile: (+44) (0) 2920 695718
 Web Site:
 E-Mail: cardiff@aston-martin-sales.co.uk



Alphabetical Index

A

Accessory Power Socket	3.22
Acknowledge messages	4.4
Air Conditioning	
Automatic Operation	6.6
Control Switches	6.3
Dehumidifying	6.10
Manual Operation	6.7
Operating Tips	6.2
Airbags	3.16
Passenger Airbag Deactivation	3.11, 3.18, 4.15
Alarm	
Deactivate / Activate	2.4
Movement Sensor (Option)	2.13
Reduced Guard	2.13
Tilt Sensor (Option)	2.13
AM Menu	7.18

Anti Corrosion Inspection	A.13
Anti-Lock Braking System (ABS)	5.4
Approach Lighting	2.11
Ashtray and Cigar Lighter (Option)	3.22
Aston Martin Assistance	B.1
Aston Martin Warranties	C.1
Audio	7.1
AM Menu	7.18
Battery Protection Mode	7.3
CD Player Menu	7.21
Controls	7.4
Dolby Surround Pro-Logic II	7.3
FM Menu	7.18
Multi-Disc CD Player	7.19
Radio Data System (RDS)	7.11
Radio Functions	7.9
Sound Settings	7.7
Automatic Locking Retractors	3.14

B	
Battery	
Charge	11.26
Connect Switch	11.29
Disconnect Switch	11.32
Disposal	11.26
Maintenance	11.27
Battery Conditioner (Option)	11.27
Battery Protection Mode	7.3, 8.4, 11.30
Bluetooth	
Connecting a Phone	9.5
Contact List	9.14
Getting Help	9.5
LED Indicator Functions	9.19
Making Calls	9.8
Receiving Calls	9.10
Removing a Phone	9.7

Brakes	
Anti-Lock Braking System (ABS)	5.4
Footbrake	5.3
Bulb Changing	11.39
Bulb Kit	11.39
C	
Car Phone (Option)	
Controls	8.2
Emergency Calls	8.4
Making Calls	8.7
Operation	8.6
Receiving Calls	8.7
SIM Card	8.5
Catalytic Converters	5.10
CD Player Menu	7.21

Child Seats	3.11
Automatic Locking Retractors	3.14
LATCH Installation	3.12
Passenger Airbag Deactivation	3.11
Tether Anchor	3.13
Warning Labels	3.10
Coat Hooks	3.24
Condensation, Headlamp Units	11.39
Cruise Control (Option)	4.18

D

Dangerous Substances	11.5
Data Recording	1.5
Day Time Running Lights	4.15
Deadlocking	2.10
Dealer Directory	D.1
Defrosting / Demisting. Automatic,	6.6
Defrosting / Demisting. Manual,	6.9
Dolby Surround Pro-Logic II	7.3
Door Mirrors	3.5
Drive-Away Locking	2.11
Driving	
Manual Transmission	5.2
Safety	5.2
Techniques	5.11

E

Electric Windows	3.23
Emission Warranty	11.3
Engine Start Switch	4.11

F

Fire Extinguisher (Option)	11.6
First Aid Kit (Option)	11.6
Fog Light Switch	4.12
Footbrake	5.3
Fuel	
Catalytic Converters	5.10
Filler Flap Emergency Release	4.14
Fuel Filler Cap	5.9
Fuel Flap Switch	4.14
Fuel Gauge	4.3
Fuses	11.34

G

Gear Shift Display	4.4
Glovebox	4.11

H

Hazard Warning Lights	4.12
Headlamp Condensation	11.39
Headlight Levelling	4.15
Heated Rear Window Switch	4.13
Homesafe	2.11
Hood - Opening / Closing	11.7
Horn	4.16

I

Ignition Lock	4.16
Infotainment Centre	4.11
Interior Storage	3.20

L	
LATCH Installation	3.12
Levels	
Brake Fluid	11.9
Engine Coolant	11.10
Engine Oil	11.11
Power Steering Fluid	11.11
Washer Fluid	11.9
Licence Plate Lights	11.43
Lights On Warning	4.15
Locking the Vehicle	2.6
Low Outside Temperature Warning	4.8

M	
Maintenance	11.6
Bulb Changing	11.39
Bulb Kit	11.39
Fluid Levels	11.8
Tool Kit	11.6
Vehicle Jacking	11.3
Master Lamp Switch	4.14
Message Display (Left)	4.3
Message Display (Right)	4.4
Mirrors	
Power Fold Door Mirrors (Option)	3.5
Rear View	3.4
Vanity	3.5
Multi-Disc CD Player	7.19

P	
Paint Work	11.46
Panic Alarm	2.12
Parking Brake	5.5
Passenger Airbag Deactivation	3.11
Passive Anti-Theft System	2.15
Positive Torque Control (PTC)	5.8
Power Fold Door Mirrors (Option)	3.5

R

Radio Data System (RDS)	7.11
Radio Functions	7.9
Reading Lamps	3.24
Rear Parking Assist	5.10
Reduced Guard	2.13
Remote Transmitter	2.2
Battery Replacement	2.14
Replacement of Airbag Units Record	A.16
Replacement of Seat Belt Pre-tensioners Record	A.16

S

Safety Defects - Reporting	1.6
Satellite Navigation	
Demo	10.12
Getting Starting	10.4
System Options	10.9
Seat Belts	3.6
Care and Maintenance	11.48
Child Restraints	3.9
Seat Comfort	3.2
Service Interval display	4.4
Service Periods	A.4
Service Record	A.9
Service Schedules	A.4
Servicing Precautions	11.4
Side Marker Lights	11.43
SIM Card	8.5

Specifications

Brakes	12.5
Engine	12.2
Infotainment Centre	12.10
Interior Features	12.10
Performance	12.2
Recommended Fluids	12.11
Steering	12.4
Suspension	12.4
Weights	12.8
Wheel Nut Torque	12.5
Wheels and Tires	12.5
Starting the Engine	5.12
Steering Wheel Adjustment	3.4

Switches and Controls	
Centre Stack	4.11
Information / Warning Lights	4.5
Instrument Cluster	4.3
Instruments	4.3
Stalk Controls	4.10

T

Tachometer	4.4
Tailgate	
Emergency Release	2.10
Open / Close	2.9
Tether Anchor	3.13
Tire Pressure Sensing	4.21
Tire Sealant System	11.16
Towing	11.24
Traction Control	5.7
Transmission	5.2
Trip Computer	4.17
Trunk Cover	3.21

U

Umbrella (Option)	3.25
Uniform Tire Quality Grades	11.22
Unlocking the Vehicle	2.4
Unlocking using the Ignition Key	2.4
Unnecessary Battery Drain	4.16

V

Vanity Mirror	3.5
Vehicle Jacking	11.3
Vehicle Key	2.2
Vehicle Provenance	1.6
Vehicle Storage	11.49
Vehicle Tool Kit	11.6

W

Wheel Nut Torque	12.5
Window Reset	11.45
Windshield Blade Replacement	11.12
Winter Wheels	12.5
Wipers	4.10
Wiper Control	4.10

CE Remote Transmitter



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN



ASTON MARTIN